

Vendor: S000350



ASSEMBLY INSTRUCTIONS URBAN TV UNIT RUSTIC

IMPORTANT : READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE OR USE YOUR URBAN TV UNIT RUSTIC.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ASSEMBLY:


Assembly should be carried out with this item laying flat, not standing upright. Assemble on a soft, clean surface to prevent damages. To erase the numbers printed on the pieces, use the rubber inside the accessories pack.


HEALTH & SAFETY:

DO NOT use this product if any parts are missing, damaged or worn. DO NOT use this product unless all fixings are secured. Always use on a level, even surface.

CARE & MAINTENANCE:


Periodically check all screws & fixings to ensure they are secure. DO NOT push the product as this will cause damage. Always lift the product with two people to reposition. Keep any sharp objects away from the product.

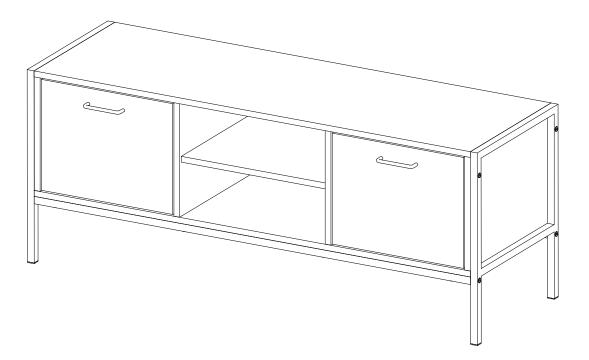


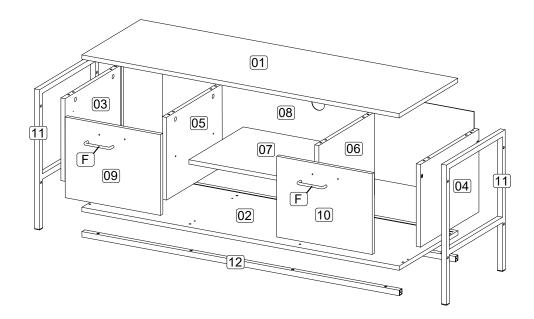



Parts List				Hardware List			
Part	Descripion	Qty	Part	Description		Qty	
01	Top panel	1	A1	Cam lock	XX	8	
02	Bottom panel	1	A2	Minifix screw		8	
03	Side panel (Left)	1	A3	Plastic cap	Q	8	
04	Side panel (Right)	1	В	M8 x 30mm Wood Dowel		16	
05	Center Panel (Left)	1	С	M6 x 50mm CSK Cap Wood screw			

Step 1: Prepare these parts for assembly using hardware parts A1, A2, B, E, F, G, J and M. **DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

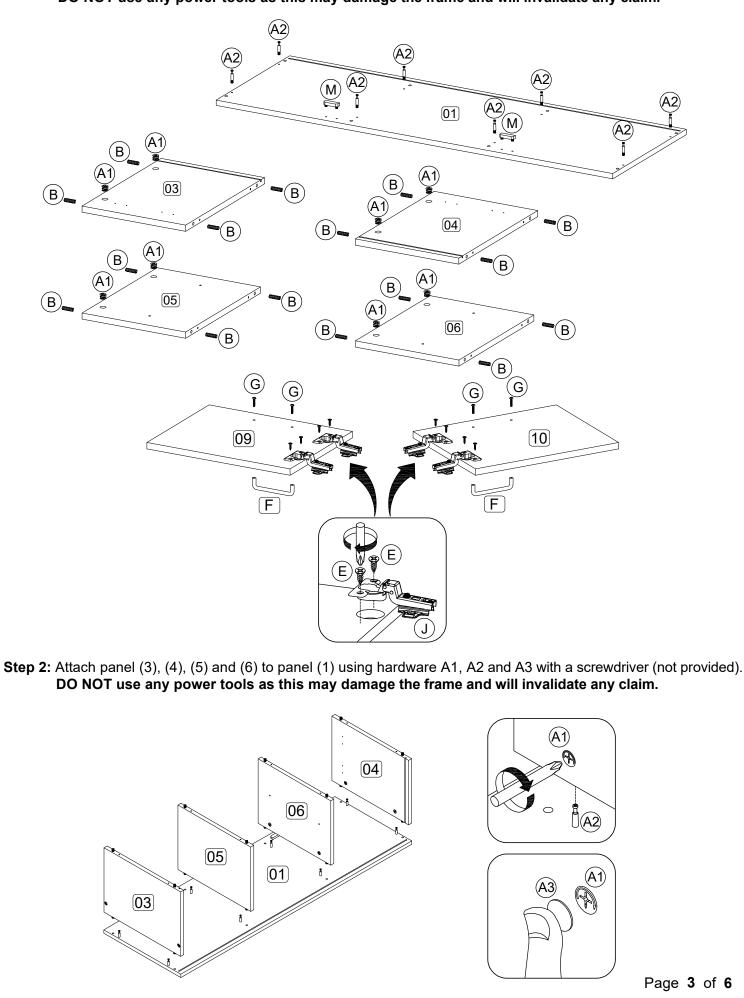

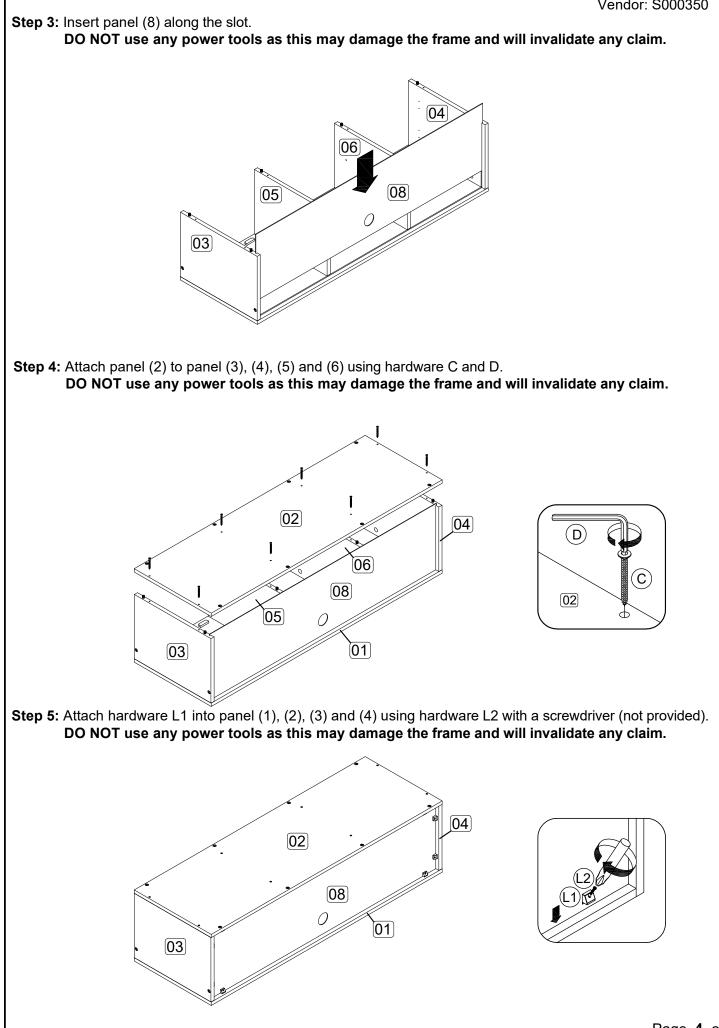

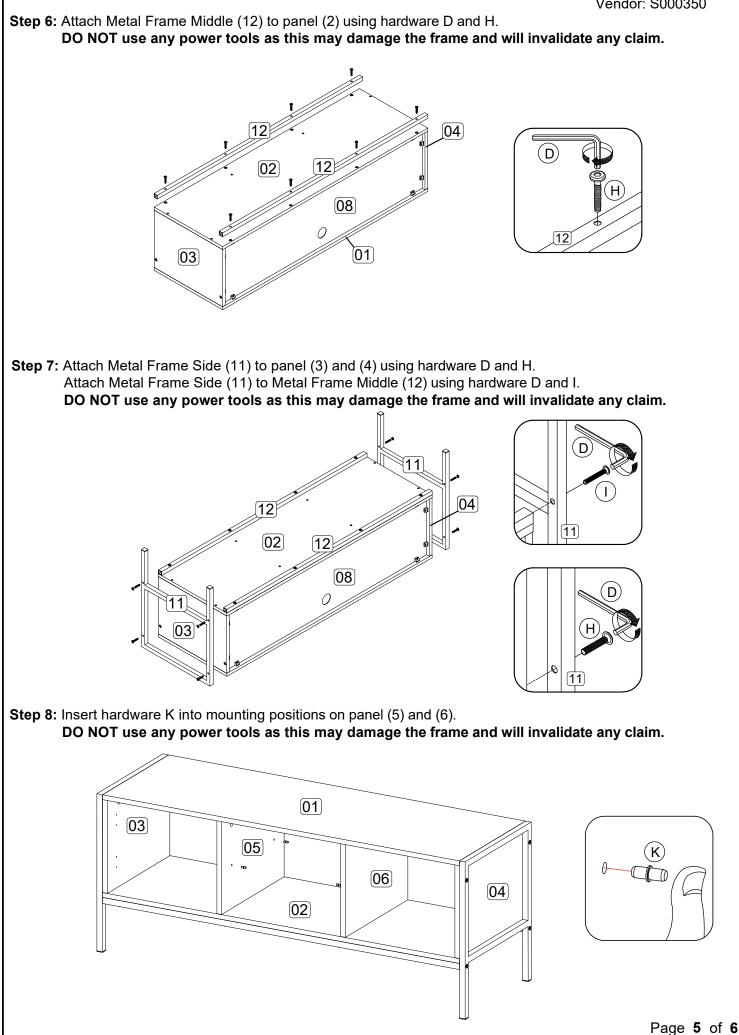

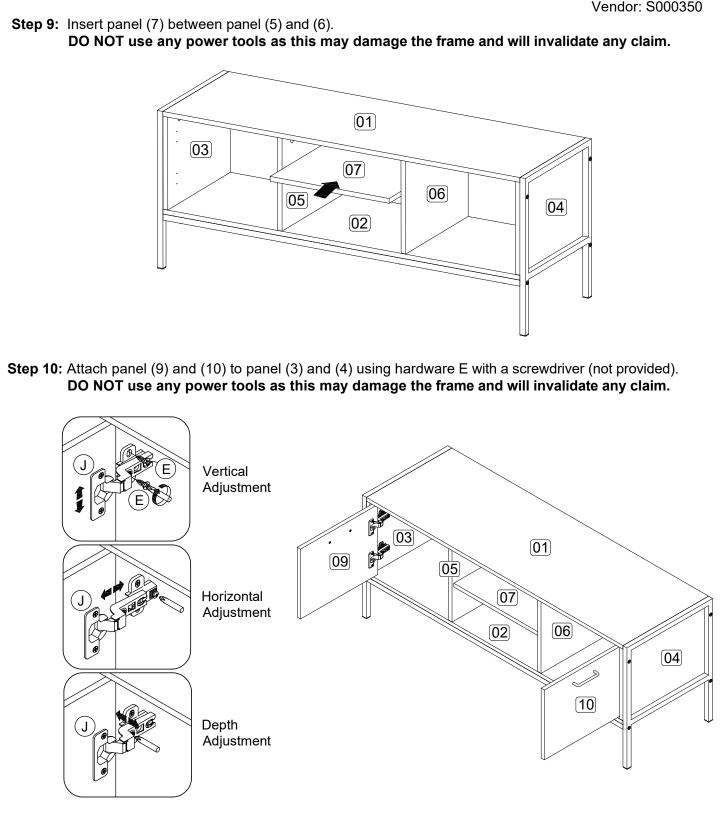

Additional Information:

- For complete product information, images and dimension diagrams please visit the website www.birlea.com
- If you have any issues with your item please contact the retailer directly you purchased it from who will be able to resolve any issues with Birlea.
- Why don't you send us photos of your assembled furniture to info@birlea.com to be shared in our #birleahome feature on instagram.

