
WHITE/NATURAL WAX PANAMA 1 DRAWER BOOKCASE ASSEMBLY INSTRUCTIONS

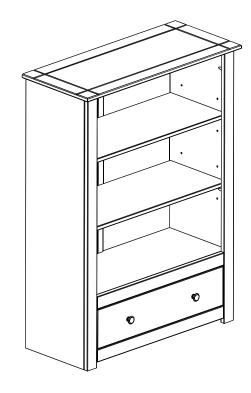






IMPORTANT FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

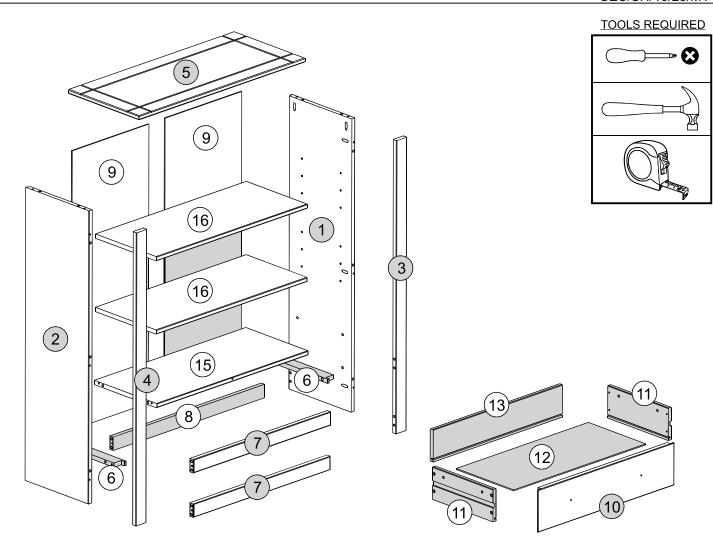


PARTS LIST

Please Note:

The below parts have all been stamped with the part number to help identify them during assembly.

Part Number	Part Code	Part Description	Quantity	<u>Carton</u>
1	S300-306-051-MY1-01	Right Side Panel	1	1/1
2	S300-306-051-MY1-02	Left Side Panel	1	1/1
3	S300-306-051-MY1-03	Right Front Upright	1	1/1
4	S300-306-051-MY1-04	Left Front Upright	1	1/1
5	S300-306-051-MY1-05	Top Panel	1	1/1
6	S300-306-051-MY1-06	Drawer Runner	2	1/1
7	S300-306-051-MY1-07	Front Crossbeam	2	1/1
8	S300-306-051-MY1-08	Back Crossbeam	1	1/1
9	S300-306-051-MY1-09	Back Panel	2	1/1
10	S300-306-051-MY1-10	Drawer Front	1	1/1
11	S300-306-051-MY1-11	Drawer Side	2	1/1
12	S300-306-051-MY1-12	Drawer Bottom	1	1/1
13	S300-306-051-MY1-13	Drawer Back	1	1/1
15	S300-306-051-MY1-15	Base	1	1/1
16	S300-306-051-MY1-16	Shelf	2	1/1


FITTINGS LIST

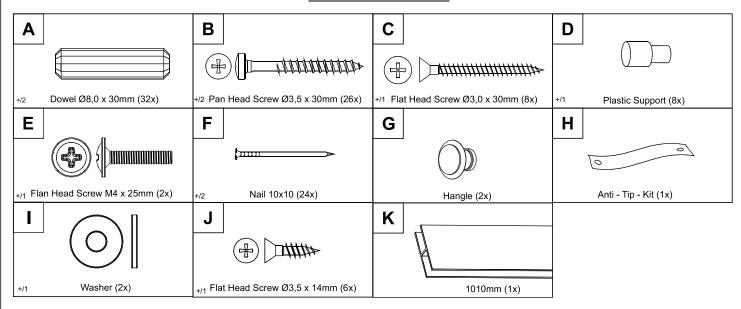





1 - RIGHT SIDE PANEL	x1
o LEET OIDE DANIEL	
2 - LEET SIDE PANEL	x1

 HARDWARE REQUIRED



TOOLS REQUIRED

 

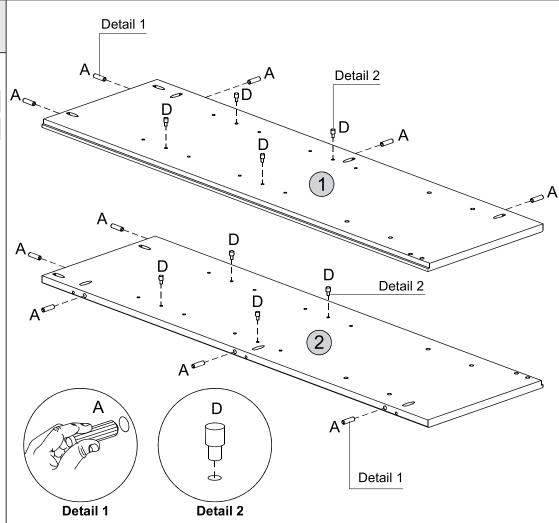



STEP 2


PARTS REQUIRED

1 - RIGHT SIDE PANEL	x1
2 - LEFT SIDE PANEL	x1
3 - RIGHT FRONT UPRIGHT	x1
4 - LEFT FRONT UPRIGHT	x1

  HARDWARE REQUIRED





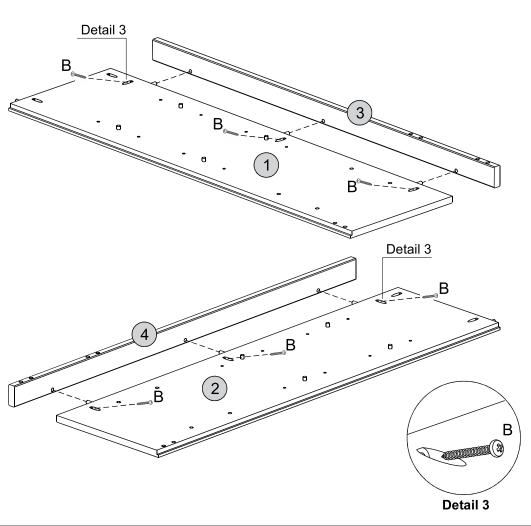

STEP 3

PARTS REQUIRED


6 - DRAWER RUNNER x

HARDWARE REQUIRED



TOOLS REQUIRED



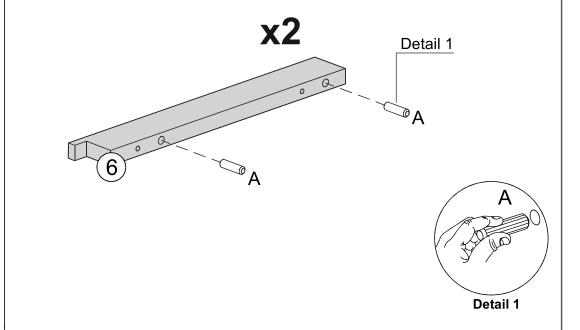



STEP 4


PARTS REQUIRED

6 - DRAWER RUNNER x2

  HARDWARE REQUIRED





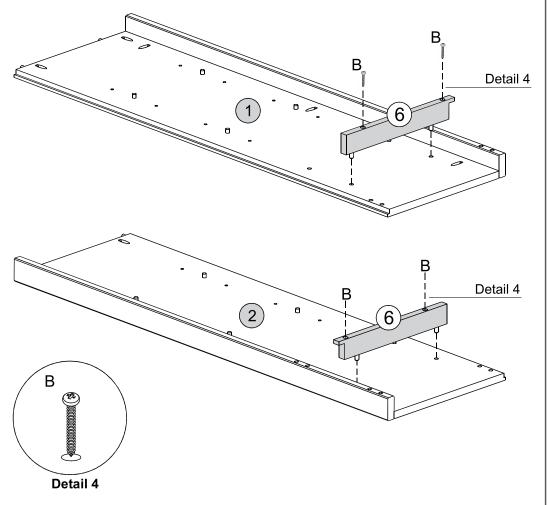







7 - FRONT CROSSBEAM	x2
8 - BACK CROSSBEAM	x1
15 - BASE	v1

HARDWARE REQUIRED



 TOOLS REQUIRED




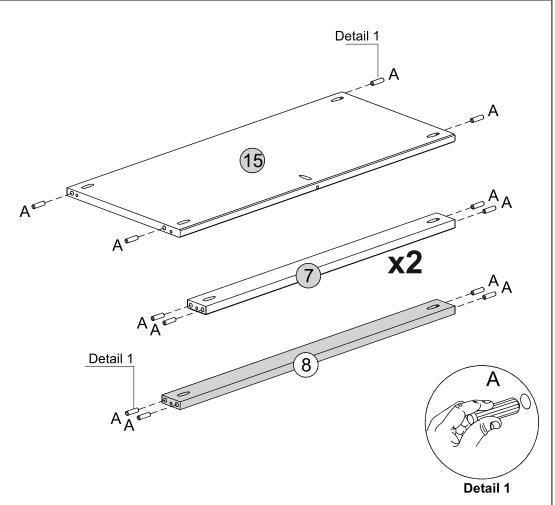

STEP 6

PARTS REQUIRED

 
7 - FRONT CROSSBEAM x2




HARDWARE REQUIRED



 
TOOLS REQUIRED



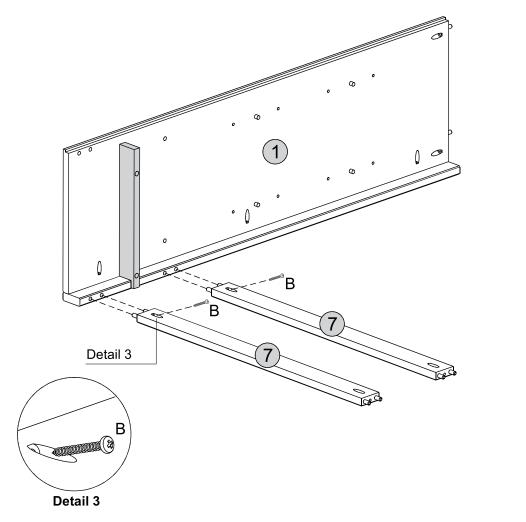



15 - BASE x1

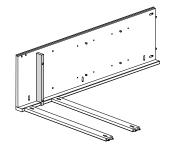


HARDWARE REQUIRED



TOOLS REQUIRED




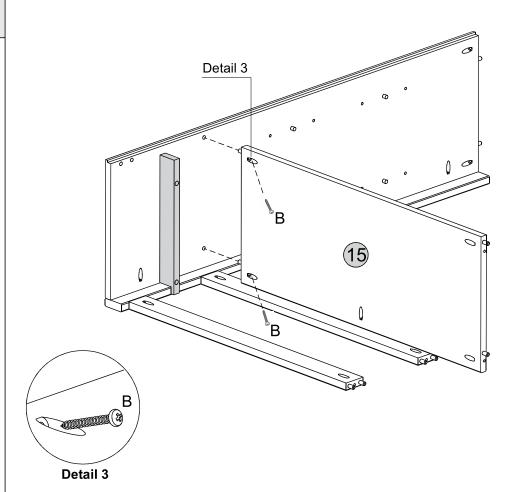

STEP 8

PARTS REQUIRED


8 - BACK CROSSBEAM

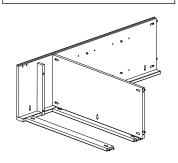



HARDWARE REQUIRED







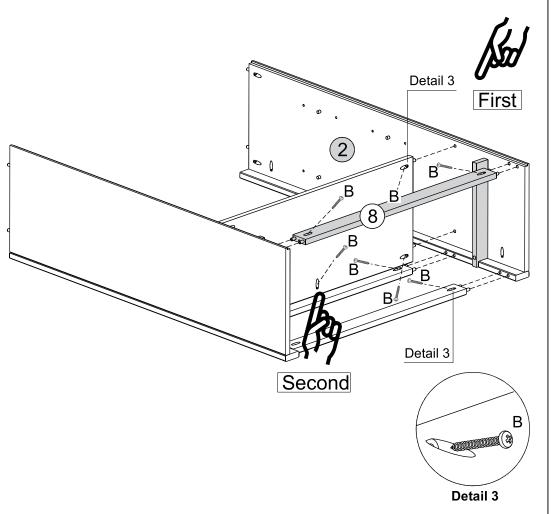

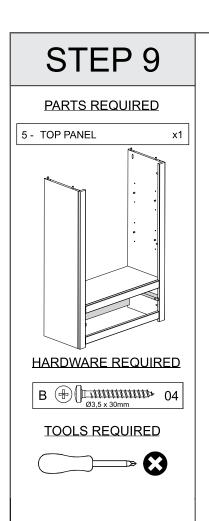

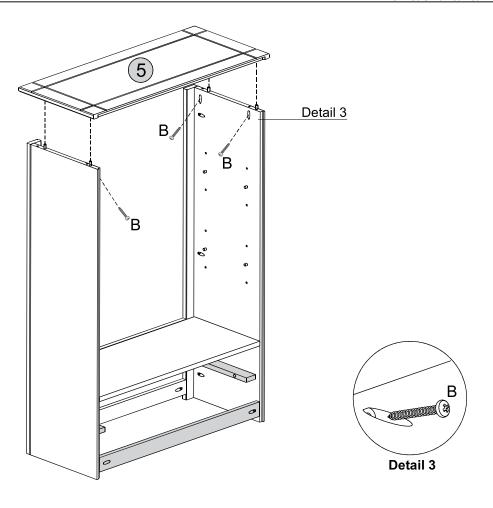

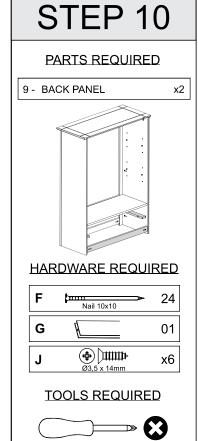

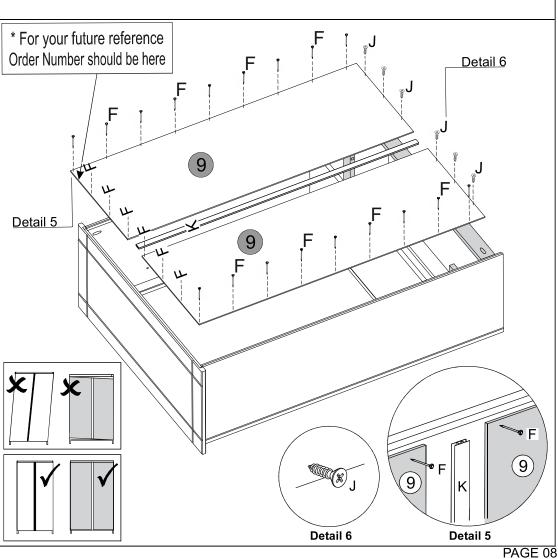





10 - DRAWER FRONT 11 - DRAWER SIDE x2

HARDWARE REQUIRED



 TOOLS REQUIRED




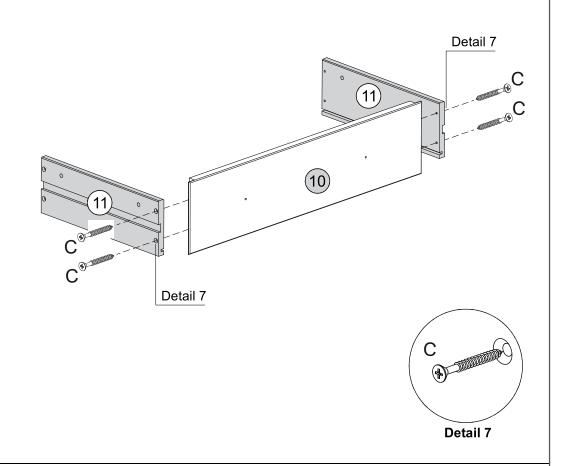

STEP 12

PARTS REQUIRED

 
12 - DRAWER BOTTOM x1 13 - DRAWER BACK x1




HARDWARE REQUIRED





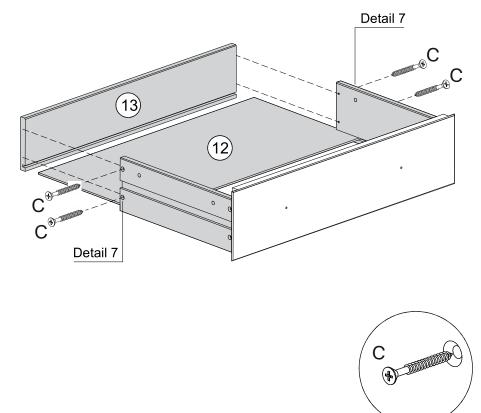


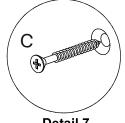

Detail 7

STEP 13

 
PARTS REQUIRED




HARDWARE REQUIRED



 TOOLS REQUIRED



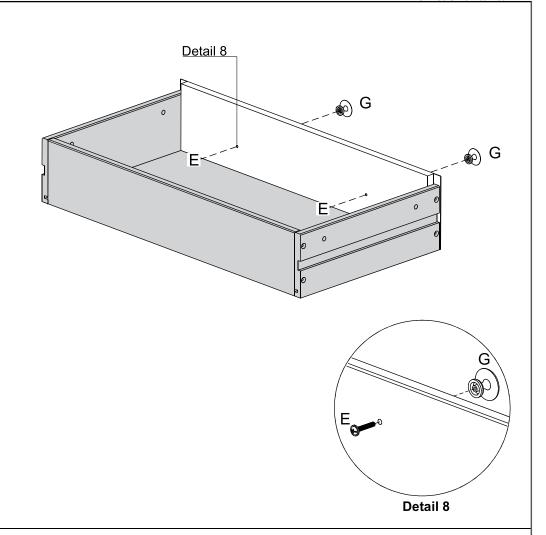


STEP 14

PARTS REQUIRED



TOOLS REQUIRED

02

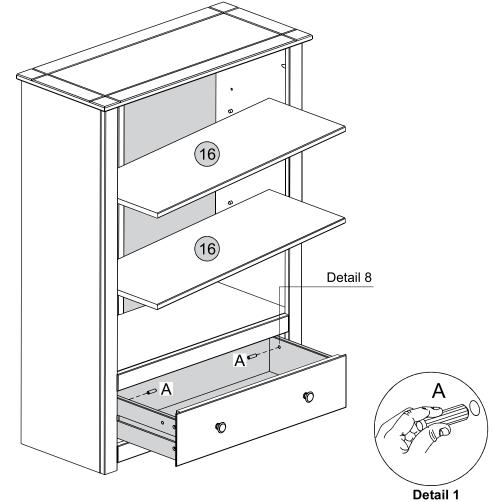


WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices.

Please make sure you use fixings suitable for the walls in your home.

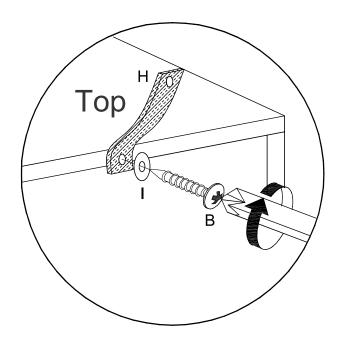

В	⊕ (1
Н	Strap	1
I	Washer	2

