


CANYON 2 TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

Thank you for purchasing the Canyon Shoe Cabinet.

Please read the instructions carefully to ensure safe operation of this product.

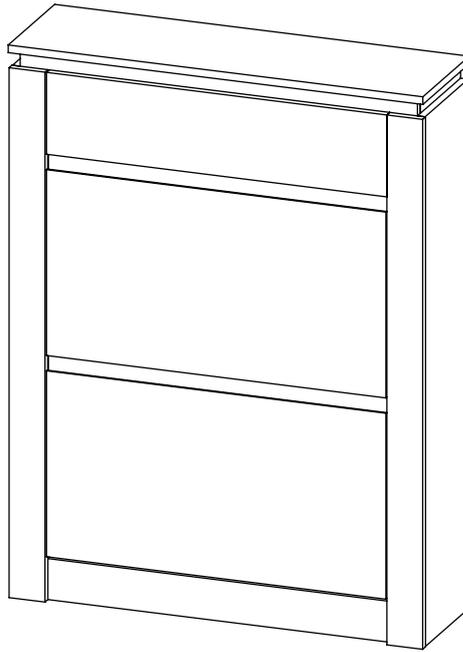

Size: 81 x 24 x 108 cm (WDH)


Colour: Dark Oak

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking.

Tools Required

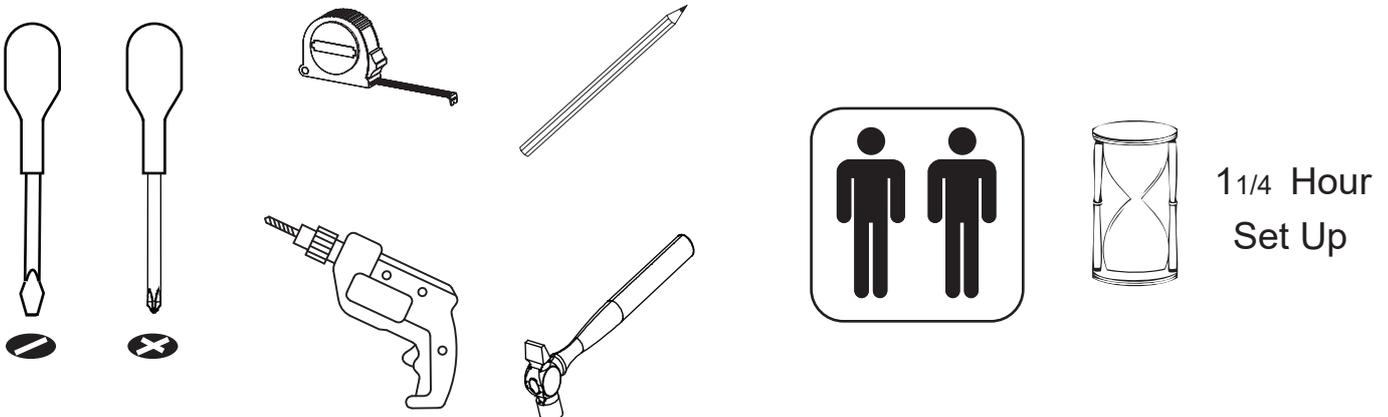

Version 1 - 210821

PO No: _____

Page 1 of 18

CANYON 2 TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

- This product is designed to hold 12Kg in total, spread evenly over the whole unit.
- Do not exceed this weight.
- We recommend that this unit is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent them from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly.
- Tools not included unless specified in parts list.

WARNINGS

- This product should only be used on a firm and level floor.
- Keep small parts out of reach of children.
- Make sure the base remain in contact with the floor.
- DO NOT use power tools to construct this product.
- DO NOT tighten screws until parts are assembled or as advised in this guide.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing, damaged or worn.
- DO NOT sit or stand on the product.
- This is a slim unit so, for safety, it is designed to fix to the wall securely using the metal anti-tilt bracket (U). These are to prevent the cabinet tipping over and causing damage or an accident. It is essential for the safety of you and your children, the cabinet is not free-standing.
- N.B. When drilling the wall to fix the Anti-tilt bracket, always be sure the area to be drilled is free from hidden electrical wiring or gas / water pipes .
- Carefully assess the suitability of the wall to ensure that the fastening device will withstand the load and forces generated. Walls can be quite different in construction so fixings are not supplied - choose the most suitable fixing for your wall type - if in doubt consult an expert.

CARE INFORMATION


- To clean, wipe with a damp cloth.
- Never use scourers, abrasives or chemical cleaners.
- Do not use solvent based cleaners or detergents as they can bleach or damage the product.

CANYON 2 TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

Parts and Fittings Checklist

Please check the pack contents before assembling the product. If any components are missing, please contact your retailer.

The fittings pack contains small items that should be kept away from children.

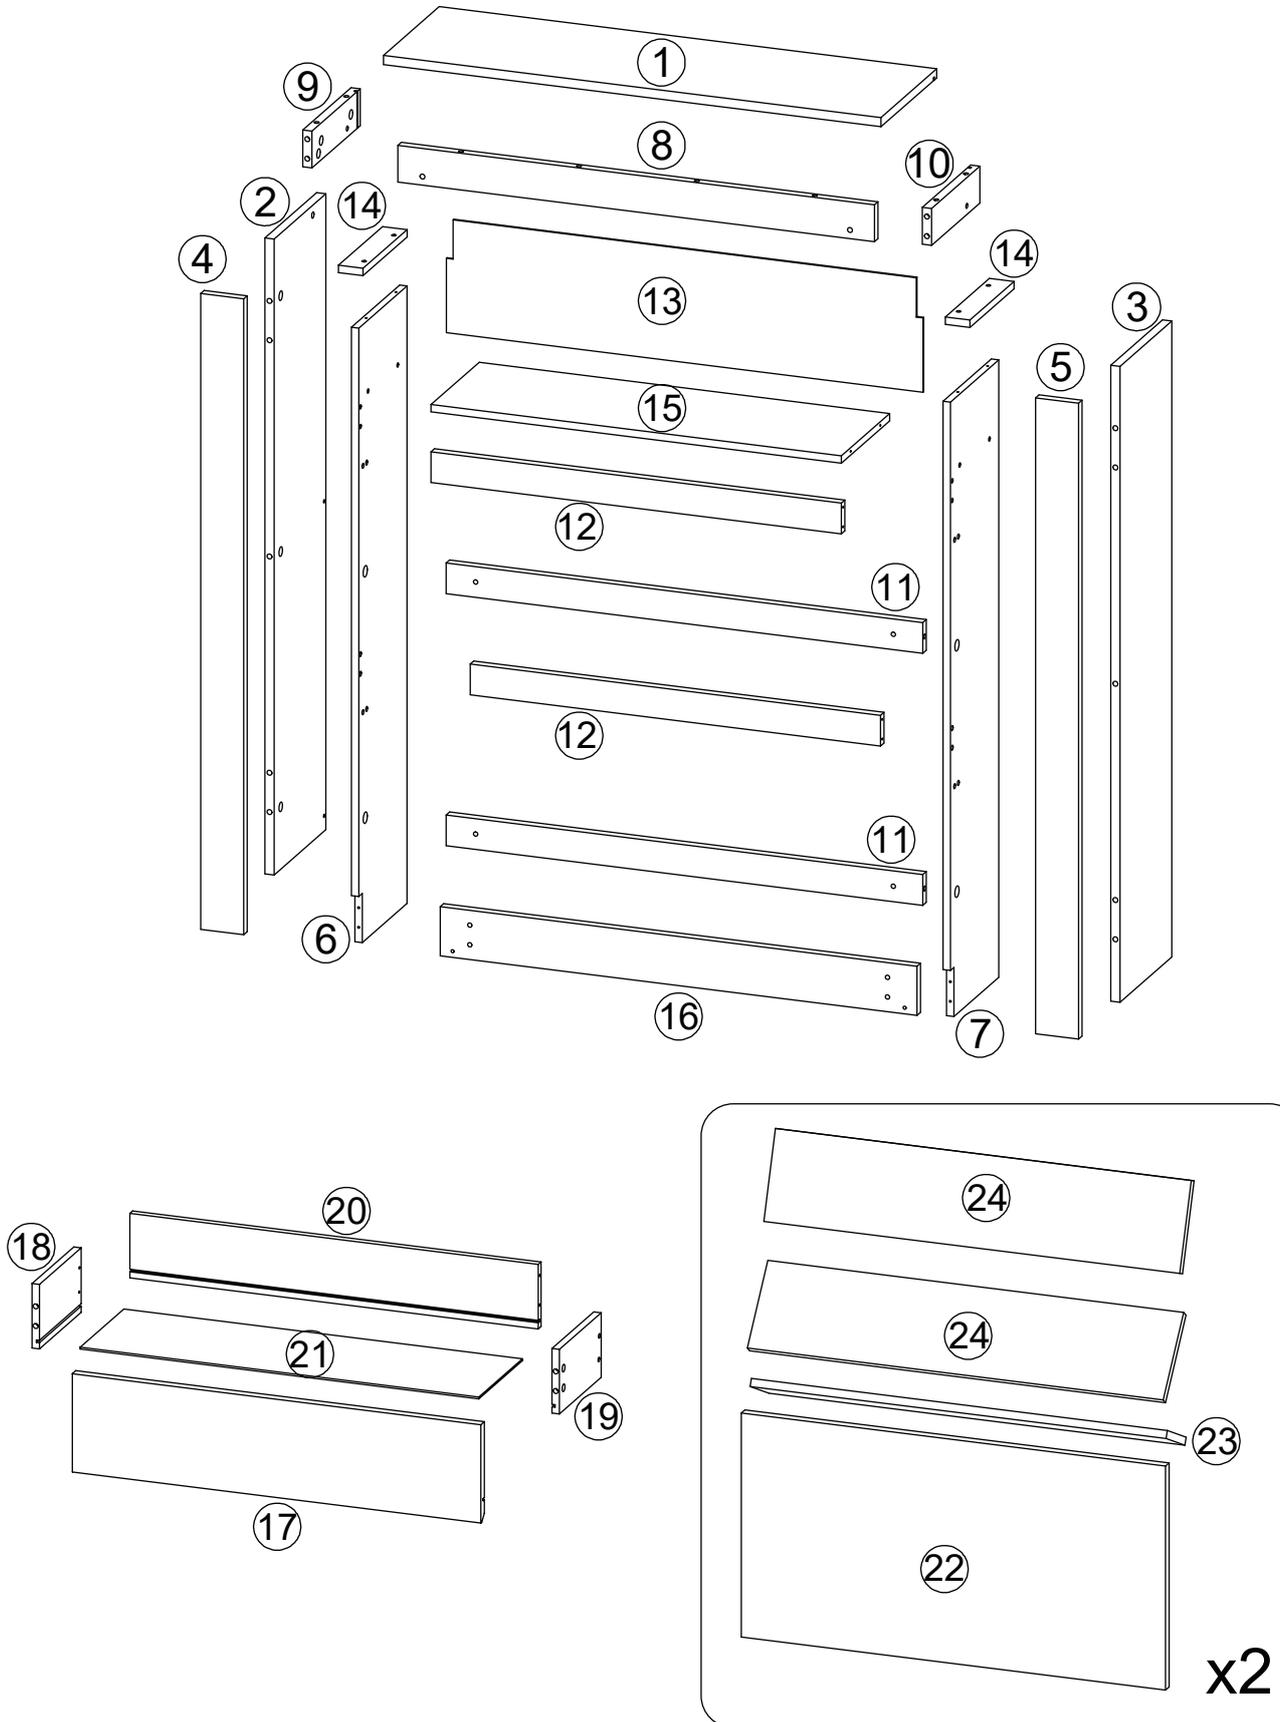

CANYON 2 TIER SHOE CABINET ASSEMBLY INSTRUCTIONS


All parts are packed in one carton

1	2	3
Description: Top Panel Qty: 1 Size: 810 x 240 x 15 mm Carton No: 1/1	Description: LH Side Panel Qty: 1 Size: 1035 x 223 x 15 mm Carton No: 1/1	Description: RH Side Panel Qty: 1 Size: 1035 x 223 x 15 mm Carton No: 1/1
4	5	6
Description: LH Front Upright Qty: 1 Size: 1035 x 70 x 15 mm Carton No: 1/1	Description: RH Front Upright Qty: 1 Size: 1035 x 70 x 15 mm Carton No: 1/1	Description: LH Inner Side Qty: 1 Size: 1005 x 208 x 12 mm Carton No: 1/1
7	8	9
Description: RH Inner Side Qty: 1 Size: 1005 x 208 x 12 mm Carton No: 1/1	Description: Front Decor Rail Qty: 1 Size: 776x 60 x 15 mm Carton No: 1/1	Description: LH Decor Rail Qty: 1 Size: 208 x 60 x 15 mm Carton No: 1/1
10	11	12
Description: RH Decor Rail Qty: 1 Size: 208 x 60 x 15 mm Carton No: 1/1	Description: Back Rail Qty: 2 Size: 776 x 50 x 15 mm Carton No: 1/1	Description: Front Rail Qty: 2 Size: 668 x 50 x 15 mm Carton No: 1/1
13	14	15
Description: Back Panel Qty: 1 Size: 776 x 185 x 3 mm Carton No: 1/1	Description: Cover Rail Qty: 2 Size: 190 x 40 x 12 mm Carton No: 1/1	Description: Fixed Shelf Qty: 1 Size: 668 x 208 x 12 mm Carton No: 1/1
16	17	18
Description: Plinth Qty: 1 Size: 776 x 80 x 15 mm Carton No: 1/1	Description: Drawer Front Qty: 1 Size: 665 x 160 x 15 mm Carton No: 1/1	Description: LH Drawer Side Qty: 1 Size: 193 x 105 x 12 mm Carton No: 1/1
19	20	21
Description: RH Drawer Side Qty: 1 Size: 193 x 105 x 12 mm Carton No: 1/1	Description: Drawer Back Qty: 1 Size: 641x 104.5 x 12 mm Carton No: 1/1	Description: Drawer Base Qty: 1 Size: 649 x 188 x 3 mm Carton No: 1/1
22	23	24
Description: Flap for Carriage Qty: 2 Size: 663 x 363 x 15 mm Carton No: 1/1	Description: Base for Carriage Qty: 2 Size: 659 x 85 x 12 mm Carton No: 1/1	Description: Partition for Carriage Qty: 4 Size: 659 x 135 x 12 mm Carton No: 1/1

CANYON 2 TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

Fittings (to scale)


Code	Item	Quantity
A	Long Cam Bolt (38mm overall)	18
B	Large Cam Lock	18
C	Dowel (8x30mm)	8
D	Short Cam Bolt (25mm overall)	4
E	Small Cam Lock	4
F	Connection Bolt (M6x25mm)	4
G	Screw for Fitting Drawer Stop (N) and Back Panel (3x12mm)	8
H	Screw for Fitting Swivel to Flap (3.5x16mm)	24
J	Screw for Fitting Pivot Pin (S) (4x14mm)	4
K	Carcass Assembly Screws (4 x35mm)	28
L	Screw for Fixing Anti-tilt Metal Bracket to underside of fixed shelf (4x12mm)	1
V	Screw for Fitting Plinth to Front Upright (4 x28mm)	2

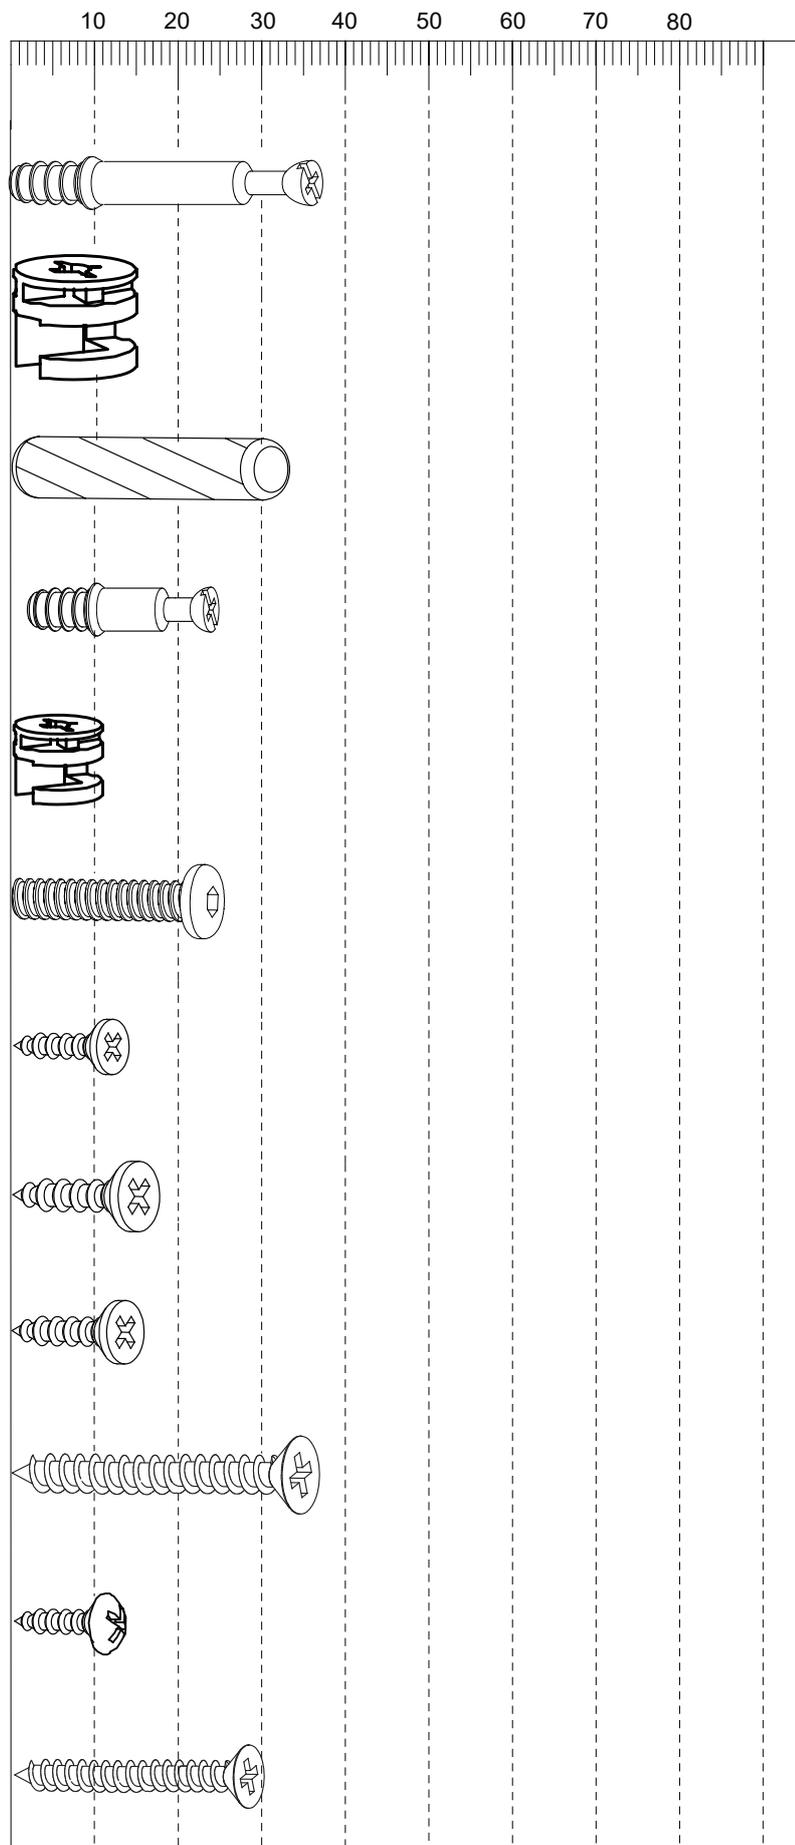






CANYON 2 TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

Fittings (not to scale)

Code	Item	Quantity
M	Allen Key (4mm)	1
N	Drawer Stop	2
P	Shoe Carriage Swivel - Left Hand	2
Q	Shoe Carriage Swivel - Right Hand	2
R	Shoe Carriage Stop	4
S	Shoe Carriage Swivel Pivot Pin	4
T	Swivel Pivot Bush for Fitting to Side Panel	4
U	Metal Anti-tilt Bracket for Fixing Cabinet to the Wall	1

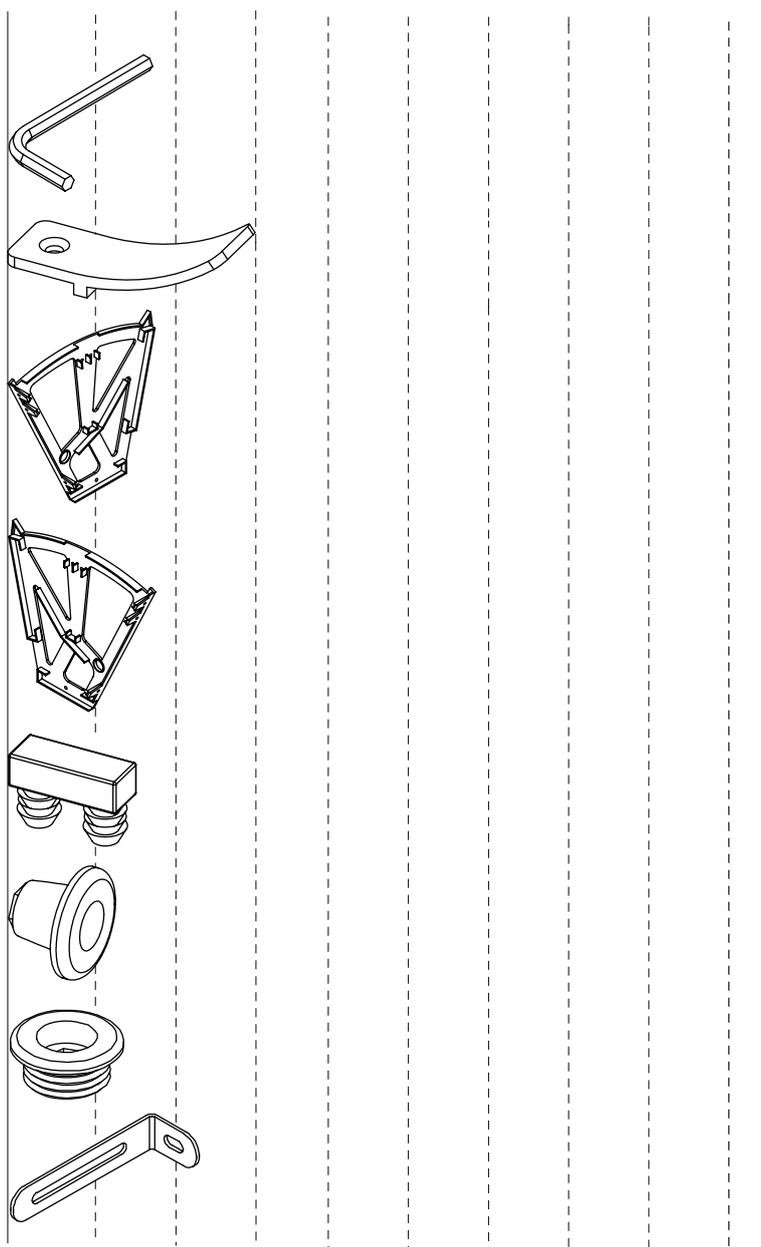


General Hints & Tips

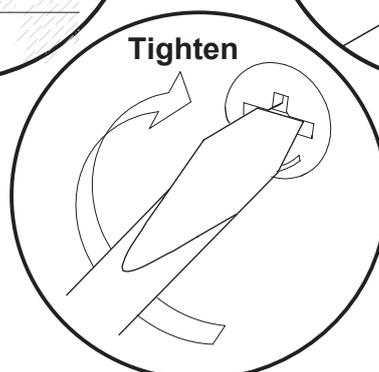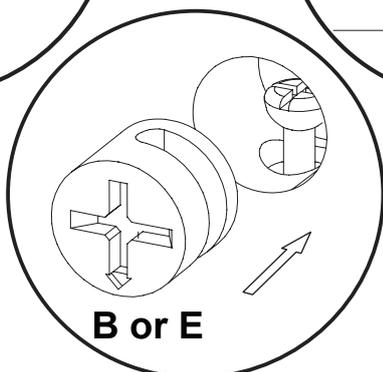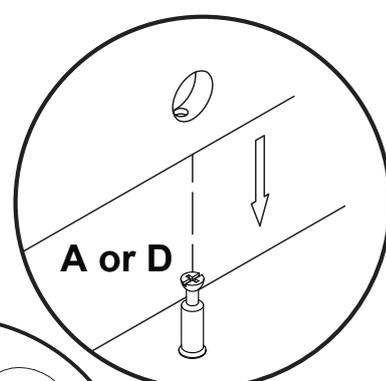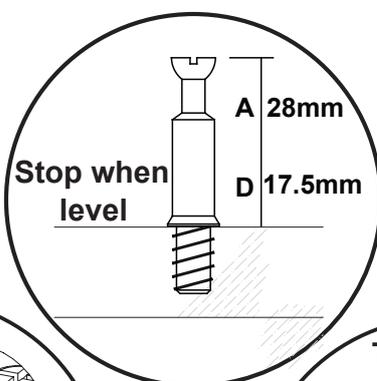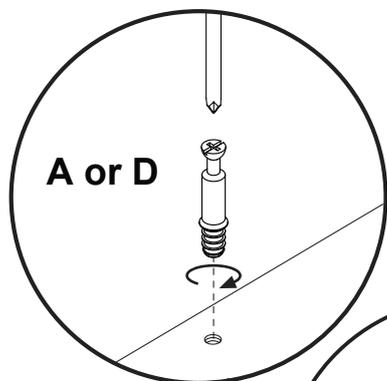


CANYON 2 TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 1

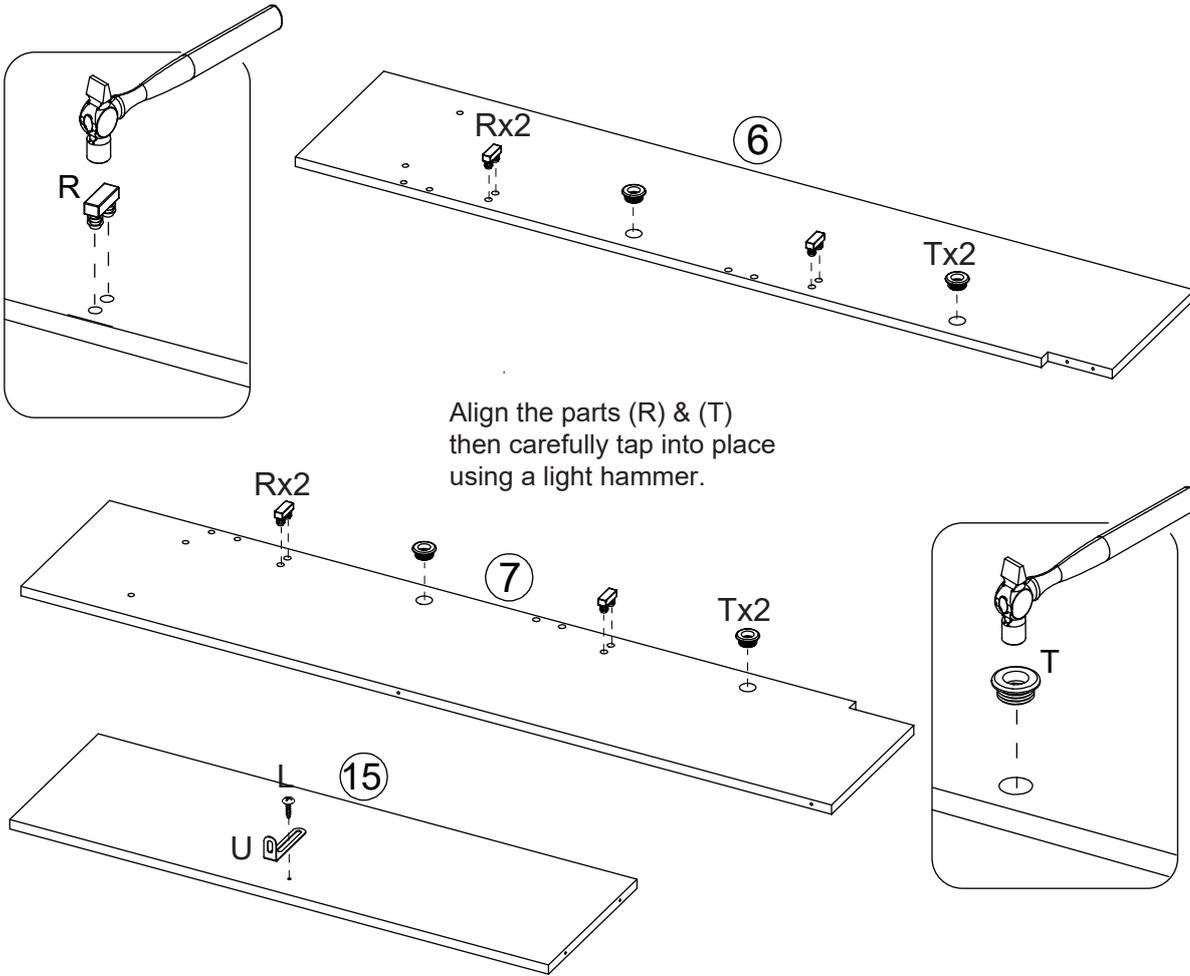

For this step:


Tools required

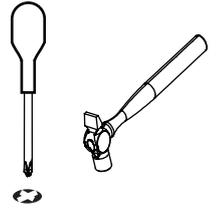

Fittings required




L x1

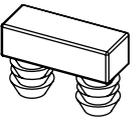

R x4




T x4

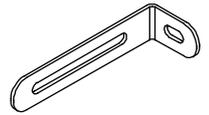


U x1

STEP 2

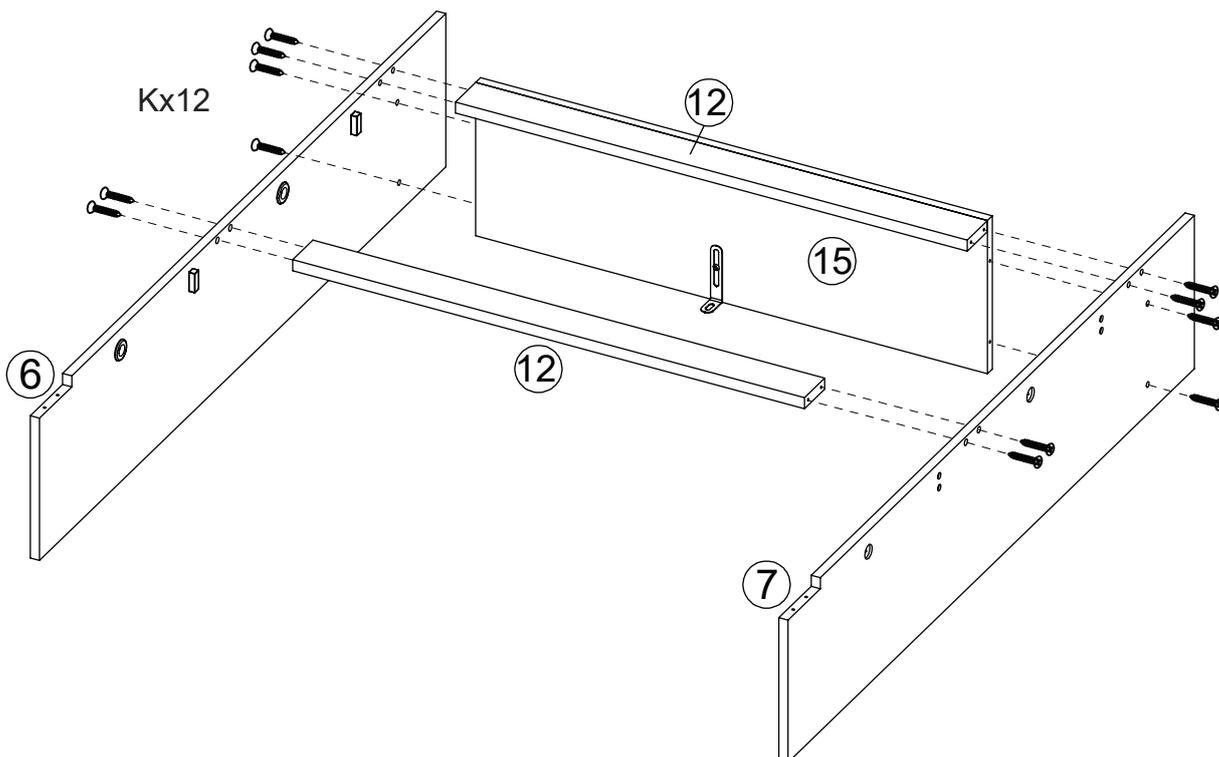


For this step:

Tools required

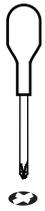

Fittings required

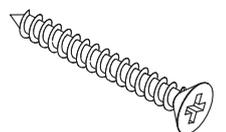


K x12

CANYON 2 TIER SHOE CABINET ASSEMBLY INSTRUCTIONS


STEP 3

For this step:


Tools required

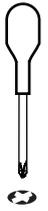

Fittings required

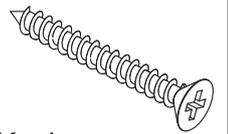


K x4

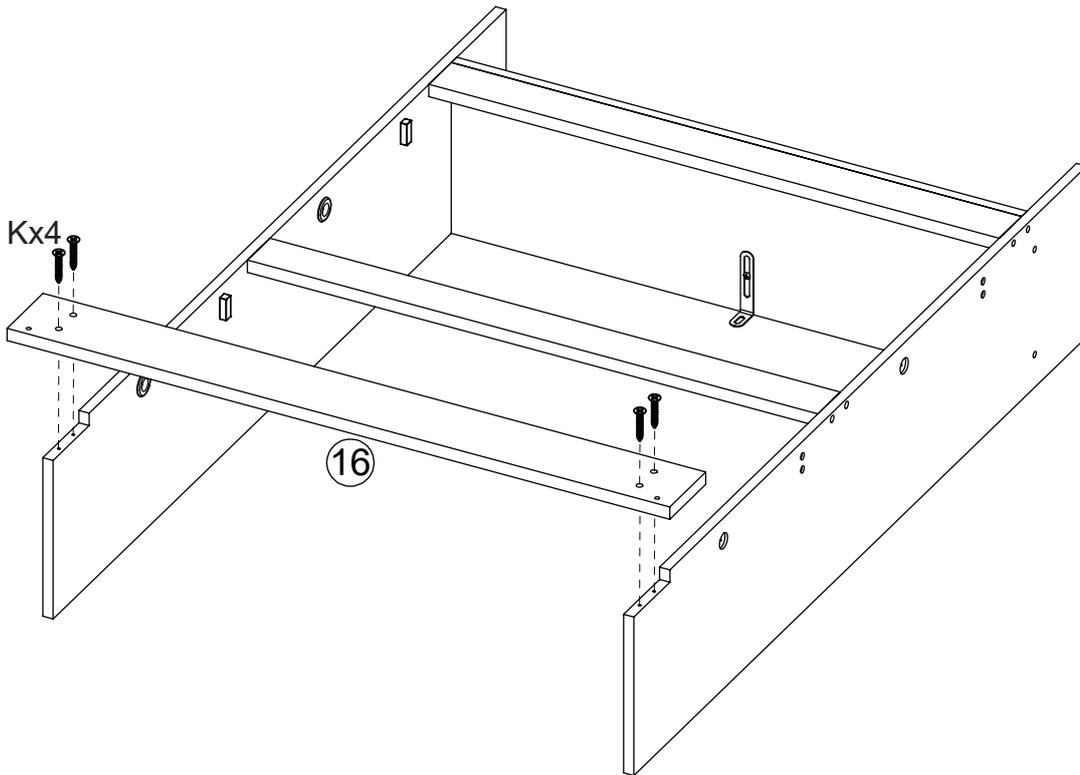


STEP 4

For this step:


Tools required

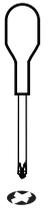

Fittings required

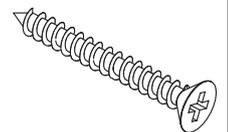


K x4

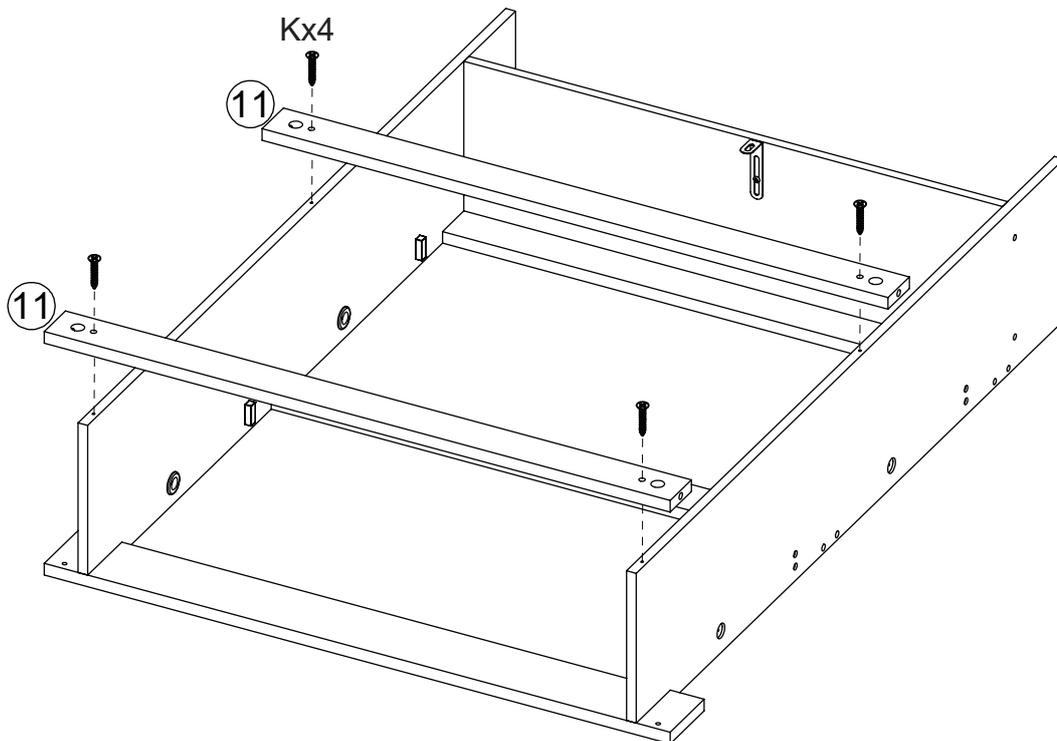


CANYON 2 TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 5

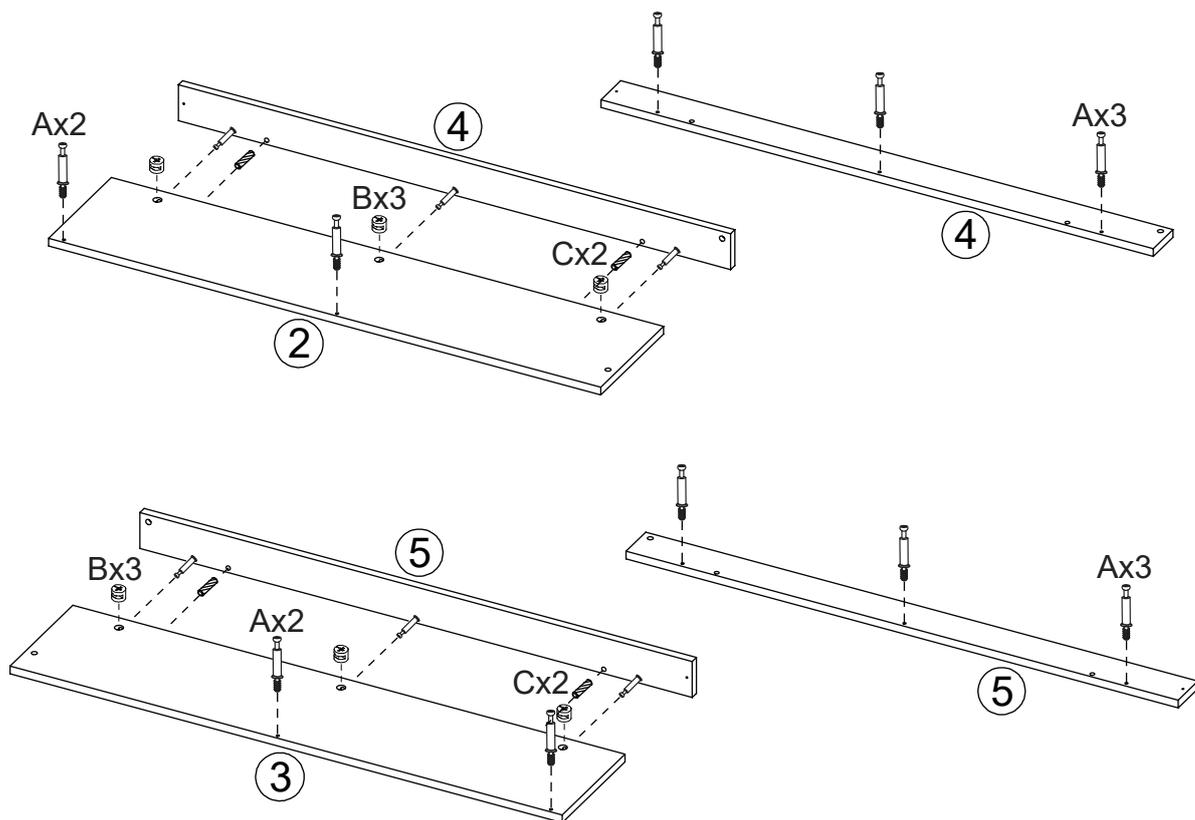


For this step:

Tools required

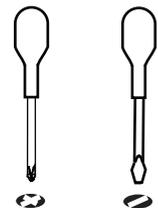


Fittings required

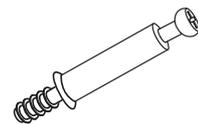

A x10




B x6

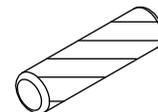

C x4

STEP 6

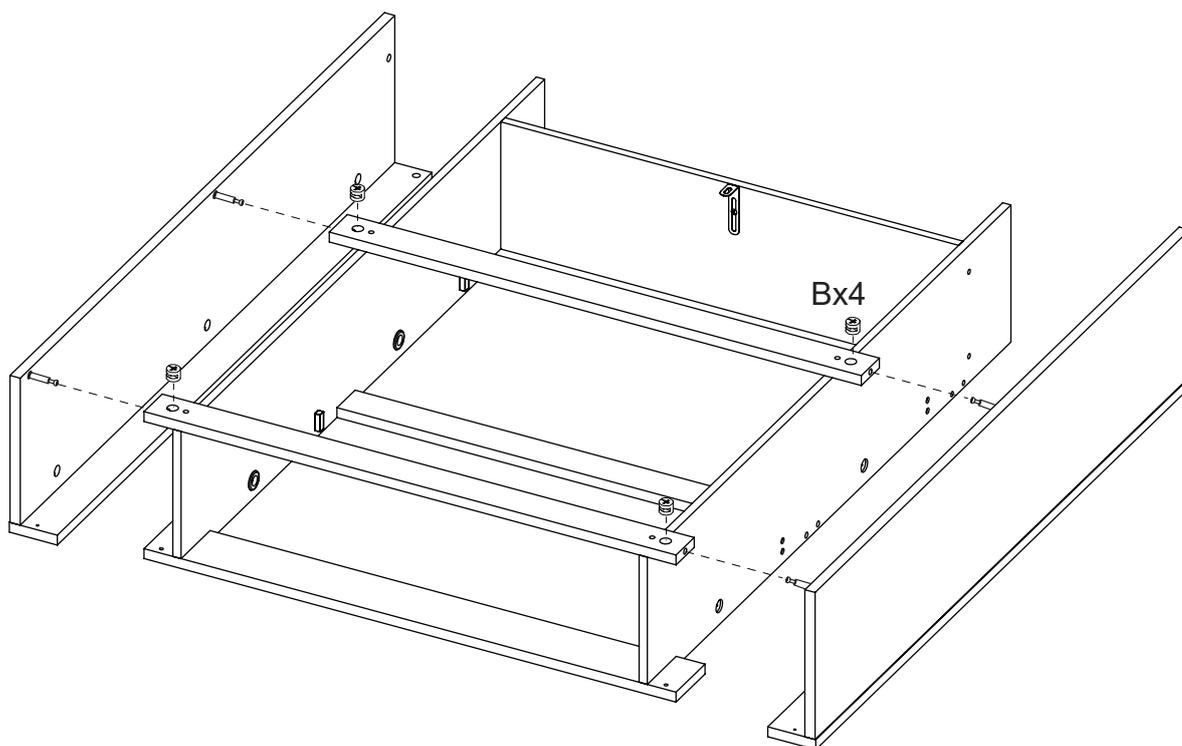

For this step:

Tools required




Fittings required




B x4

CANYON 2 TIER SHOE CABINET ASSEMBLY INSTRUCTIONS


STEP 7

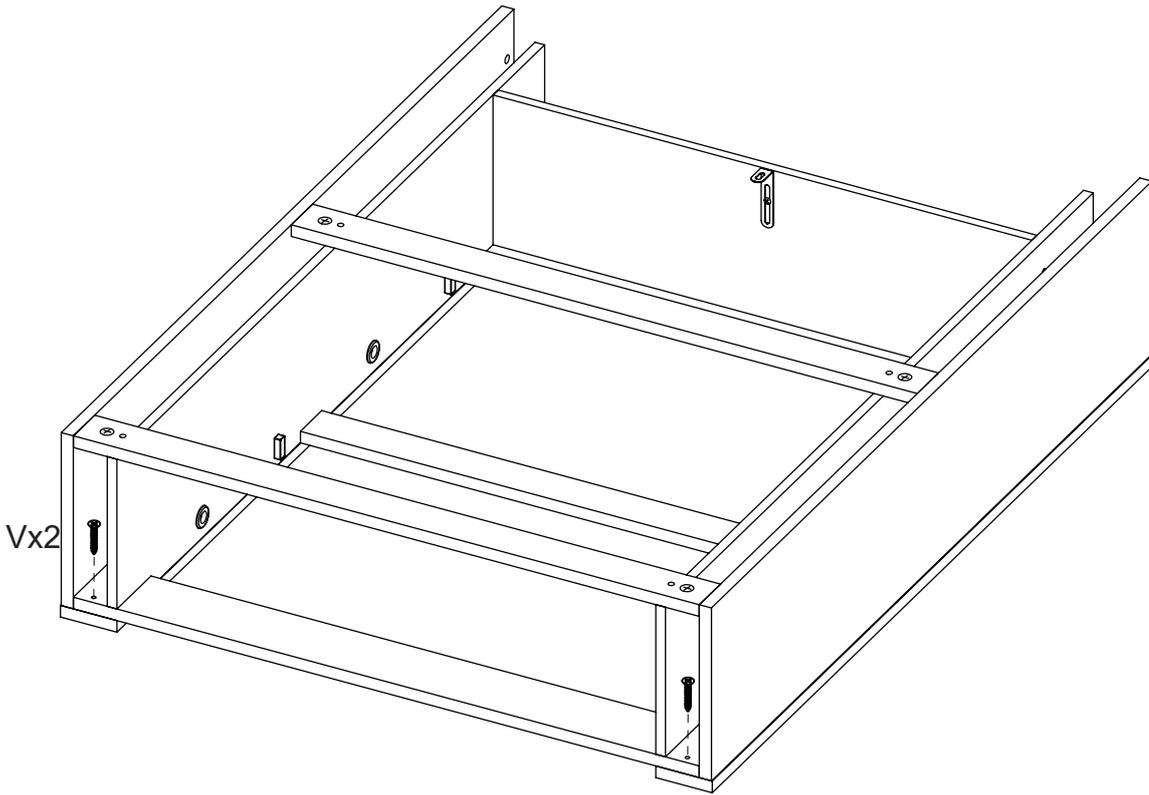

For this step:
Tools required

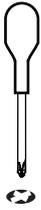


Fittings required

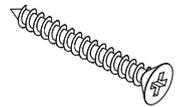


V x2


STEP 8

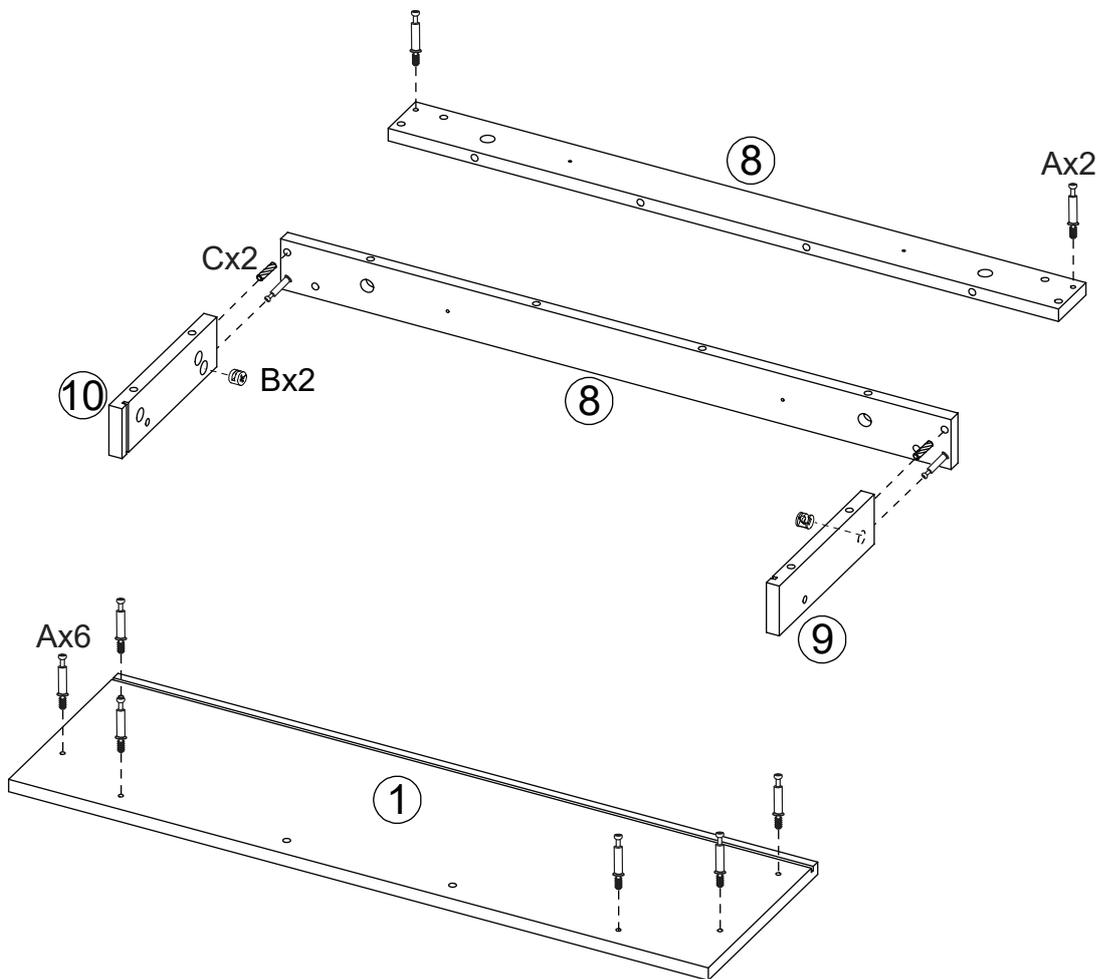

For this step:
Tools required

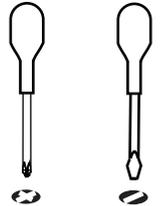

Fittings required

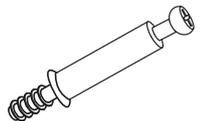


A x8

B x2




C x2

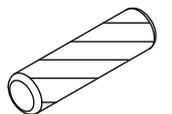

CANYON 2 TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 9

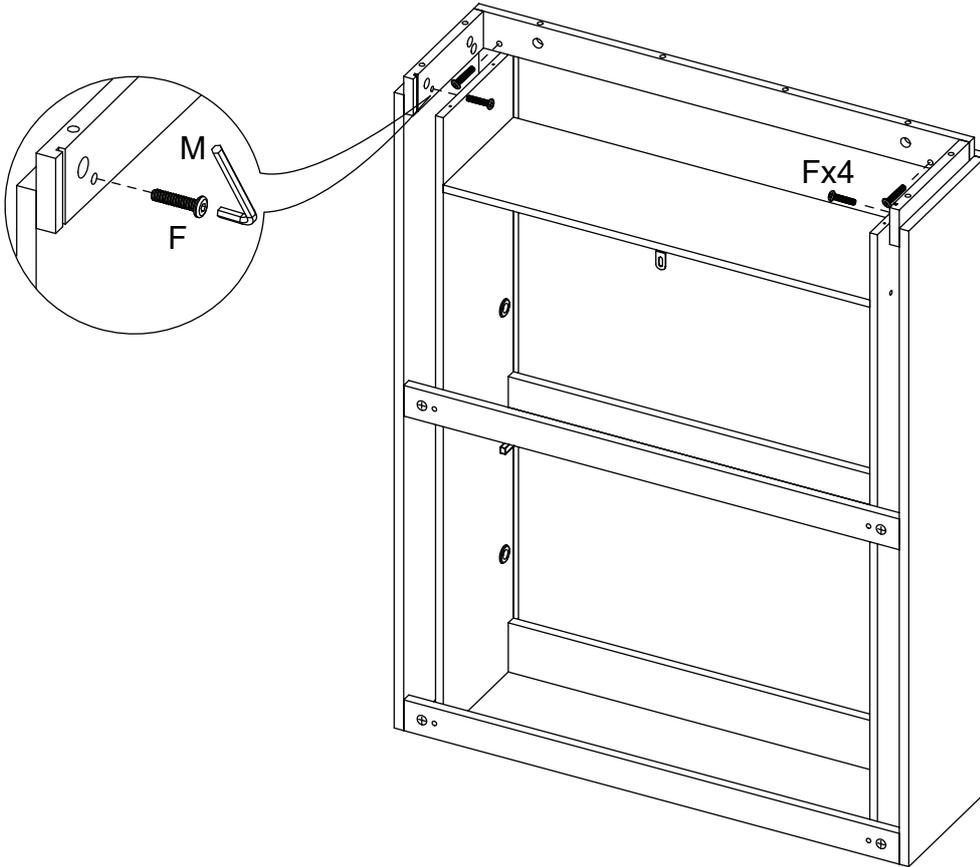

For this step:
Tools required




M

Fittings required




F x 4


STEP 10

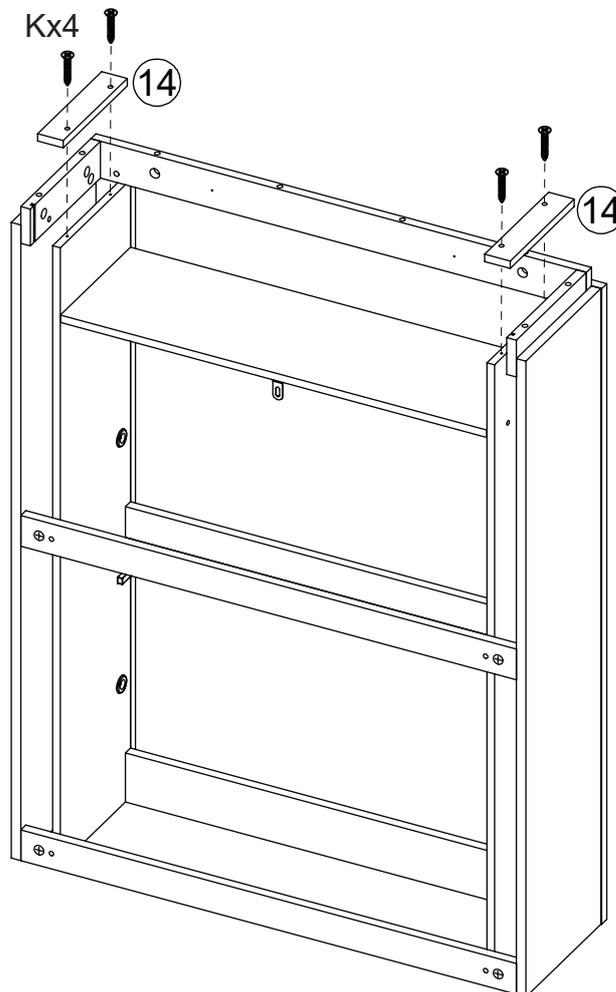

For this step:
Tools required

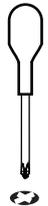


Fittings required

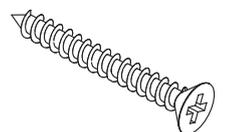


K x 4

CANYON 2 TIER SHOE CABINET ASSEMBLY INSTRUCTIONS


STEP 11

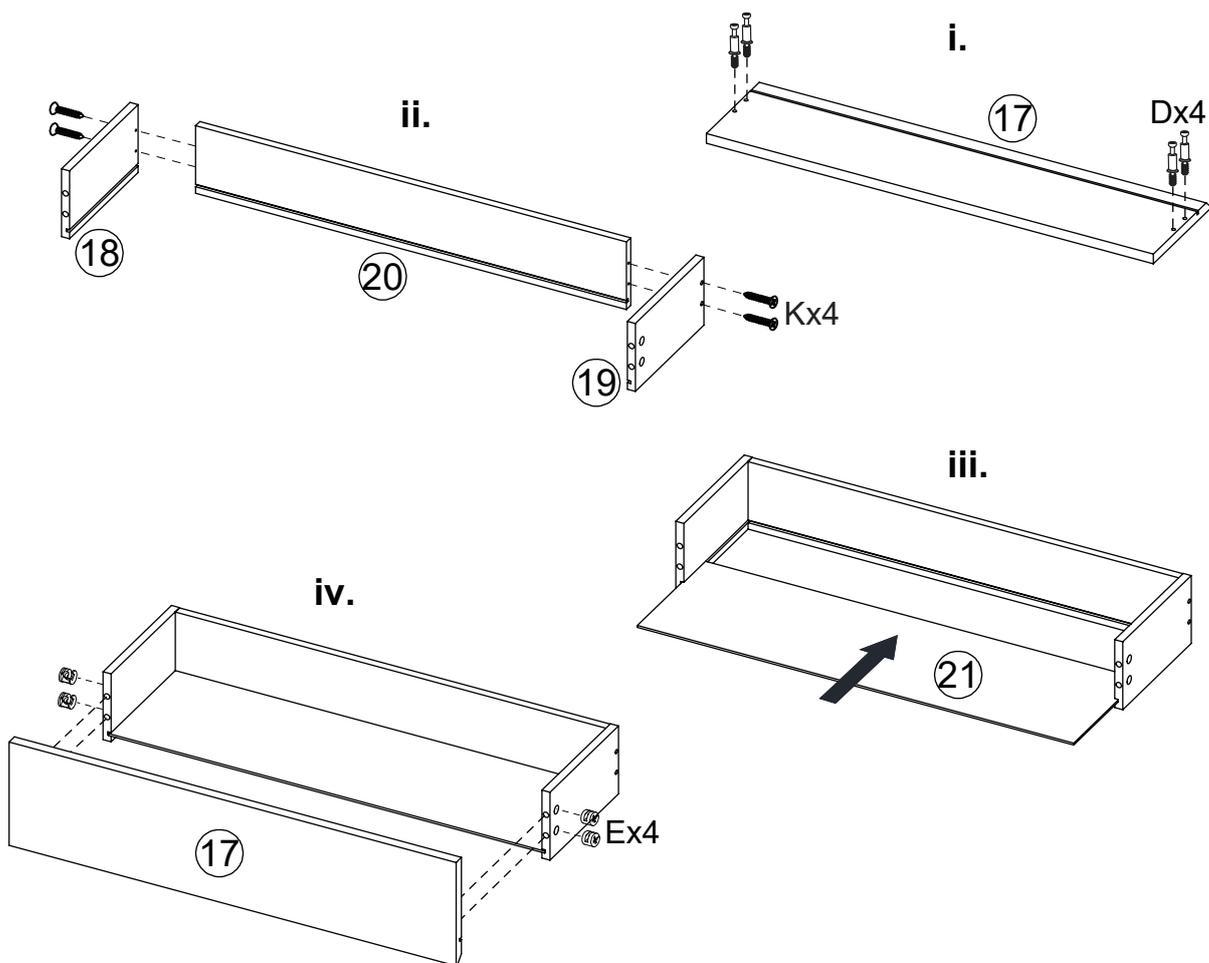


For this step:
Tools required

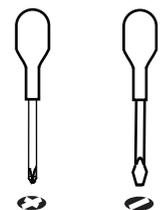

Fittings required

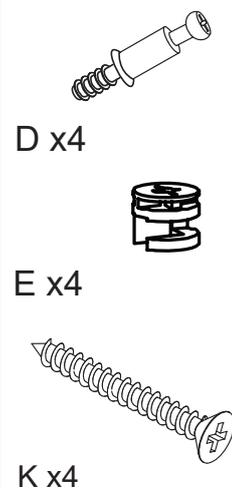

STEP 12

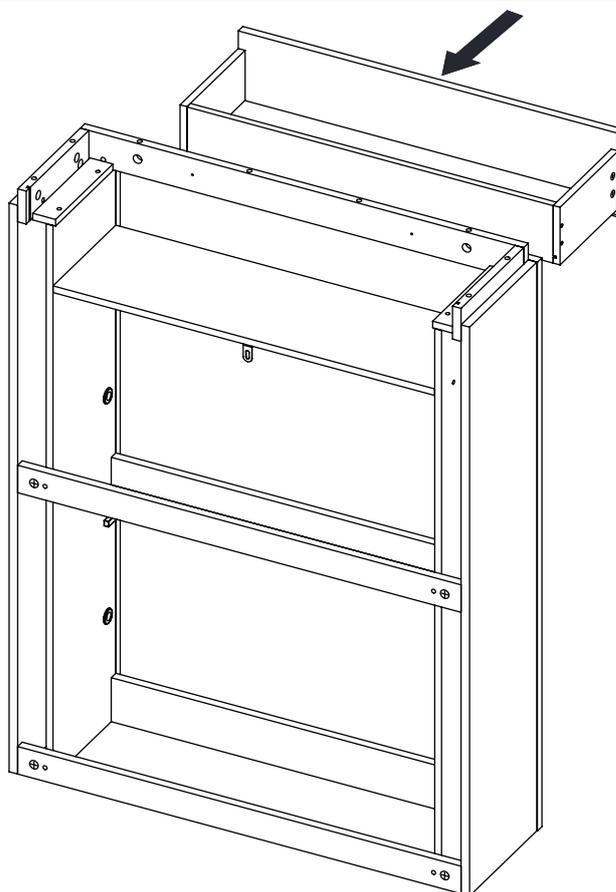


For this step:
Tools required

Fittings required

CANYON 2 TIER SHOE CABINET ASSEMBLY INSTRUCTIONS


STEP 13

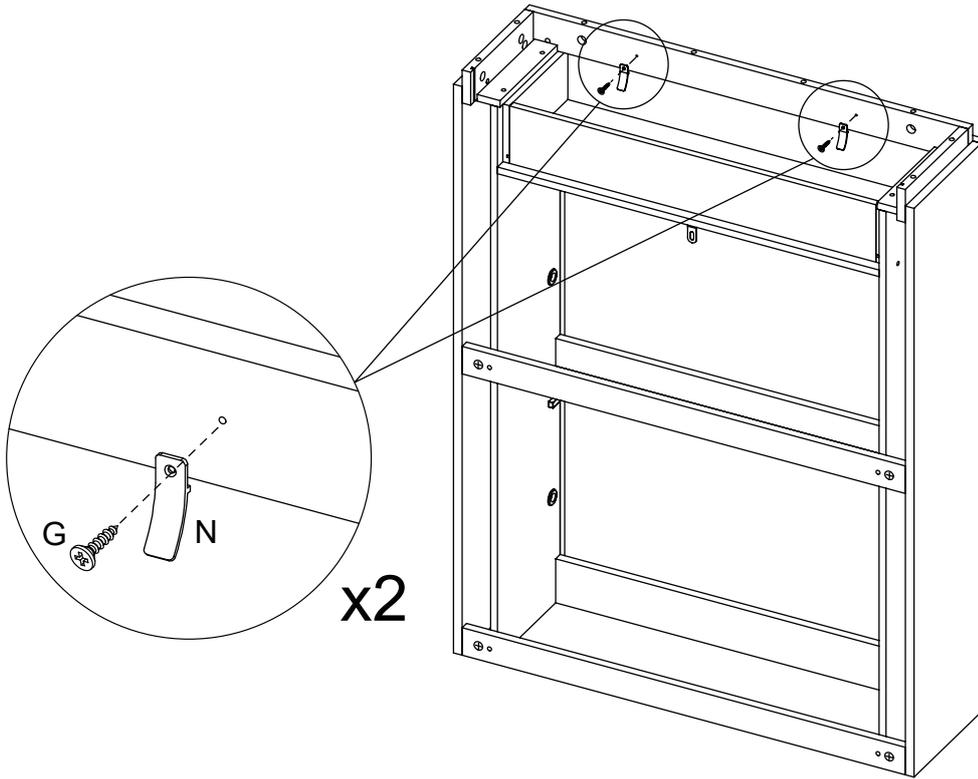


For this step:
Tools required



Fittings required

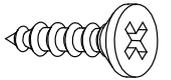


G x2

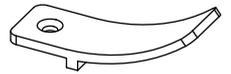

N x2

STEP 14

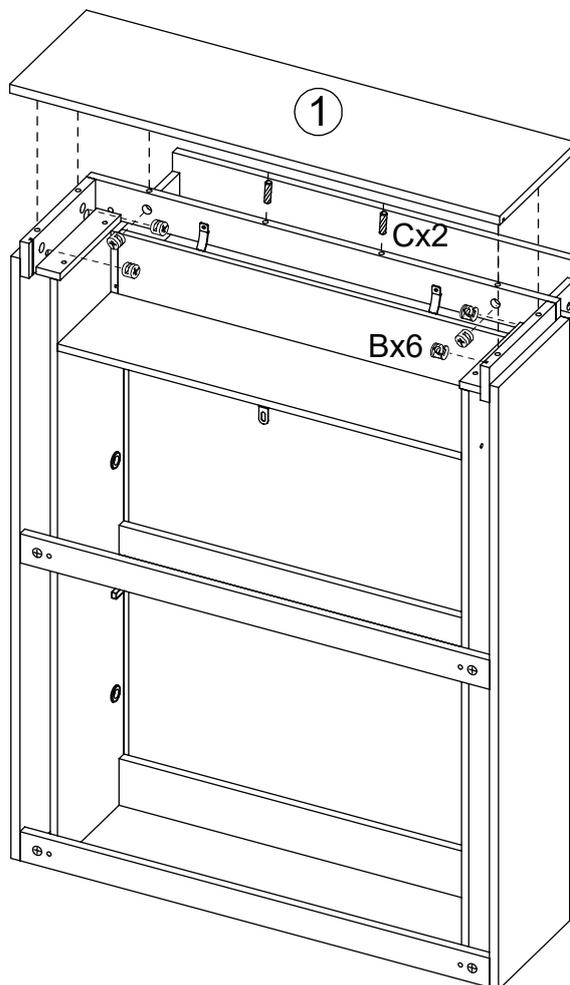


For this step:
Tools required



Fittings required




B x6

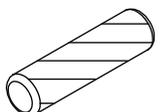

C x2

CANYON 2 TIER SHOE CABINET ASSEMBLY INSTRUCTIONS


STEP 15

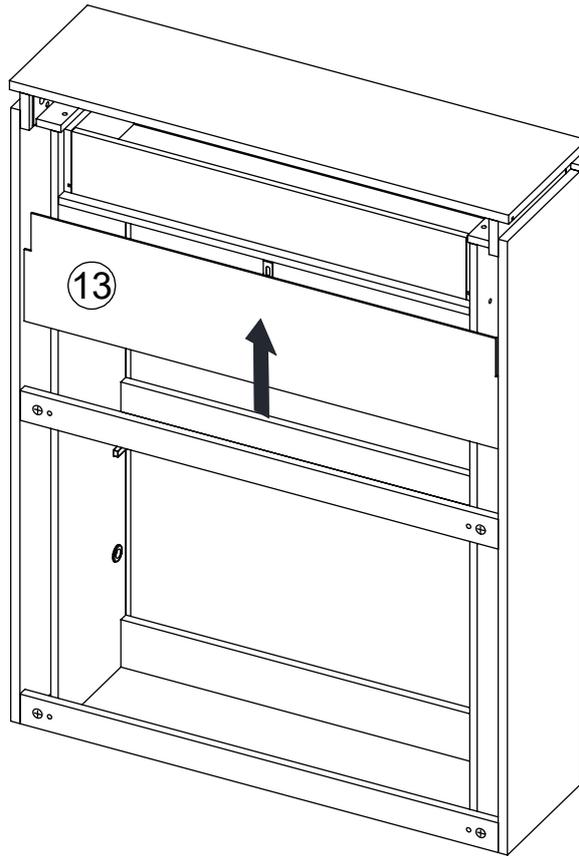


For this step:
Tools required

Fittings required


STEP 16

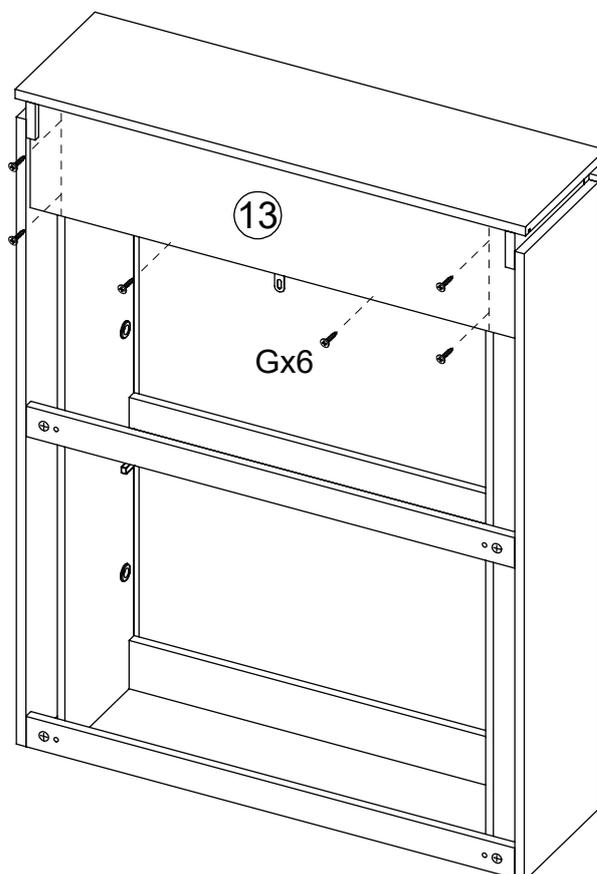

For this step:
Tools required

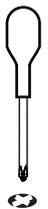

Fittings required

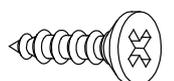


G x6


CANYON 2 TIER SHOE CABINET ASSEMBLY INSTRUCTIONS


STEP 17


Warning:
Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.

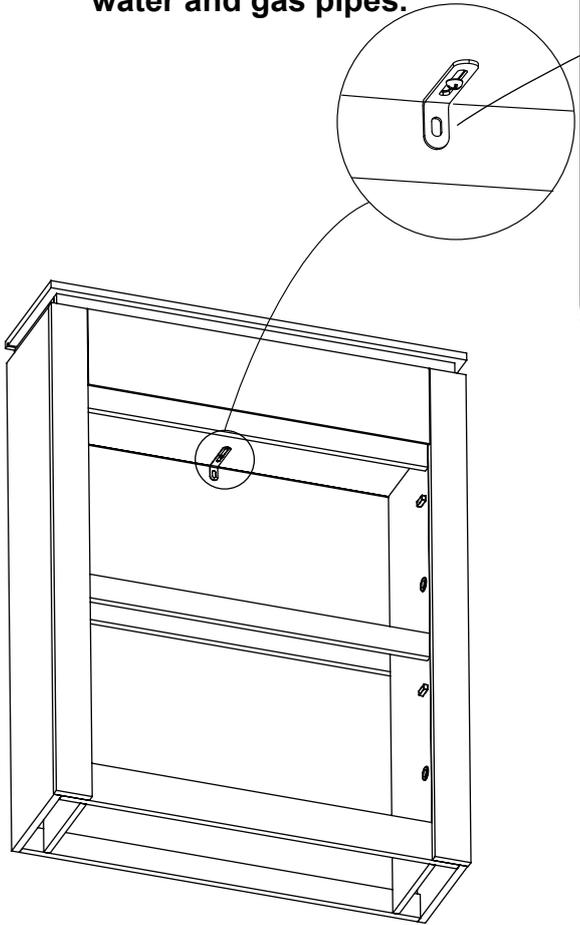

I. In the final position the cabinet is to be used place it flat against the wall. Carefully mark the wall with a sharp pencil in the centre of the hole in the short leg of the metal Anti-tilt Bracket.



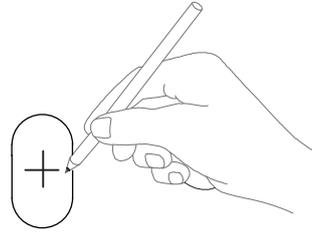


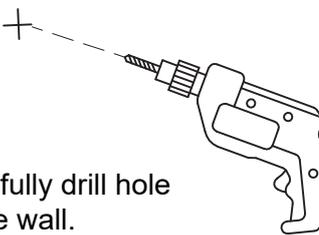II.  Carefully drill hole in the wall.

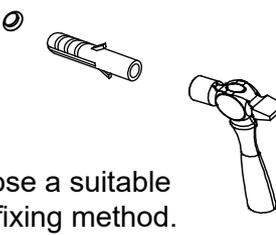III.  Choose a suitable wall fixing method.


For this step:

Tools required

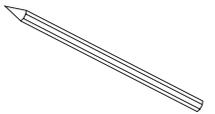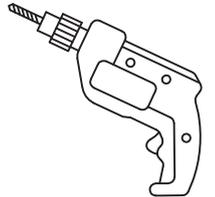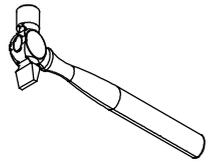


Fittings required

STEP 18

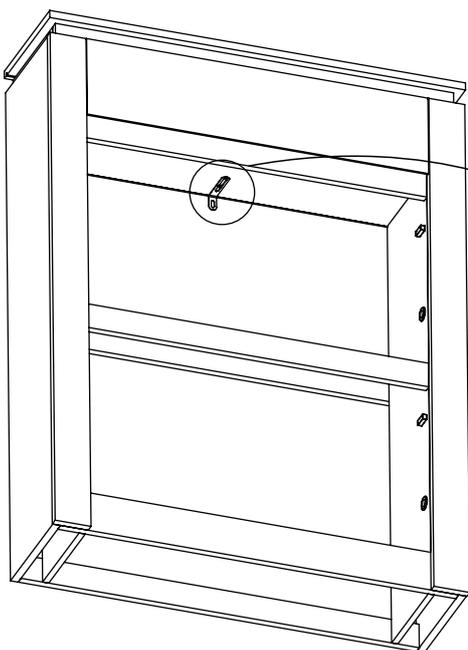


Choose a suitable screw for your wall fixing method.

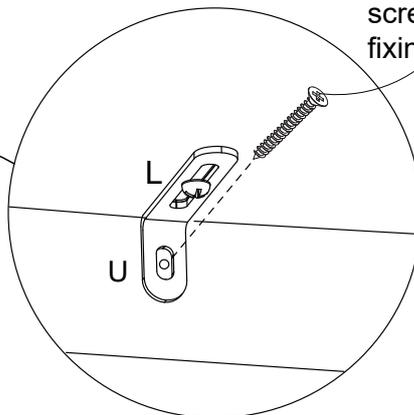

Hold cabinet firmly against the wall. If necessary, loosen screw (L) a little and push the bracket (U) until it touches the wall. Screw into your wall fixing making sure bracket is firm, finally re-tighten screw (L).

For this step:

Tools required

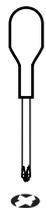


Fittings required

CANYON 2 TIER SHOE CABINET ASSEMBLY INSTRUCTIONS


STEP 19

x2 SETS


i. LOOSELY FIT THE SWIVELS (P&Q) TO EACH SIDE OF THE FLAP (22) USING SCREWS (H).
DO NOT TIGHTEN SCREWS 100% YET.

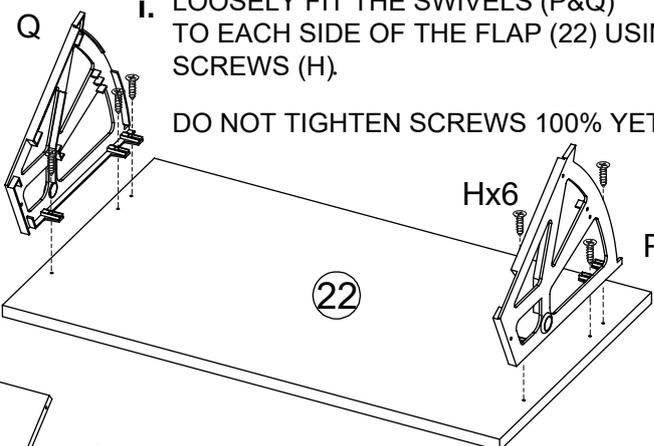

ii. GENTLY LEAN SWIVELS (P&Q) OUTWARDS AND SLIDE THE BASE (23) INTO THE GUIDES. SLIDE IN THE OUTER PARTITION (24) AND MAKE SURE THE PANELS ARE SITTING EVENLY IN EACH GROOVE, CAREFULLY TIGHTEN THE SIX SCREWS (H) 100%

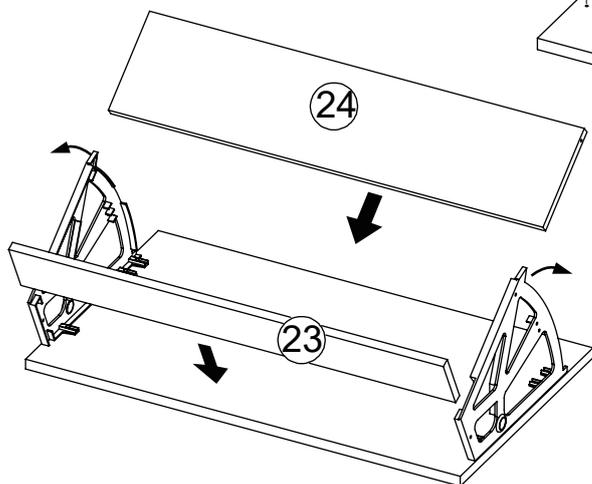

iii. CLAMP BASE PANEL (23) AND OUTER PARTITION (24) TO THE SWIVELS USING SCREWS (H).

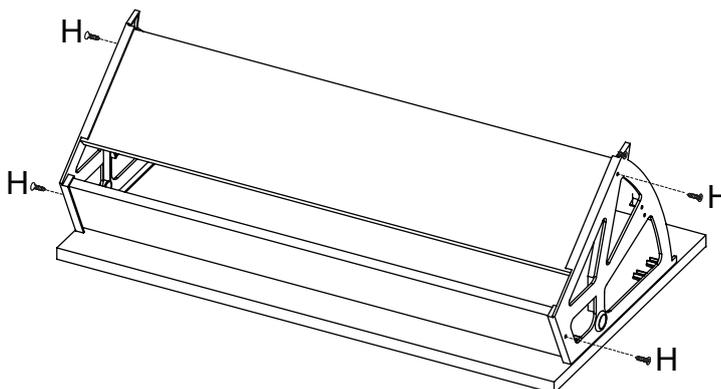


For this step:
Tools required




Fittings required



H x20

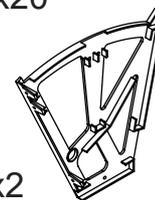

P x2

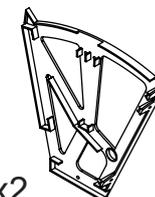


Q x2


STEP 20

CAREFULLY INSERT THE LOWER ASSEMBLED CARRIAGE INTO POSITION BETWEEN THE SIDE PANELS, INSERT PIVOT PINS (S) AND USING SCREWS (J) FIX INTO PLACE, DO NOT OVERTIGHTEN THE SCREWS.

THE CARRIAGE MUST BE KEPT LEVEL WHEN DOING THIS TASK SO PLEASE SEEK HELP FROM YOUR ASSISTANT. REPEAT FOR UPPER CARRIAGE.

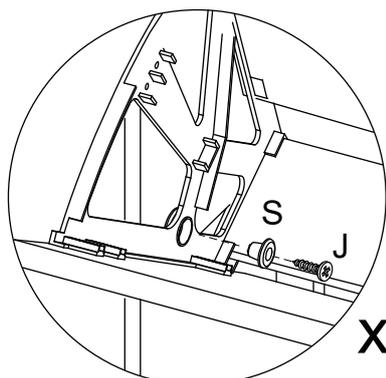


x4

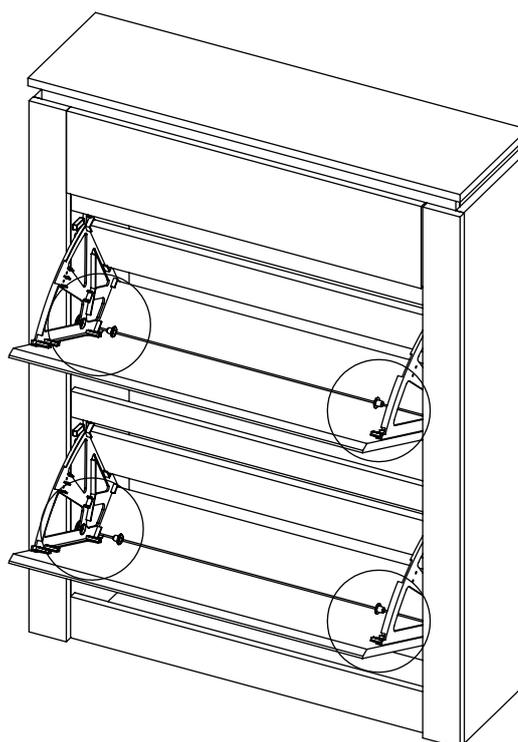


For this step:
Tools required



Fittings required

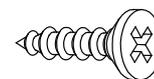

J x4

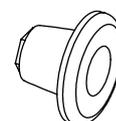


S x4

CANYON 2 TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 21

For this step:
Tools required

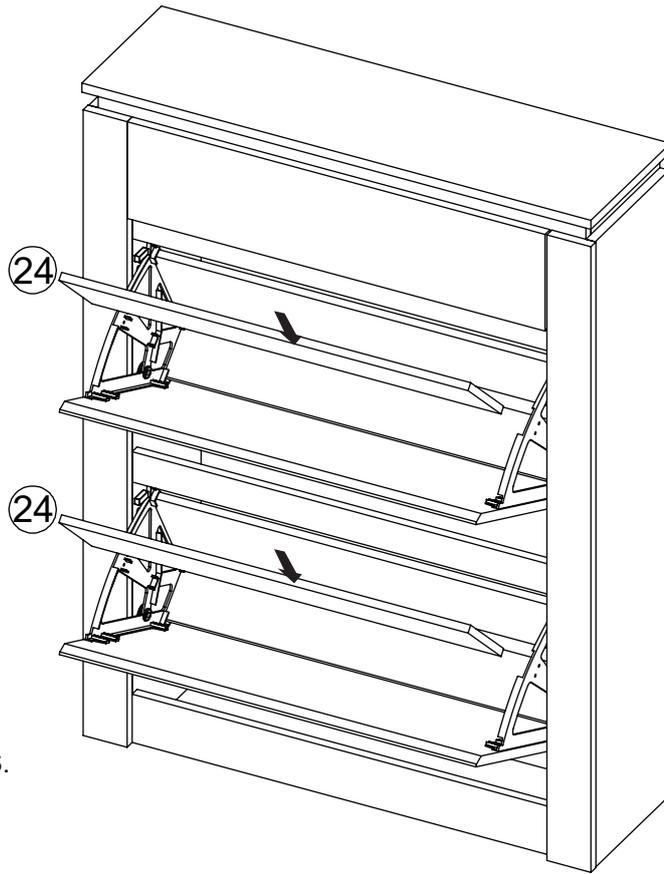


SLIDE CENTRAL PARTITIONS
(24) INTO THE SWIVEL GUIDES.



Fittings required

STEP 22


For this step:
Tools required

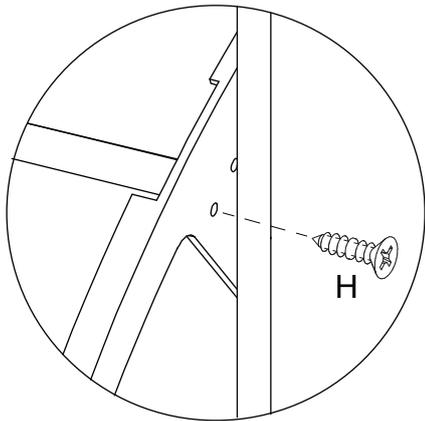

CLAMP CENTRAL PARTITIONS
(24) IN PLACE USING SCREWS (H).

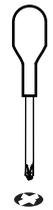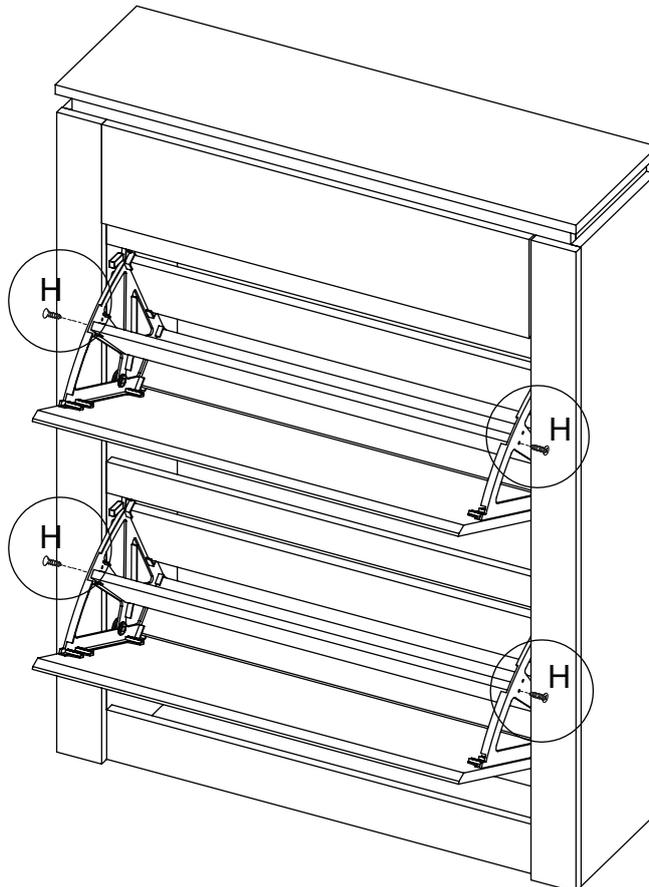

Fittings required

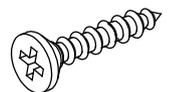


H x4

CANYON 2 TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

Assembly Completed

Your Canyon Shoe Cabinet is now completely assembled.
Periodically check to ensure that the components are in their proper position, free from damage.
Also, make sure the connectors are tight and secure.

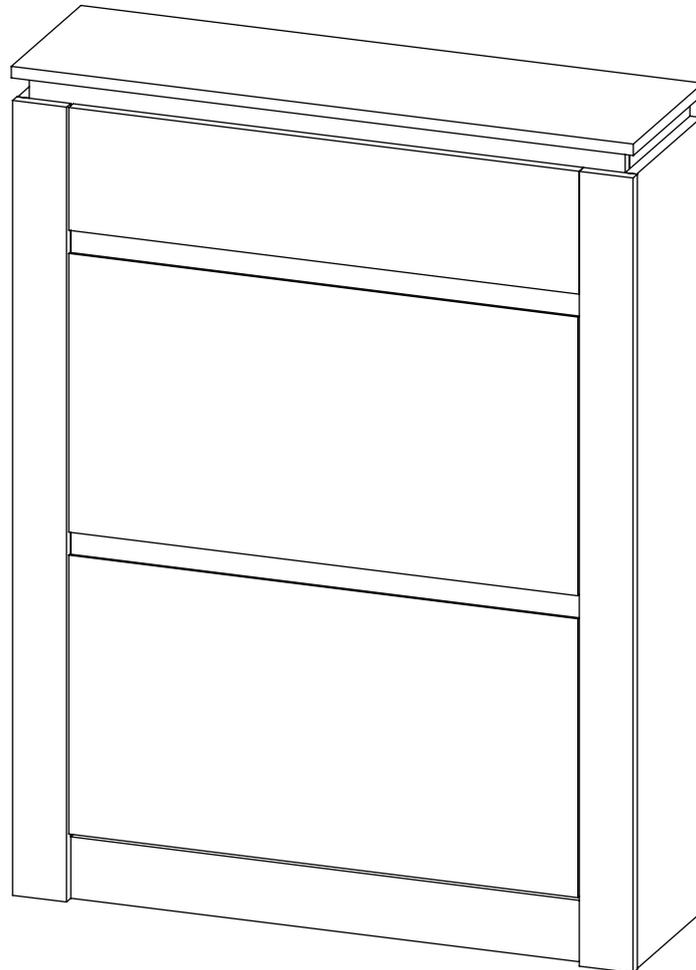

Keep instructions for future reference

