



Birlea

Suppliers of inspiration

Assembly Instructions

Thank you for
purchasing a
Birlea product.

For a chance to win a *Love 2 Shop* voucher simply post a picture of your new product on your preferred social channels tagging Birlea Furniture and using the hashtag **#ShareYourStyle** and **#Birlea**. One winner will be selected at random each month.

To view our full terms and conditions please visit our website. www.birlea.com

Are you happy with your purchase?

Yes: That's great, we would love to hear more from you. Please leave us a review on our social media channels or Trustpilot. Your feedback will be greatly appreciated.

No: If for any reason there is something missing, indifferent or incorrect with your order, please contact the retailer you purchased the item from. We will work with the retailer to resolve your issue as quickly as possible.



www.birlea.com

ASSEMBLY INSTRUCTIONS **COMPTON CORNER TV UNIT**

IMPORTANT : READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE OR USE YOUR COMPTON CORNER TV UNIT.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ASSEMBLY:


Assembly should be carried out with this item laying flat, not standing upright.
Assemble on a soft, clean surface to prevent damages.
To erase the numbers printed on the pieces, use the rubber inside the accessories pack.

HEALTH & SAFETY:

DO NOT use this product if any parts are missing, damaged or worn.
DO NOT use this product unless all fixings are secured.
Always use on a level, even surface.

CARE & MAINTENANCE:


Periodically check all screws & fixings to ensure they are secure.
DO NOT push this product as this will cause damage.
Always lift this product with two people to repositions.
Keep any sharp objects away from this product.

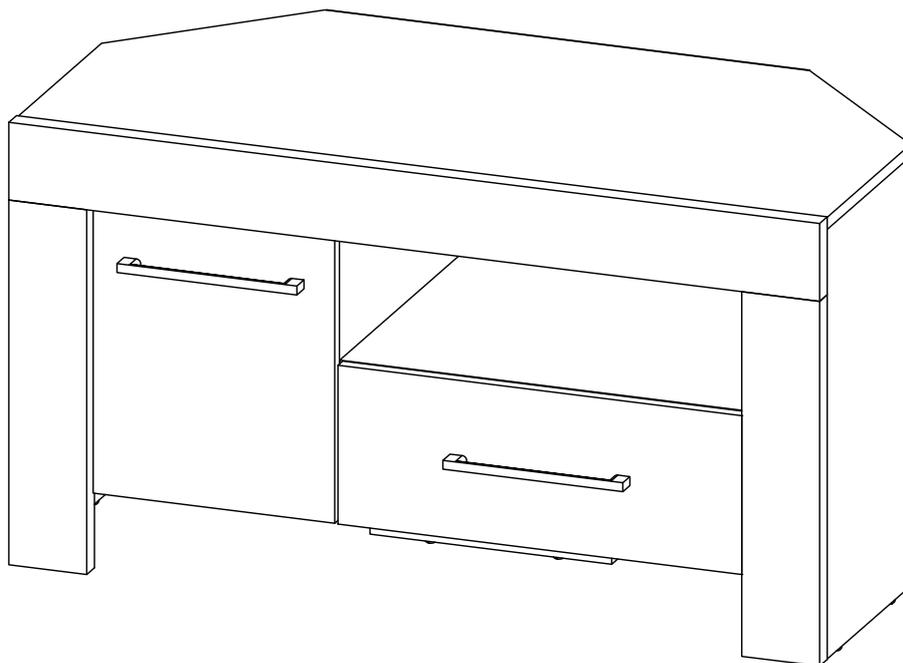


Birlea

Suppliers of inspiration

www.birlea.com

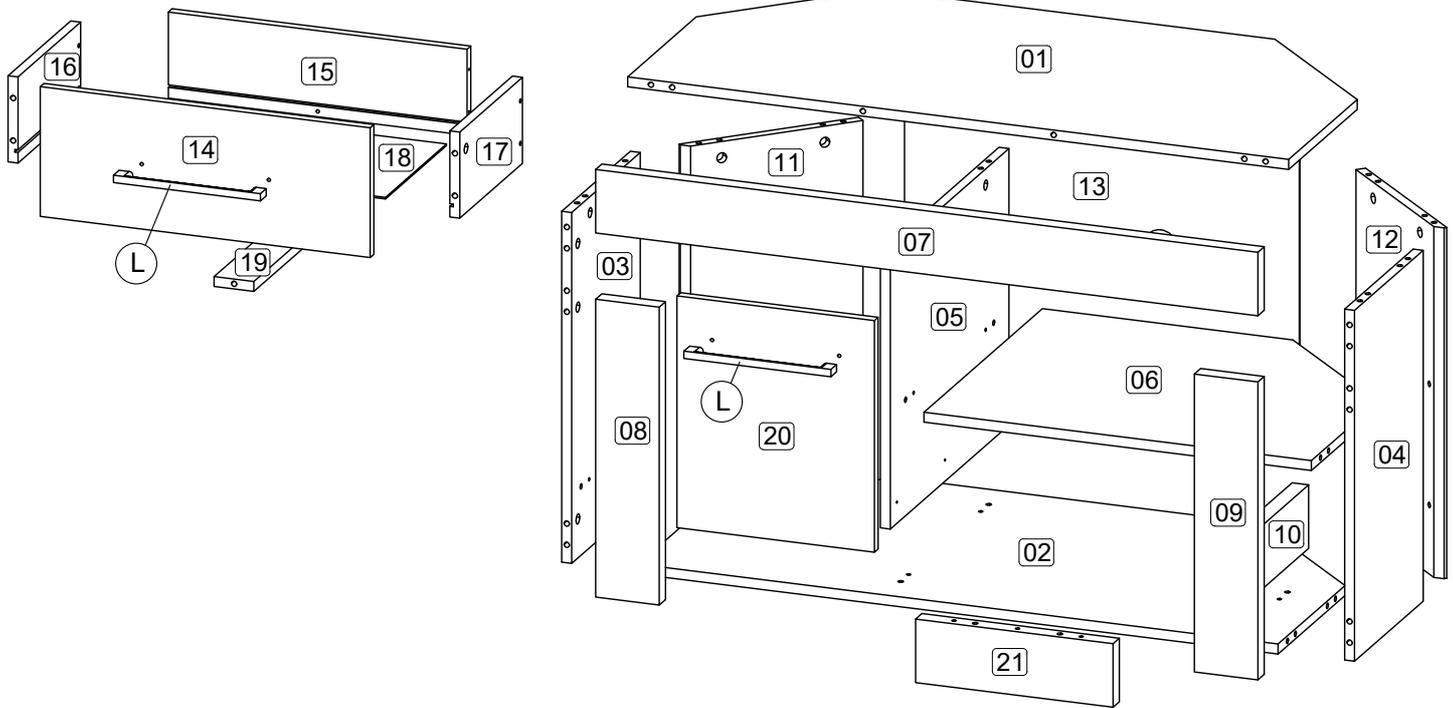

Parts List				Hardware List (BOX 1)			
Part	Description	Box	Qty	Part	Description		Qty
01	Top panel	1	1	A1	Cam lock		32
02	Bottom panel	1	1	A2	Minifix screw		32
03	Side panel (Left)	1	1	A3	Plastic cap		32
04	Side panel (Right)	1	1	B	M8 x 30mm Wood Dowel		40
05	Center panel	1	1	C	M6 x 50mm CSK Cap Wood screw		8
06	Middle panel	1	1	D	Allen key M4		1
07	Top bone	1	1	E	M3.5 x 16mm C.B Screw		28
08	Side bone (Left)	1	1	F	M4 x 32mm C.B Screw		4
09	Side bone (Right)	1	1	G	M4 x 38mm C.B Screw		6
10	Side plate (Right)	1	1	H	M4 x 65mm C.B Screw		3
11	Back side panel (Left)	1	1	I	5/8 NAIL		20
12	Back side panel (Right)	1	1	J	5/8 PVC Nail Leg		10
13	Back panel	1	1	K	S125 - Double Hole Fitting		2
14	Drawer front	1	1	L	PVC Handle 525-192		2
15	Drawer back	1	1	M	Hinges 90 V		2
16	Drawer side (Left)	1	1	N1	10" Drawer slide (Left / Right)		2
17	Drawer side (Right)	1	1	N2	10" Drawer slide (Left / Right)		2
18	Drawer bottom	1	1				
19	Drawer bone	1	1				
20	Door panel	1	1				
21	Center leg panel	1	1				

** You will need a small mallet and a screwdriver for assembly.


** Some screws and wooden dowel may remain.






Birlea

Suppliers of inspiration





Step 1: Prepare these parts for assembly using hardware parts A1, A2, B, E, F, L, M and N1.
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

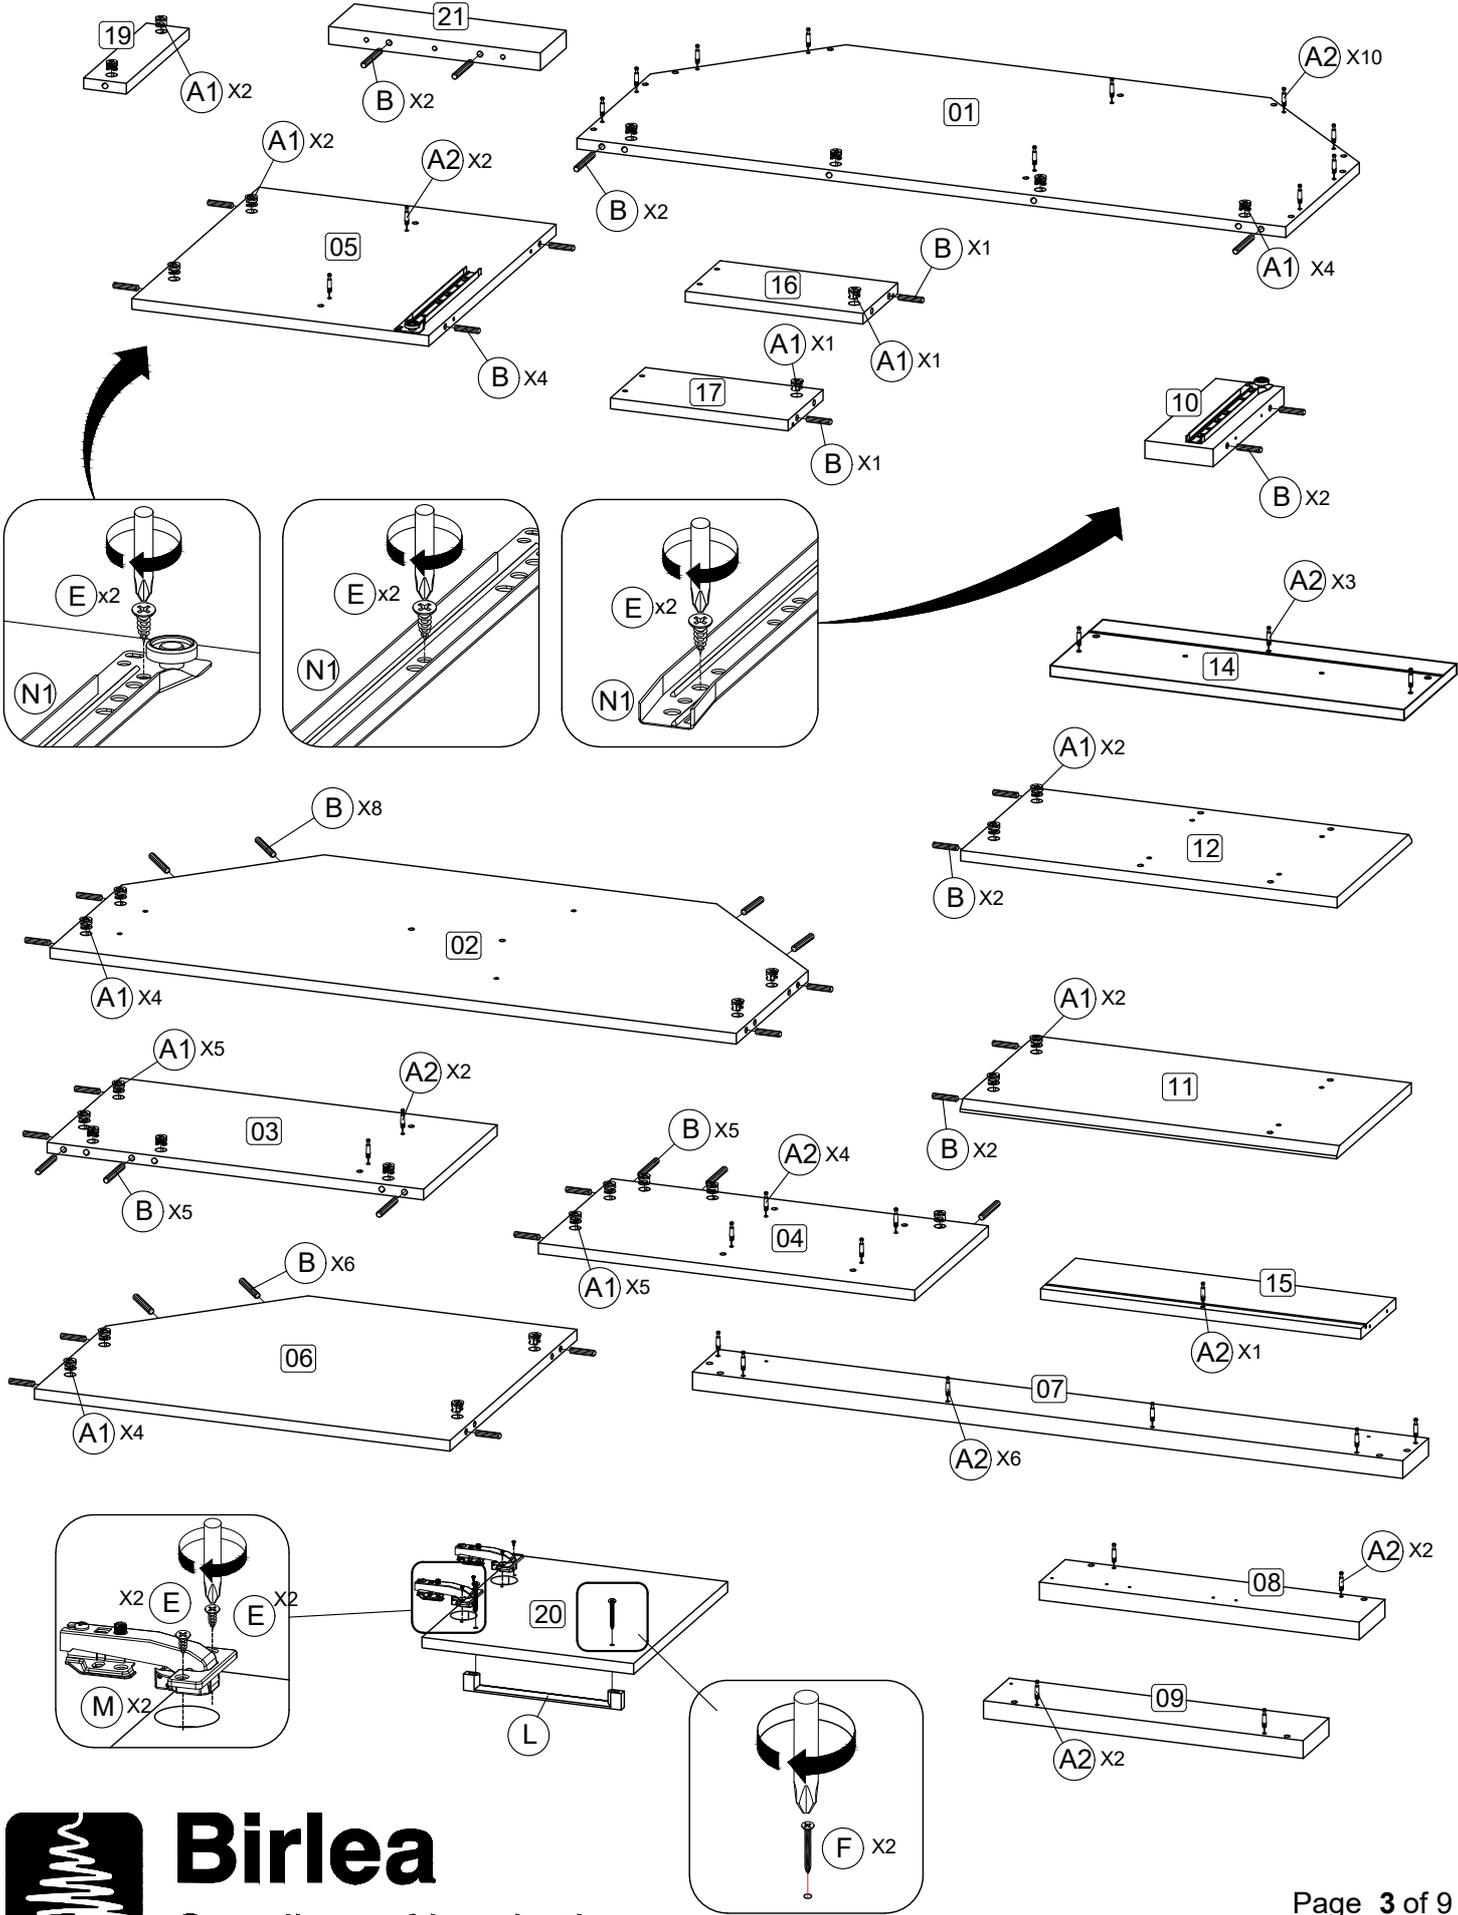




Step 2: Fix hardware K into top bone (7), side bone (8), (9) with hardware E and a screwdriver (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

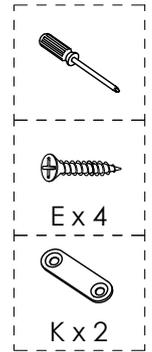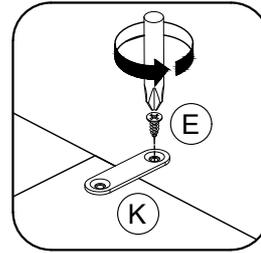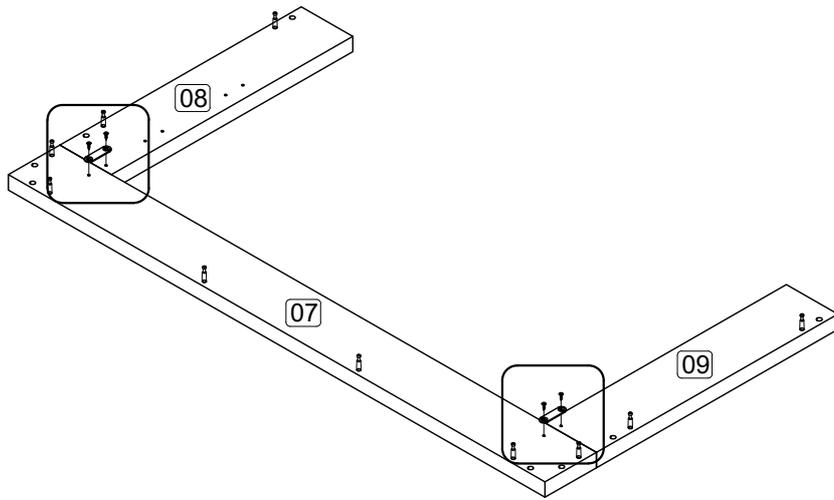

Step 3: Attach center panel (5) to middle panel (6) using hardware A1 and A2 with a screwdriver (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

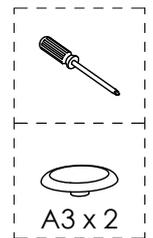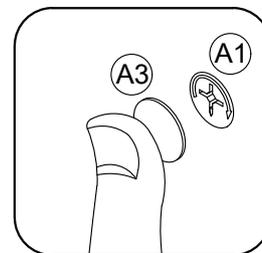
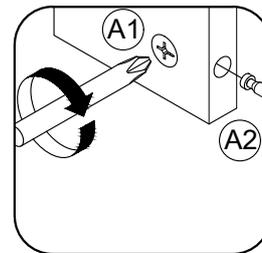
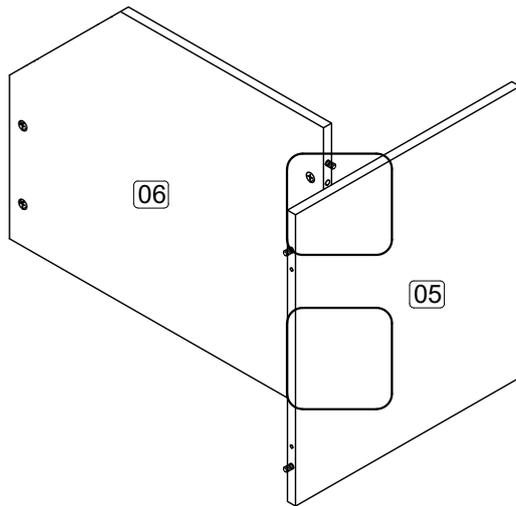


Step 4: Attach center panel (10) to middle panel (2) using hardware G with a screwdriver (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

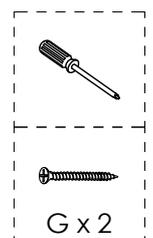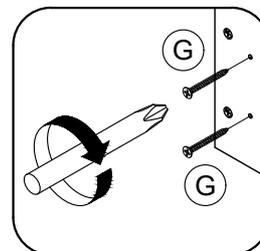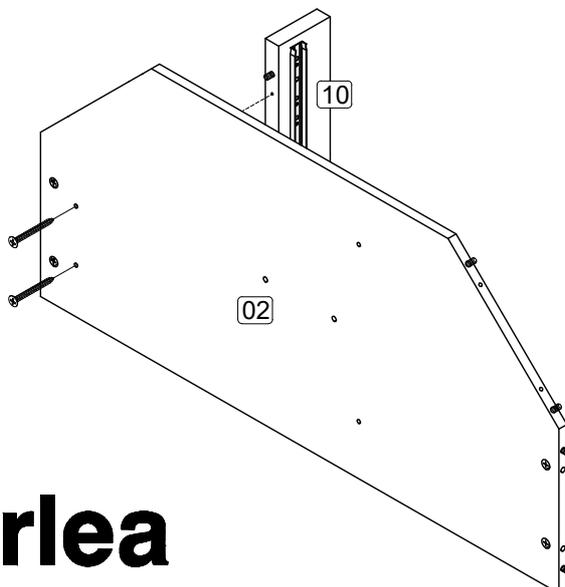





Step 5: Attach bottom panel (2) to center panel (5) using hardware C and D.

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

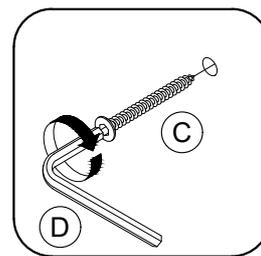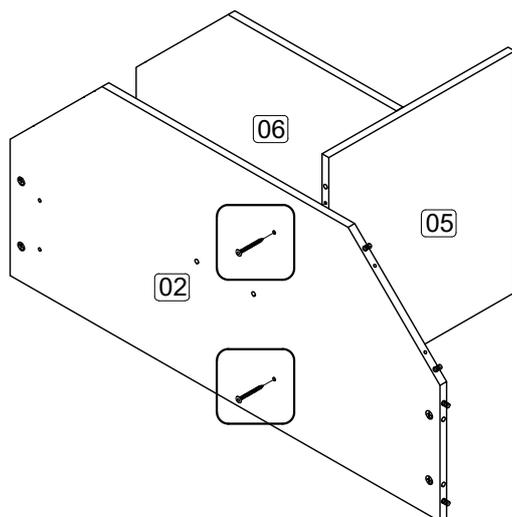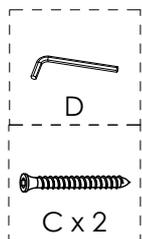





Step 6: Attach side panel (3) and (4) to bottom panel (2) and middle panel (6) using hardware A1 and A2 with a screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

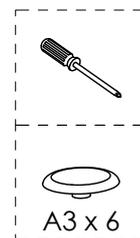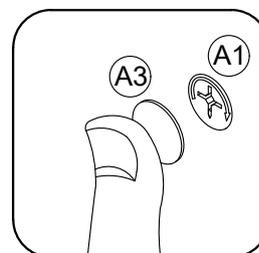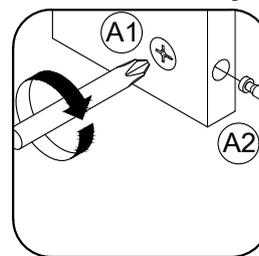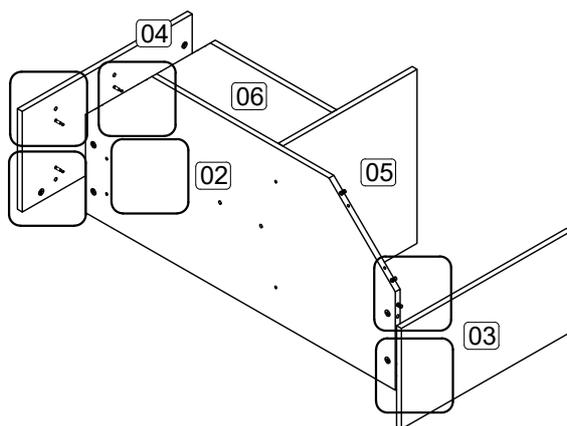

Step 7: Attach back side panel (11) and (12) to bottom panel (2) and middle panel (6) using hardware C and D.

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

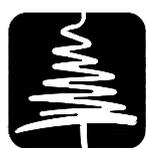
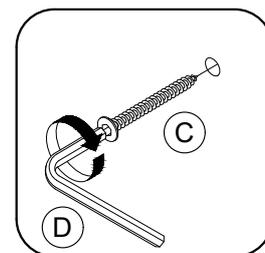
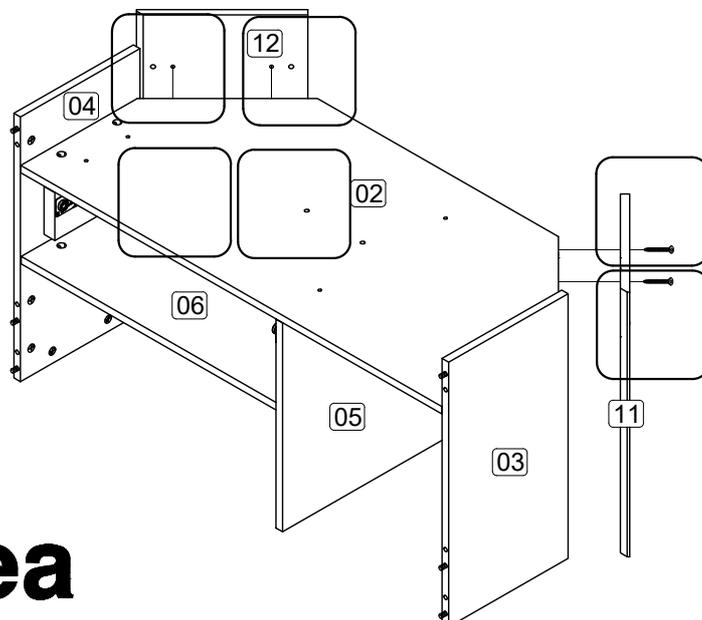
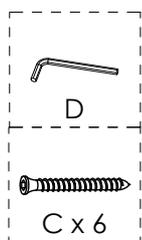


Birlea

Suppliers of inspiration





Step 8: Attach top panel (1) to side panel (3), (4), center panel (5), back side panel (11) and (12) using hardware A1 and A2 with a screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

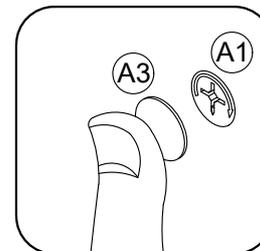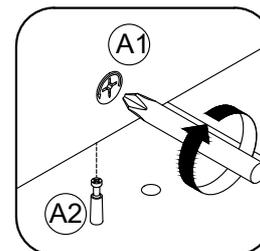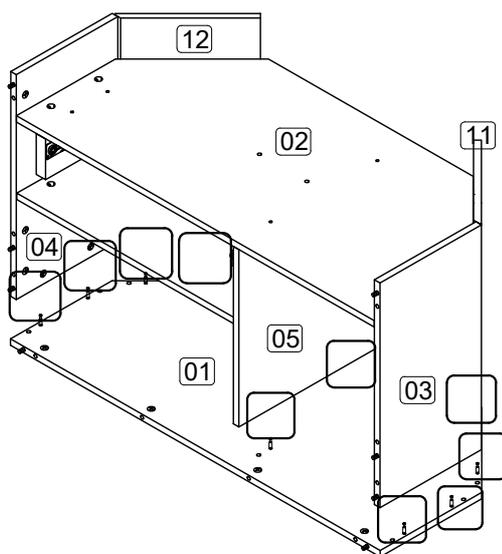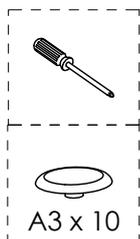





Step 9: Attach top bone (7), side bone (8) and (9) to top panel (1) side panel (3) and (4) using hardware A1 and A2 with a screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

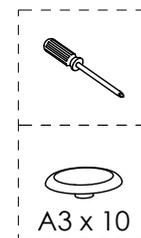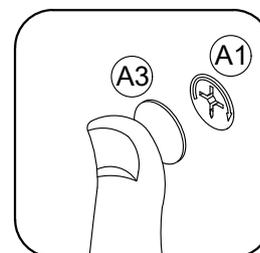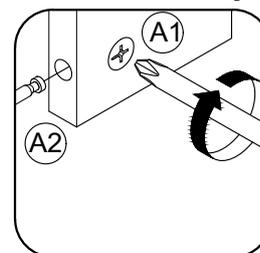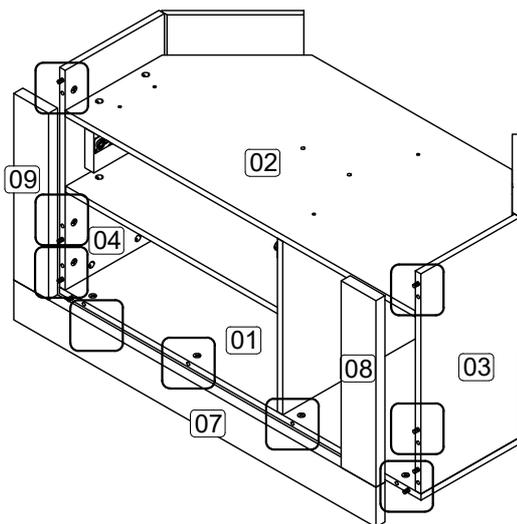

Step 10: Attach center leg panel (21) to middle panel (2) using hardware H with a screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

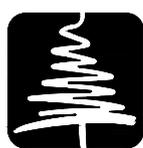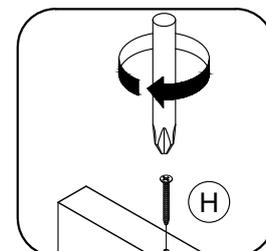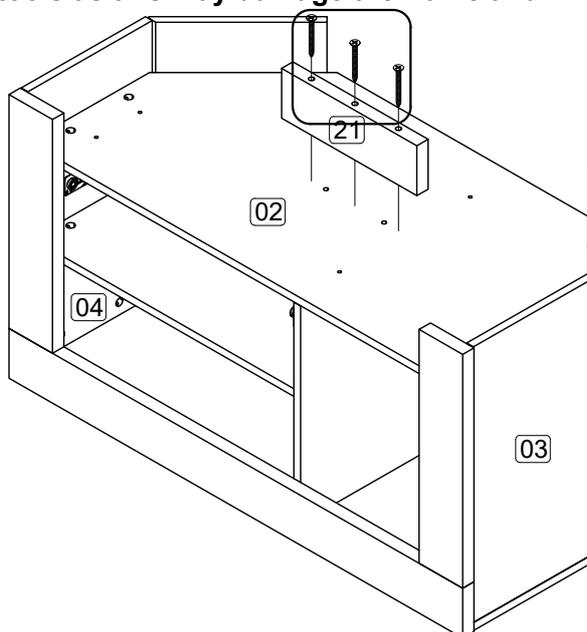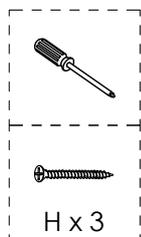


Birlea

Suppliers of inspiration


Step 11: Hit hardware J into bottom of side panel (3), (4) back side panel (11), (12) and center leg panel (21).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

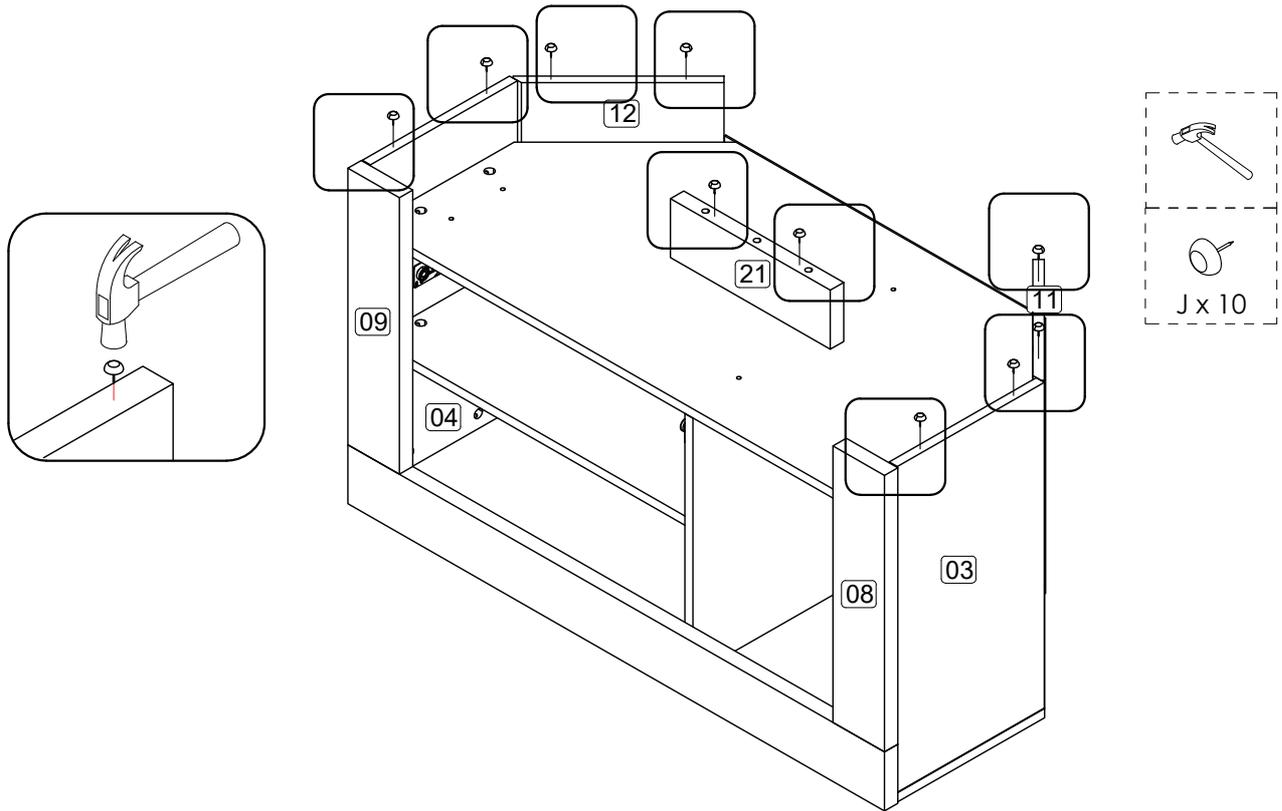

Step 12: Assemble panel (13) to entire body with hardware I.

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

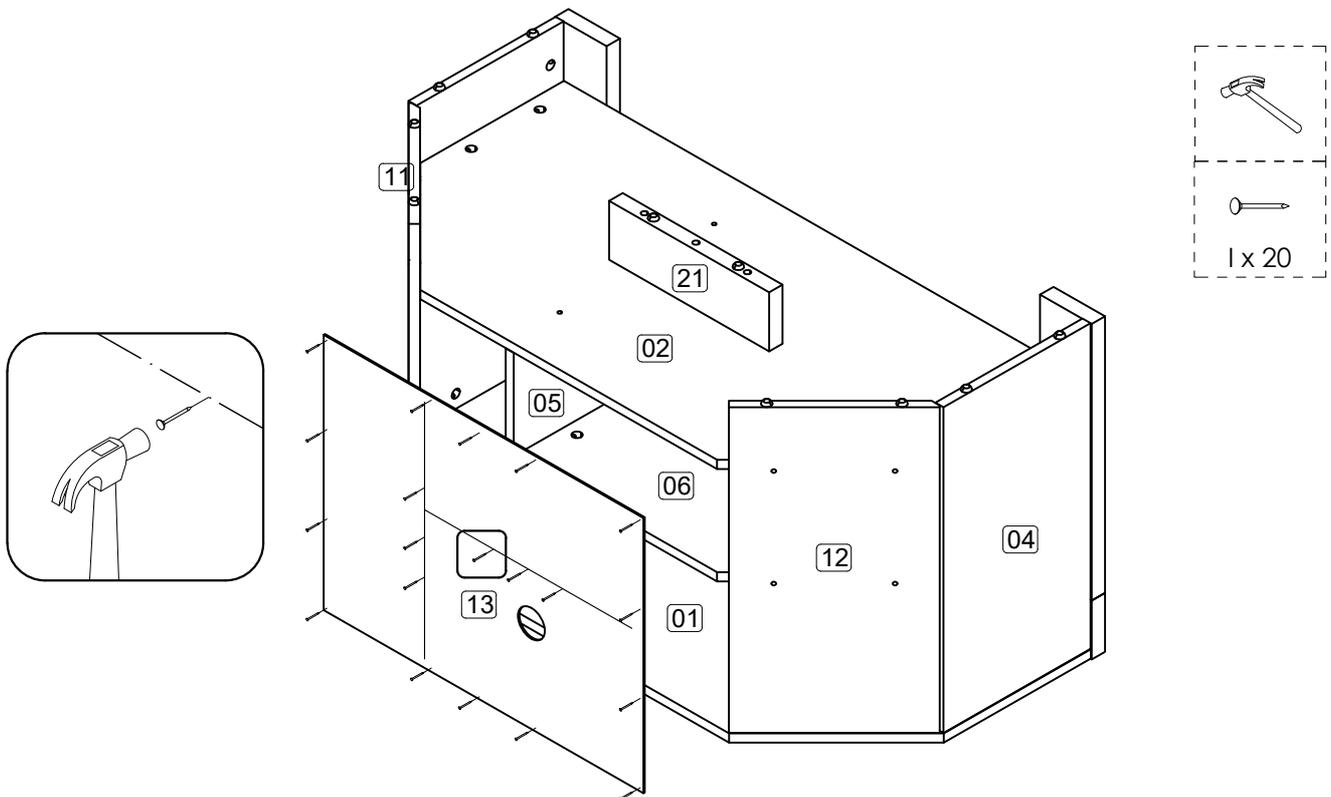

Birlea


Suppliers of inspiration

Step 13: Assemble the drawer components using hardware A3, D, E, F, G, L and N2.

In this step only show one of the drawers.

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

1. Fix hardware L onto panel (14) by using hardware F.
2. Attach the drawer side (16) and (17) to the drawer back (15) using hardware part (G).
3. Slide in the drawer bottom (18).
4. Attach the drawer bone (19) to drawer back (15) then attach the drawer front (14) to drawer side (16), (17) and drawer bone (19) using hardware A1 and A2 with a screwdriver (not provided).
5. Attach the hardware part (N2) to the drawer sides (16) and (17) using hardware part (E).

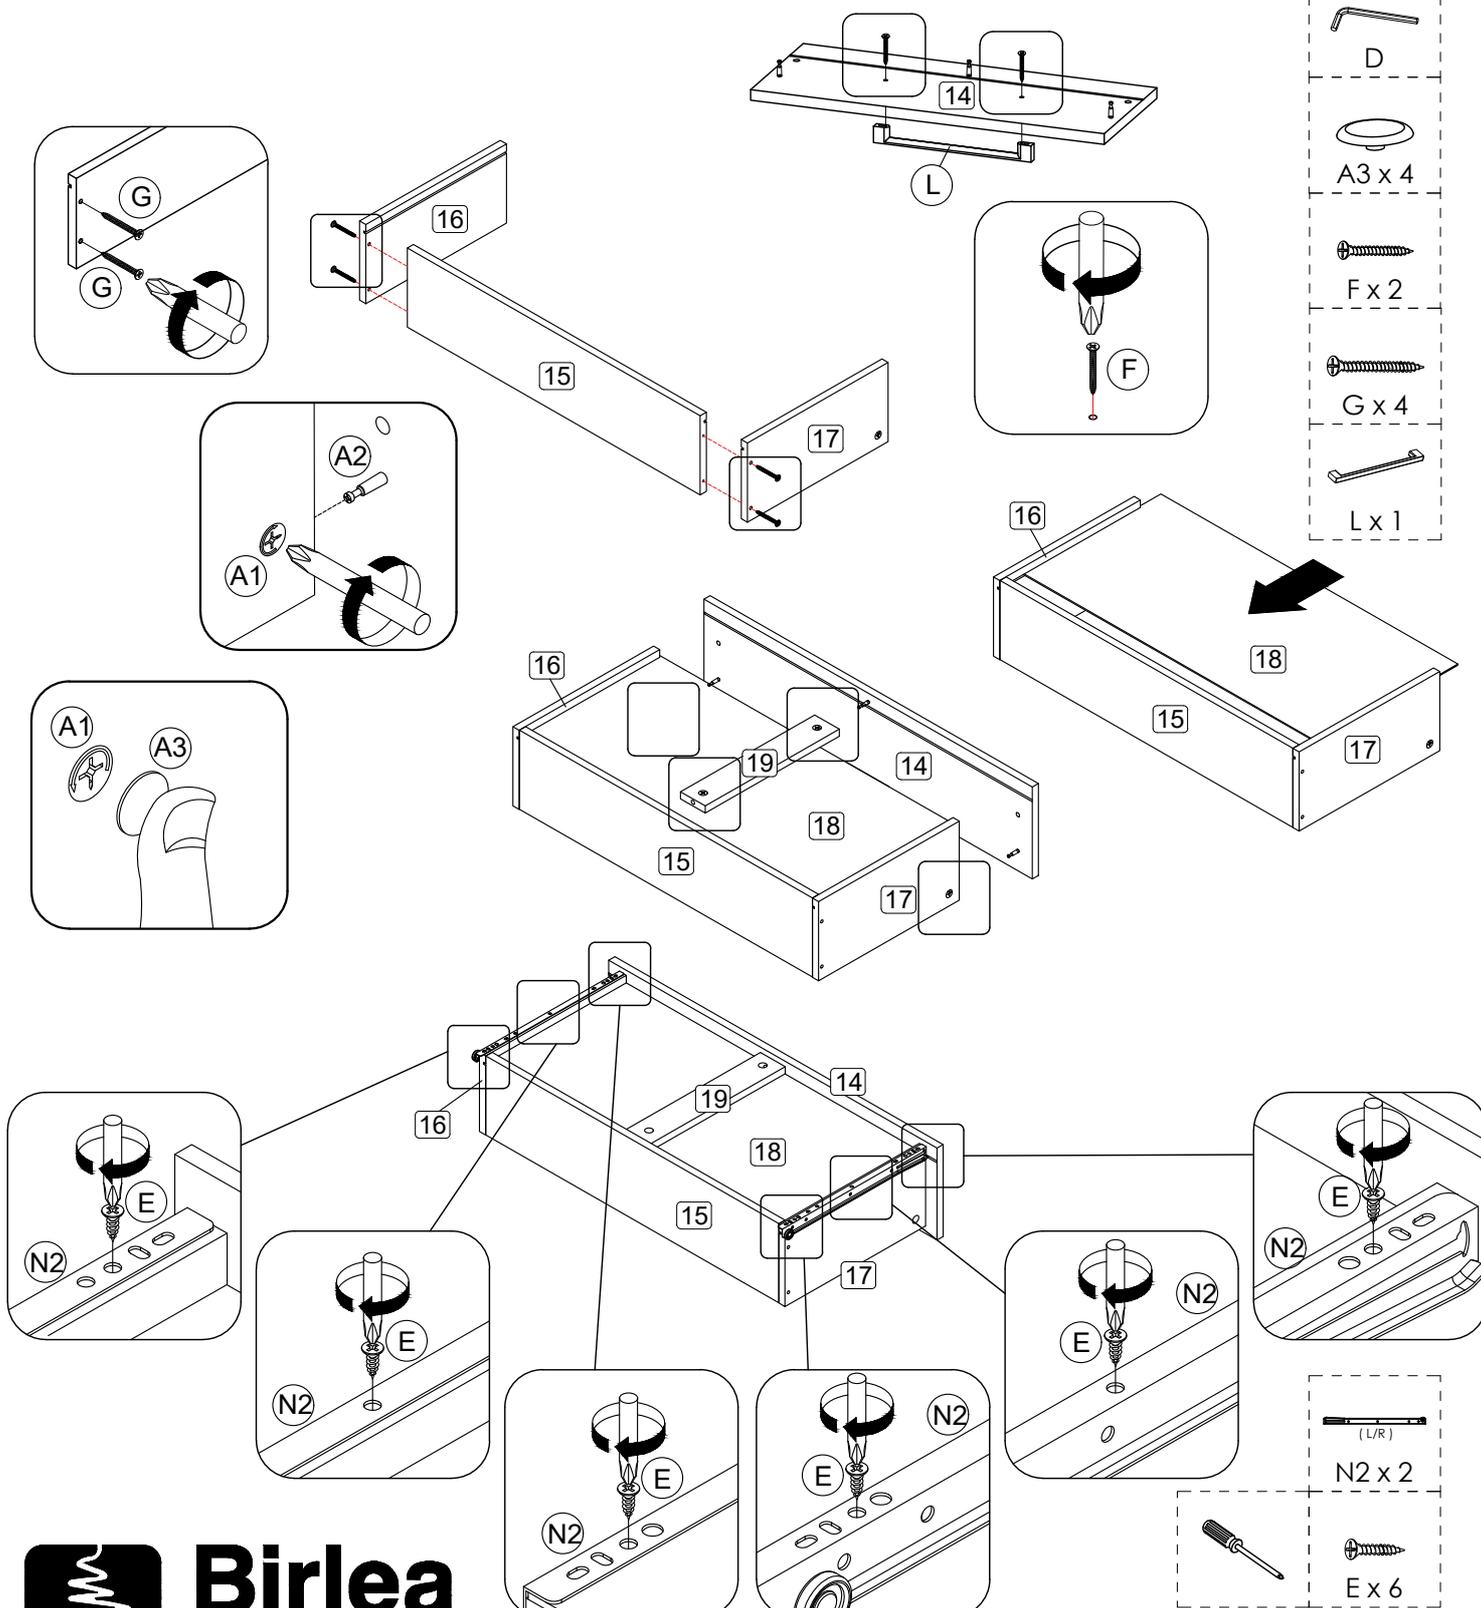


Birlea

Suppliers of inspiration


Step 14: Assemble the drawers in place along the drawer slides.

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

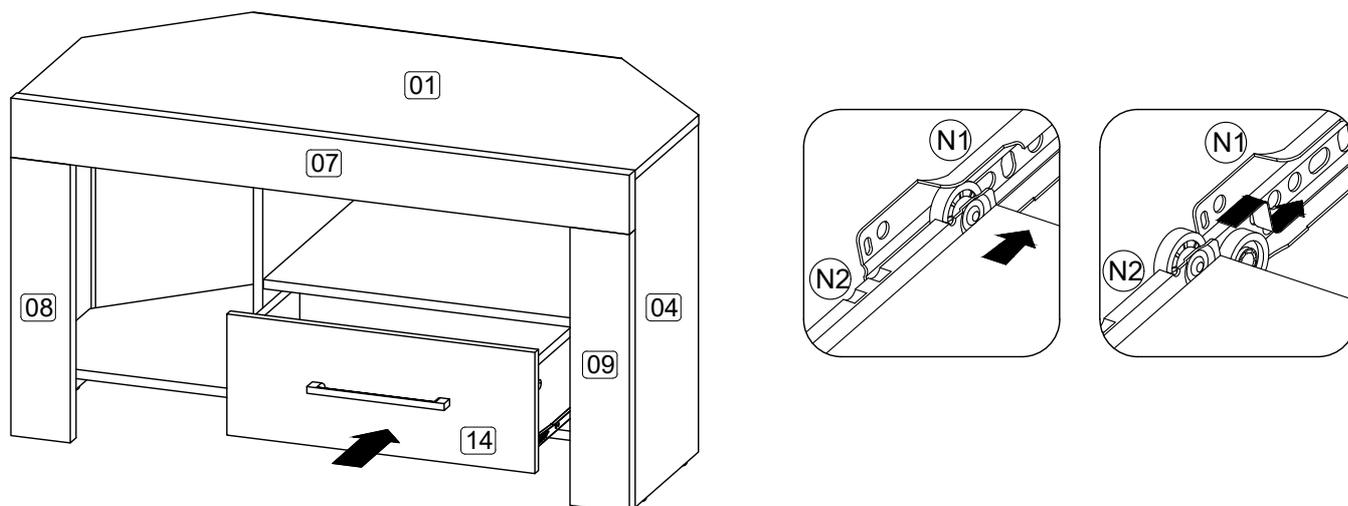

Step 15: Attach door panel (20) to side bone (8) using hardware E with a screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

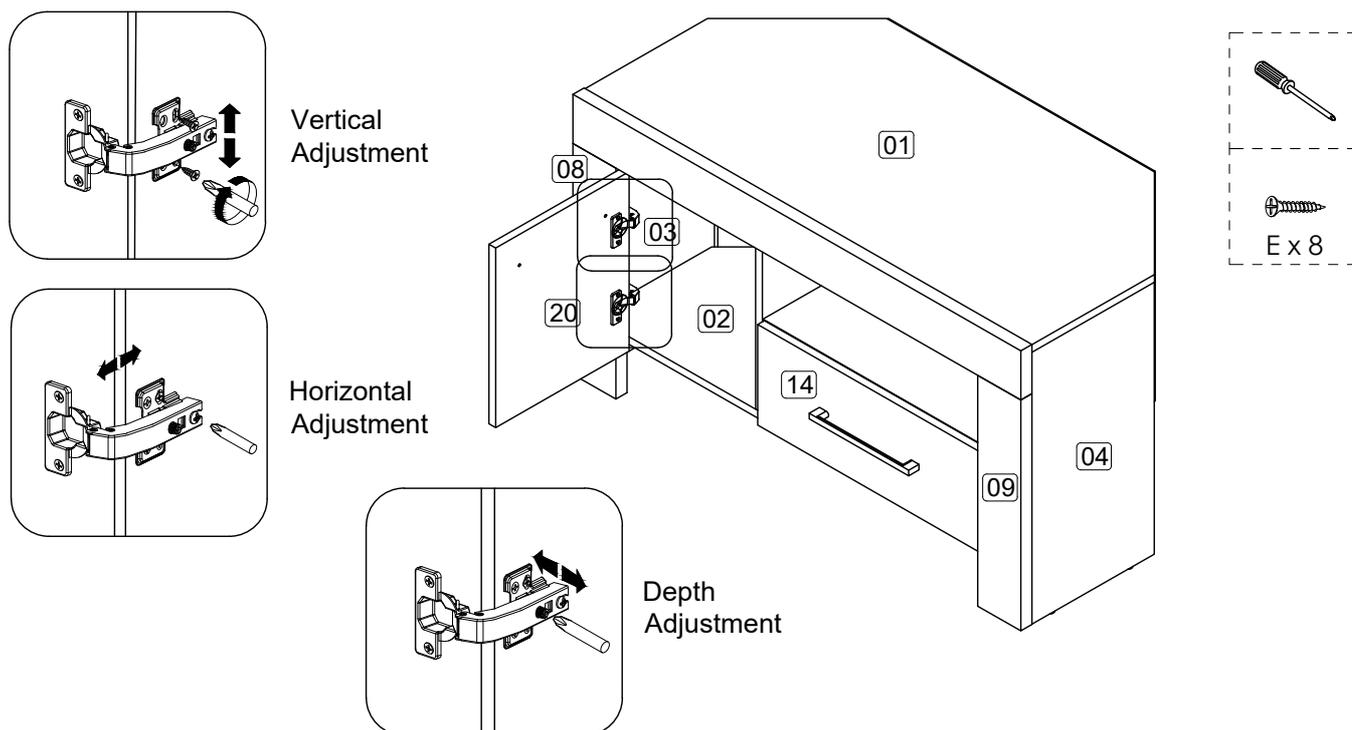

Additional Information:

- For complete product information, images and dimension diagrams please visit the website www.birlea.com
- If you have any issues with your item please contact the retailer directly you purchased it from who will be able to resolve any issues with Birlea.
- Why don't you send us photos of your assembled furniture to info@birlea.com to be shared in our #birleahome feature on instagram.



Birlea

Suppliers of inspiration