
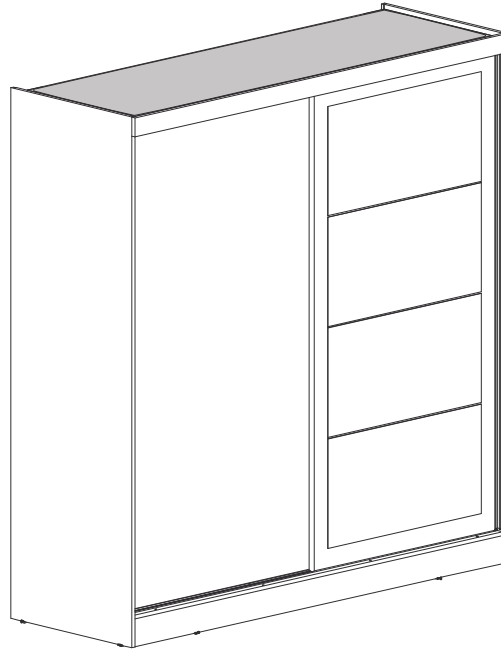


NEVADA 2 DOOR SLIDER WARDROBE ASSEMBLY INSTRUCTIONS

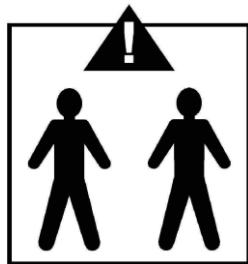



IMPORTANT FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER



CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

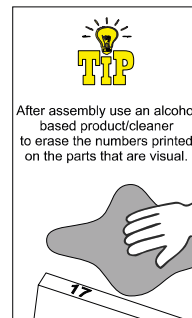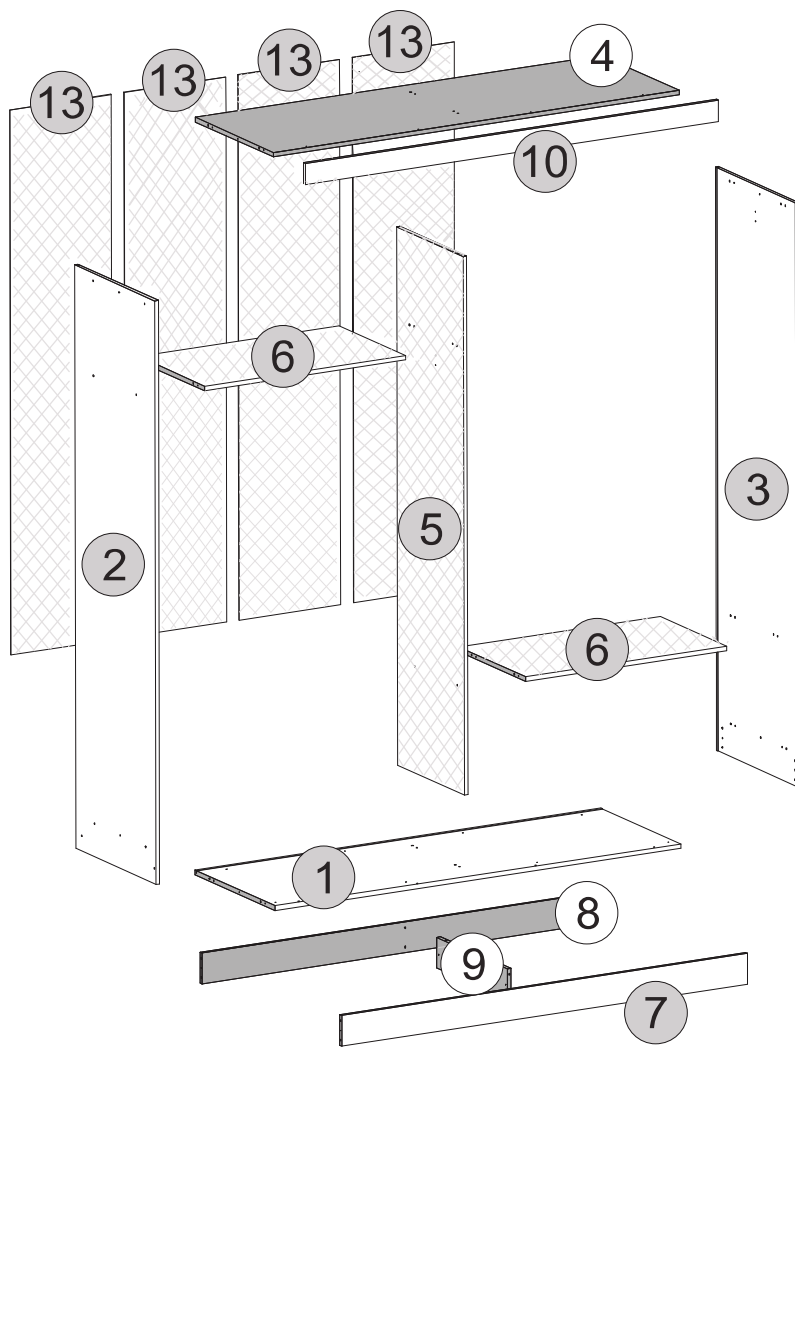




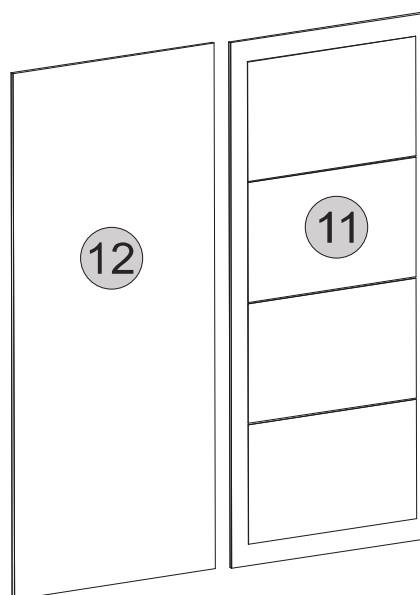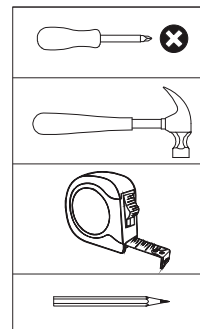



























TOOLS REQUIRED



Please Note:
The below parts have all been stamped with the part number to help identify them during assembly.

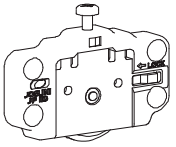
Part Number	Part Description	Quantity	Carton
1	Base Panel	1	1/3
2	Left Side	1	2/3
3	Right Side	1	2/3
4	Top Panel	1	1/3
5	Division Panel	1	2/3
6	Shelf	2	1/3
7	Front Baseboard	1	1/3
8	Back Baseboard	1	1/3
9	Crossbeam	1	1/3
10	Frame	1	2/3
11	Mirrored Door	1	3/3
12	Door	1	3/3
13	Back Panel	4	2/3



FITTINGS LIST


A x 4  Cam Bolt 32xØ6mm 1/+	B x 4  Can Nut Ø15 mm 1/+	C x 28  Screw Ø4 x 14 mm 2/+	D x 34  Triangle Support Angle 2/+	E x 30  Dowel Ø6 x 30 mm 2/+
F x24  Screw Ø4 x 50 mm 2/+	G x 1  Glue 10g 1/+	H x 45  Nail 10x10 2/+	I x 11  Back Panel Bracket 2/+	J x 10  Metalic Support 18x18 "L" 1/+
K x 4  Washer Ø16x7 mm 1/+	L x 10  Plastic Foot L 19x17x8mm Ø2mm 2/+	M x 4  Support Pipe Oblongo Plastic	N x 2  Screw Ø3,5 x 30 mm 1/+	O x 24  Screw Ø3,5 x 14mm 2/+
P x 34  Screw Ø3 x 16 mm 2/+	Q x28  Hole Plugs 19mm 2/+	R x 8  Screw Ø3.5 x 35 mm 1/+	B1 SLIDING SYSTEM KIT x2   Lower Pulley x4 Sliding System Brake x4  Upper Pulley x4  Screw Ø3.5 x 16 mm x28 (2/+)	
S x 2  Strap 200x20x1mm	T x 2  Dowel Ø6 x 70 mm 1/+	U x 12  Silicone Drop Ø6x2mm	V x 1  Lower Rail 1754x42x5mm Cart. 1/3	W x 2  Hanging Rail 861x27x16 mm Cart. 1/3
Y x1  Gabarito MDF 80x29x3mm	Z x 2  Handle Profile 1760x38x16mm Cart. 2/3	A1 x 2  Back Panel Strip H 1787x19x7mm Cart. 2/3	C1 x 8  Hole Plugs Lineo 19mm 2/+	

TIPS FOR FITTINGS CAM-LOCKS

WHEN FITTING CAM NUT, ENSURE STARTING POSITION IS CORRECT BEFORE YOU INSERT CONNECTING CAM BOLT TURN CLOCKWISE UNTIL SECURE




 CORRECT  WRONG

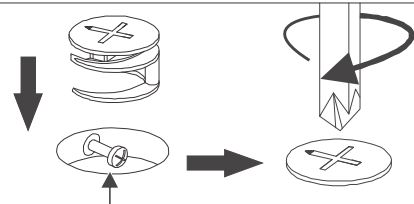

Cam bolt head needs to be in centre

CAMBOLT

Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example beside)

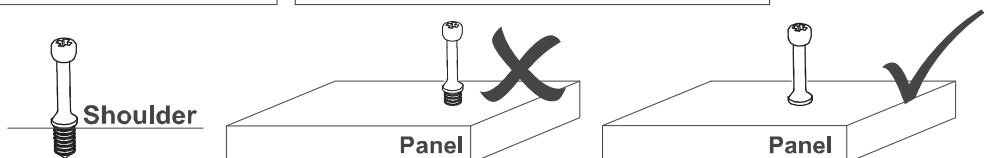





STEP 1



PARTS REQUIRED

7 - FRONT BASEBOARD	x1
8 - BACK BASEBOARD	x1
9 - CROSSBEAM	x1

HARDWARE REQUIRED

C		02
H		06
J		02
L		06

TOOLS REQUIRED

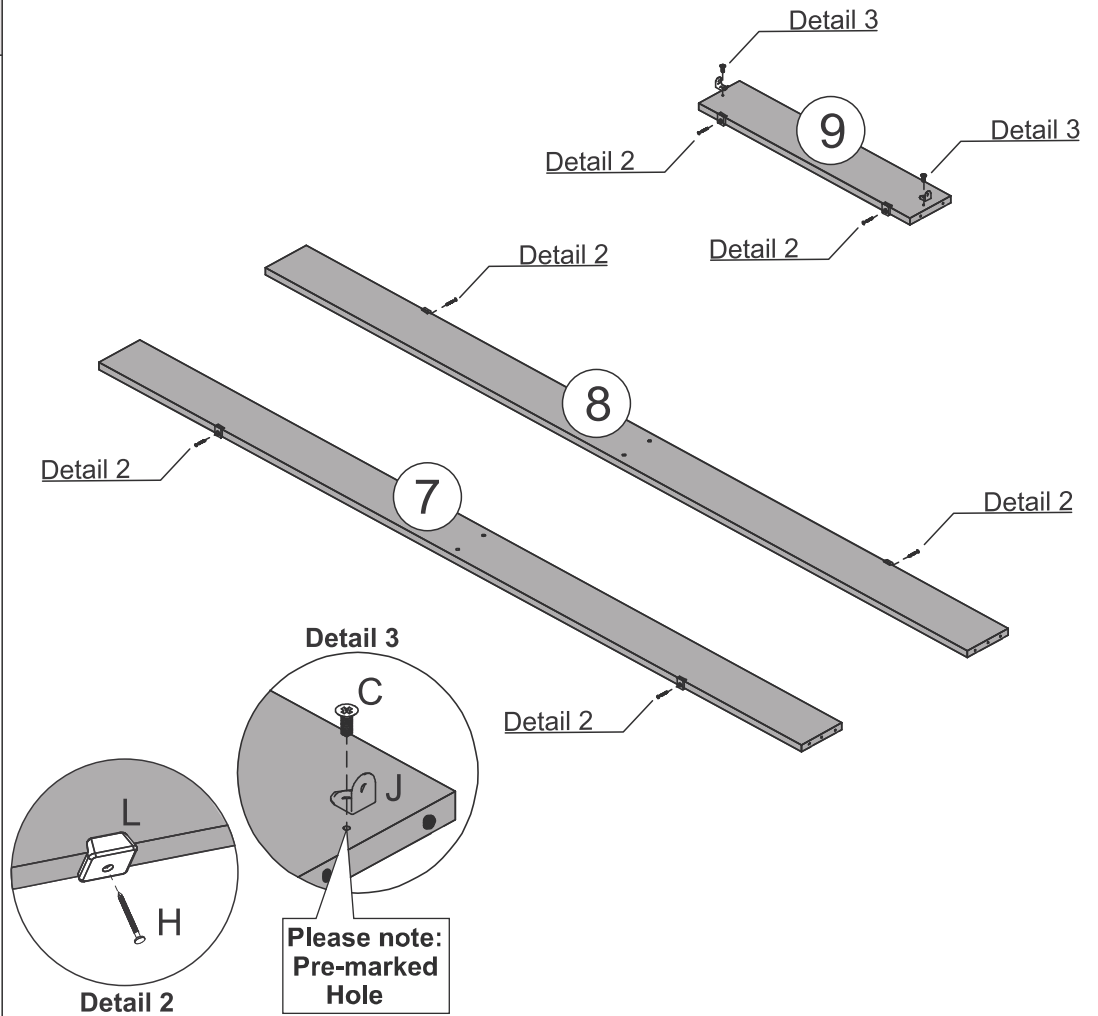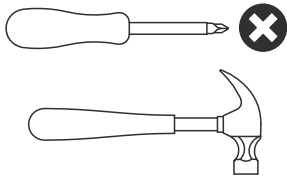




STEP 2



PARTS REQUIRED

7 - FRONT BASEBOARD	x1
8 - BACK BASEBOARD	x1
9 - CROSSBEAM	x1

HARDWARE REQUIRED

E		12
G		01
T		02

TOOLS REQUIRED

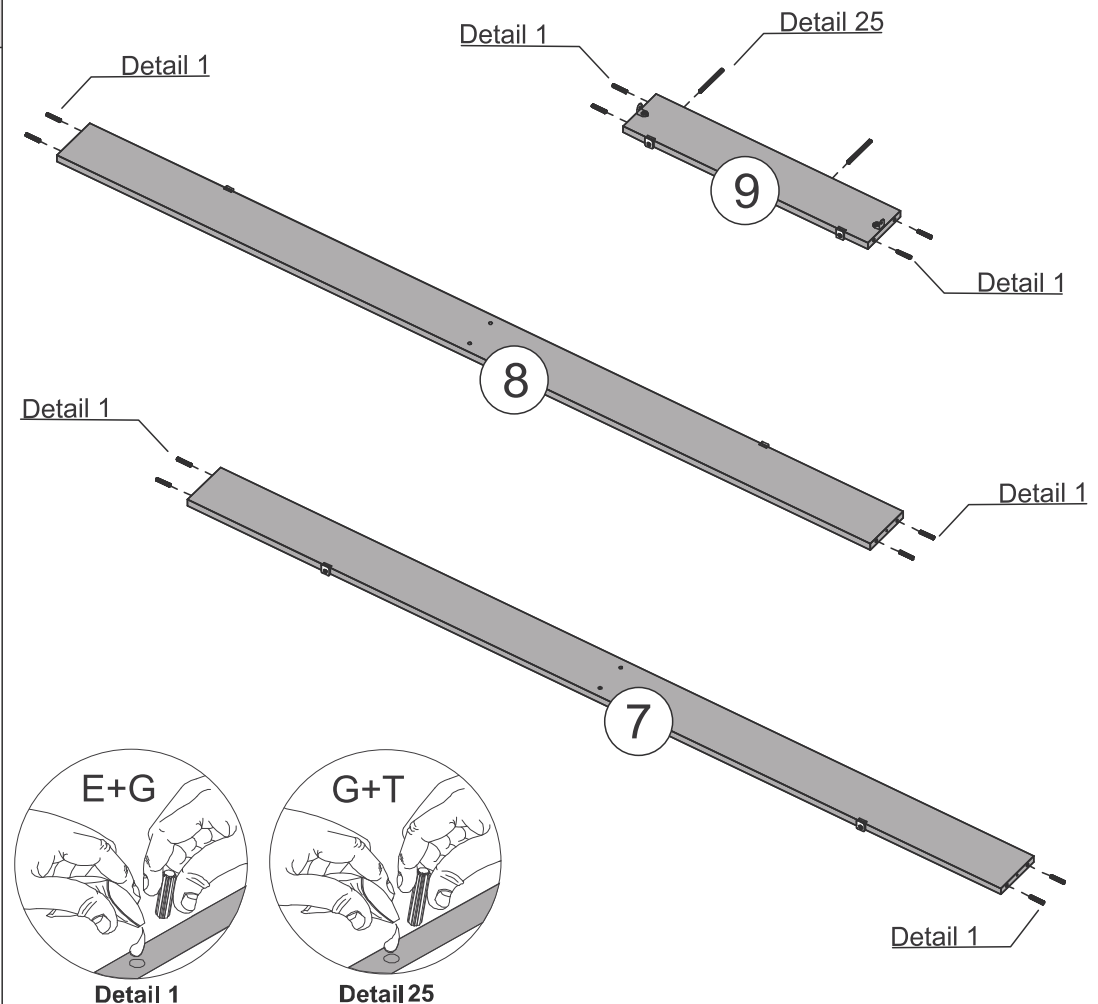

STEP 3


PARTS REQUIRED

1 - BASE PANEL x1




HARDWARE REQUIRED

A  02


E  04

G  01


TOOLS REQUIRED

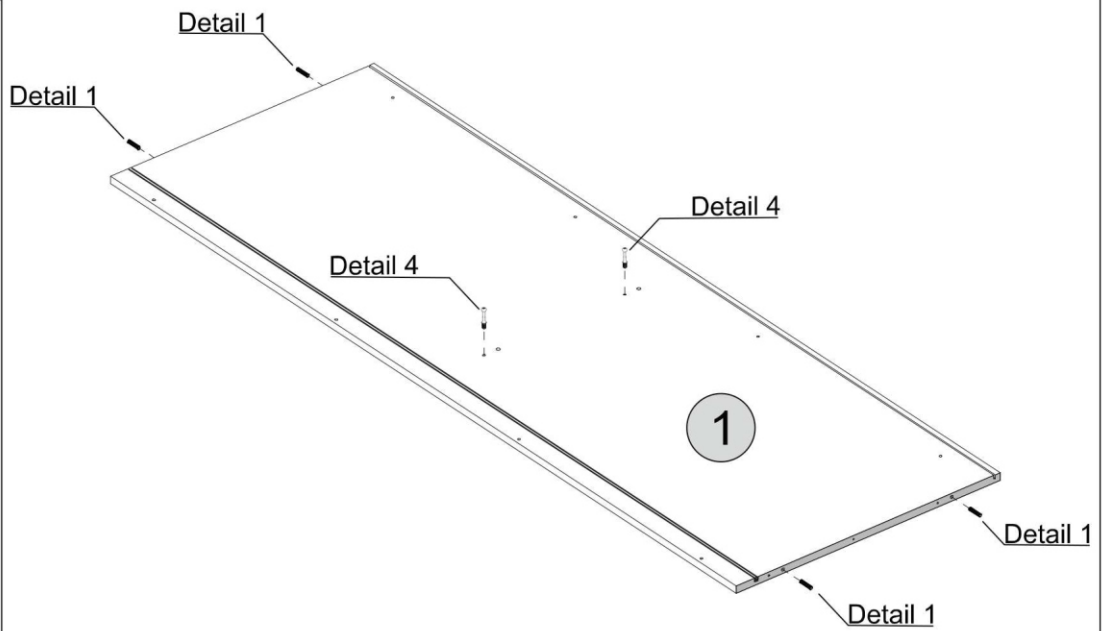

Detail 1

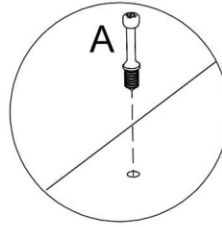

Detail 4

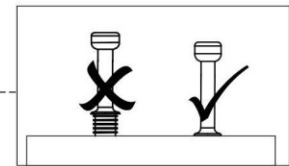


STEP 4

PARTS REQUIRED





1 - BASE PANEL x1

HARDWARE REQUIRED

O  04

V  01

TOOLS REQUIRED

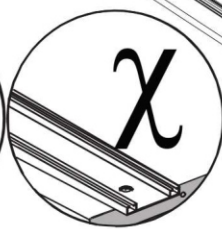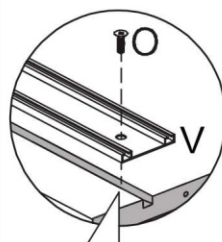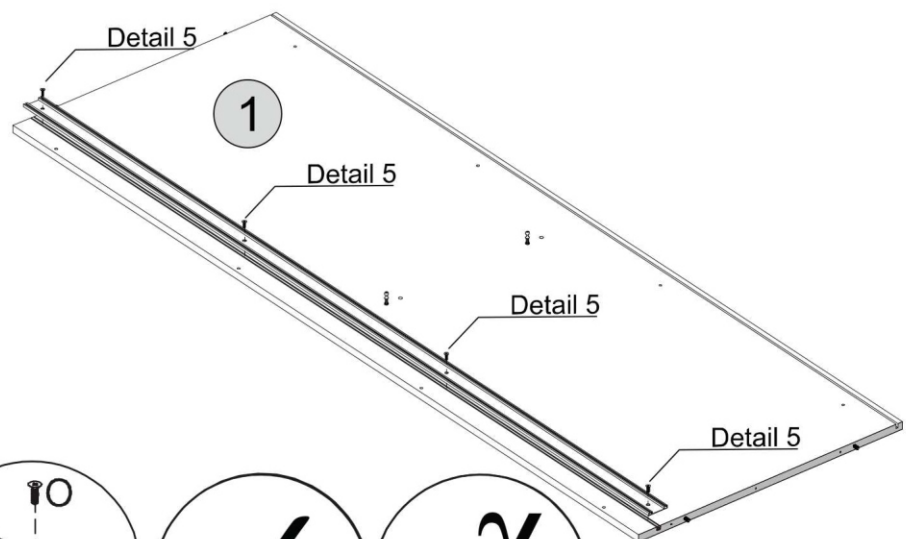

Please use the Groove as a guide for fixing





Detail 5

STEP 5



PARTS REQUIRED

6 - SHELF	x2
10- FRAME	x1

HARDWARE REQUIRED

C		02
E		08
G		01
J		02

TOOLS REQUIRED

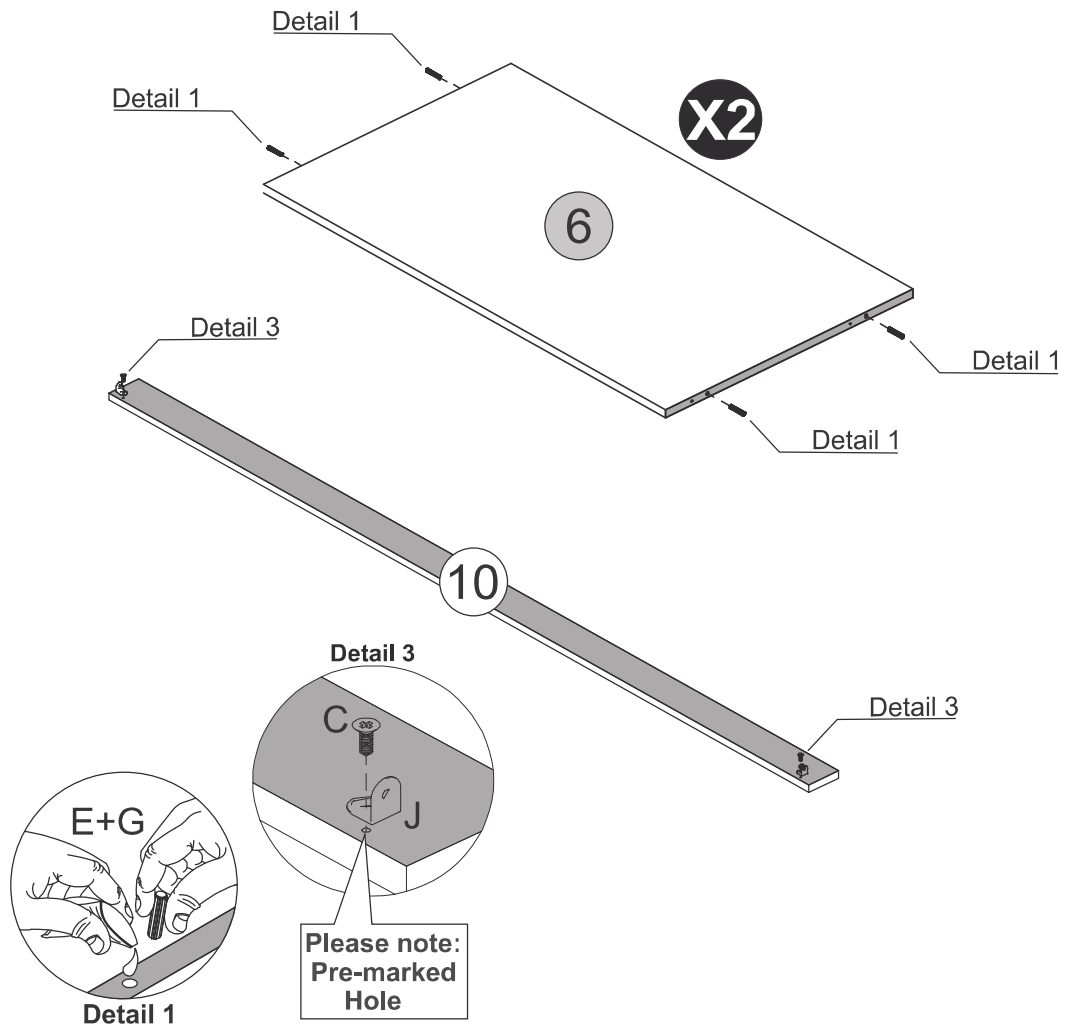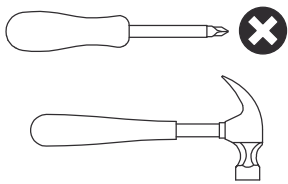





STEP 6



PARTS REQUIRED

2 - LEFT SIDE	x1
---------------	----

HARDWARE REQUIRED

C		02
H		02
L		02
M		01

TOOLS REQUIRED

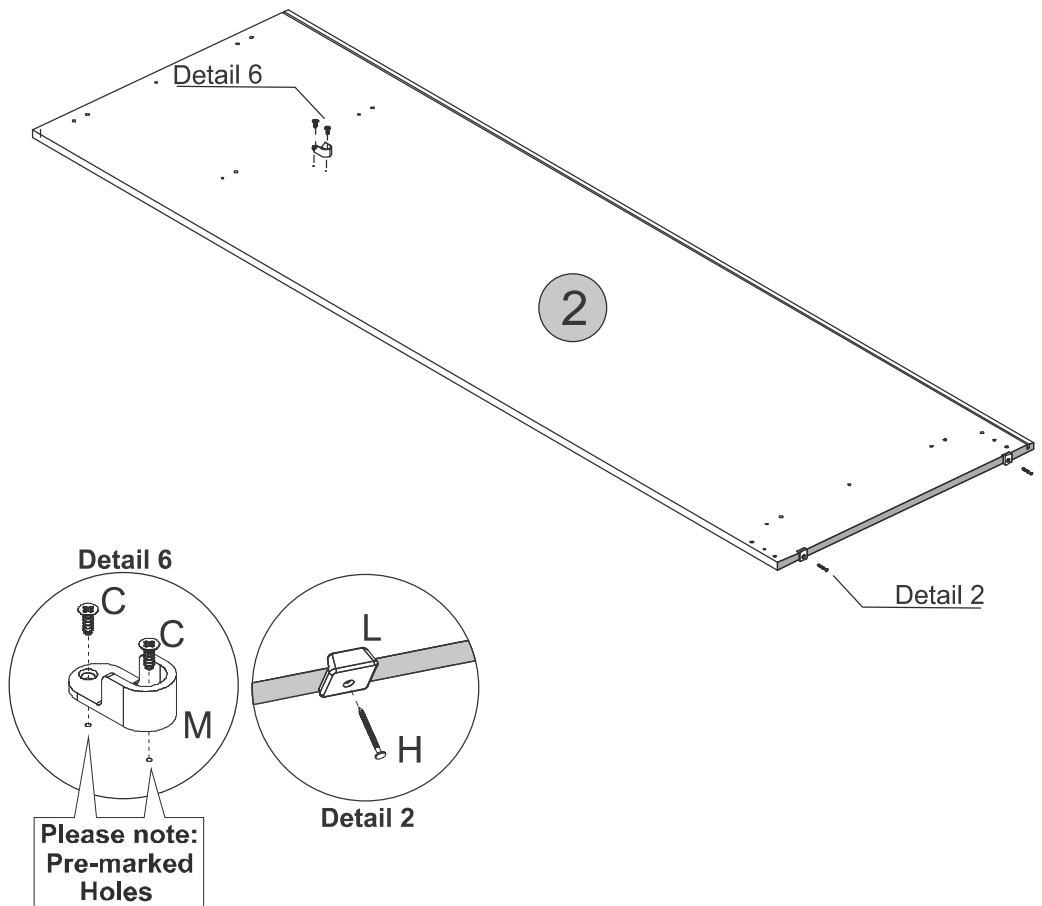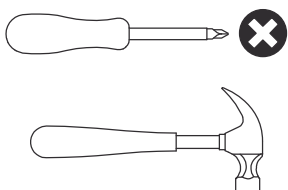


STEP 7


PARTS REQUIRED


3 - RIGHT SIDE x1

HARDWARE REQUIRED





C  02

H  02

L  02

M  01

TOOLS REQUIRED

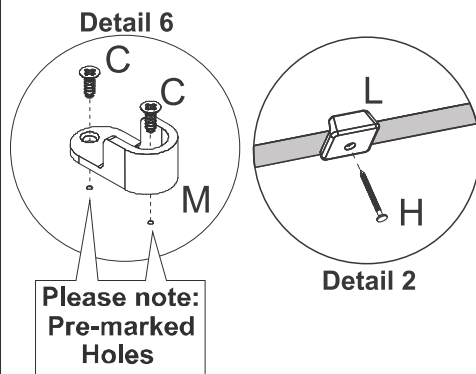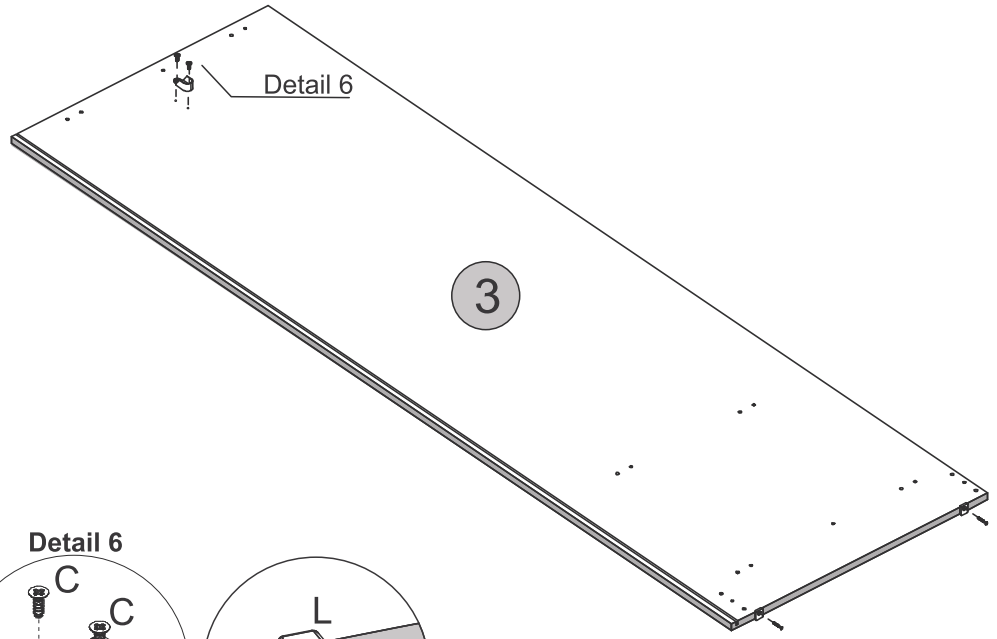


STEP 8

PARTS REQUIRED

5 - DIVISION PANEL x1

HARDWARE REQUIRED





C  02

E  02

G  01

M  01

TOOLS REQUIRED

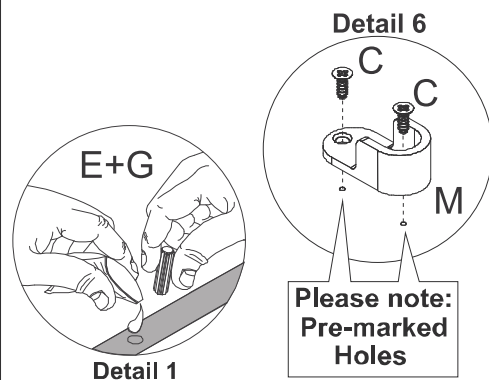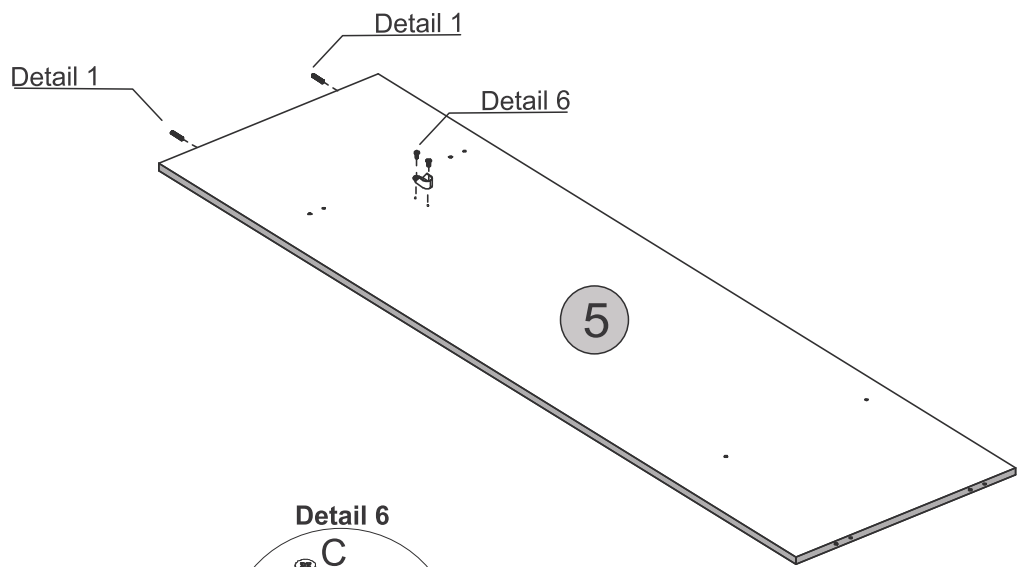


STEP 9

PARTS REQUIRED



5 - DIVISION PANEL x1

HARDWARE REQUIRED

C  02

M  01

TOOLS REQUIRED

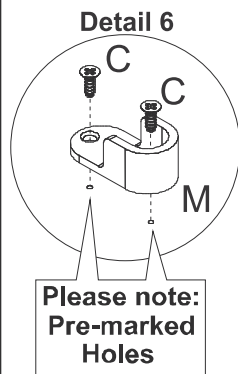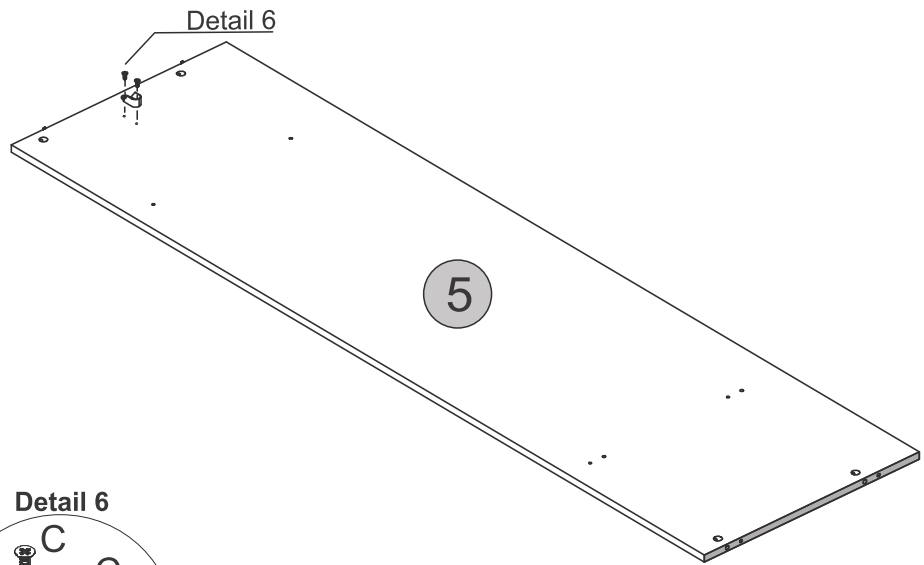

STEP 10

PARTS REQUIRED

4 - TOP PANEL x1

HARDWARE REQUIRED





C  04

E  04

G  01

J  04

TOOLS REQUIRED

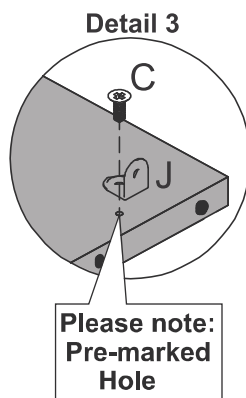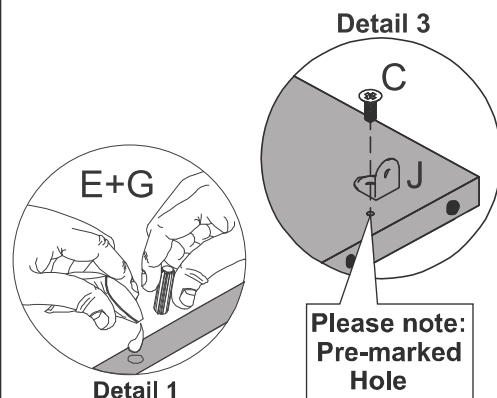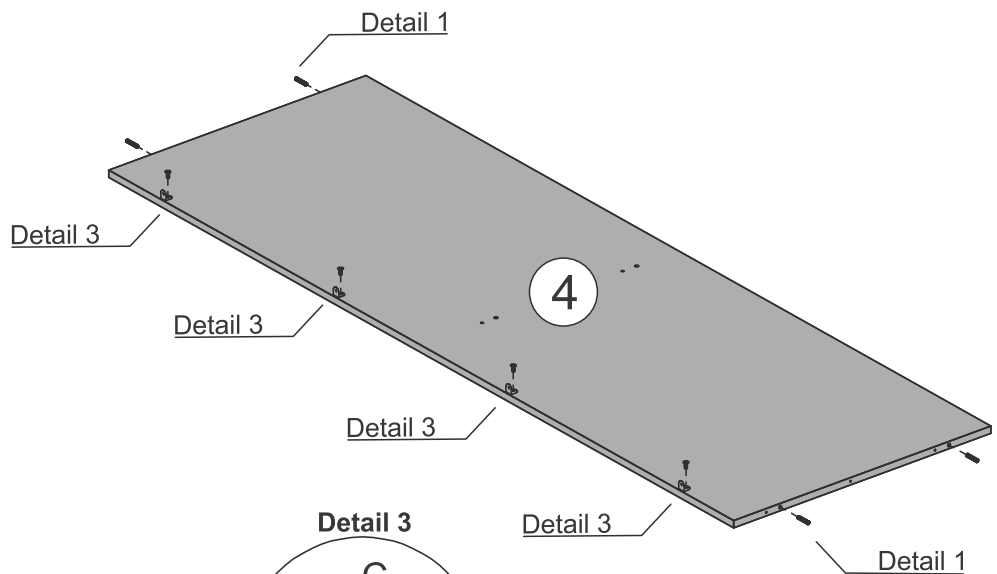



STEP 11

PARTS REQUIRED



4 - TOP PANEL x1

HARDWARE REQUIRED

O  05

X  01

TOOLS REQUIRED

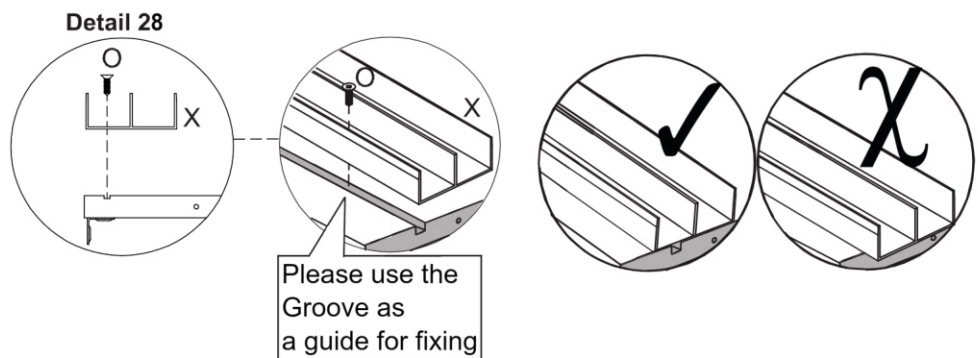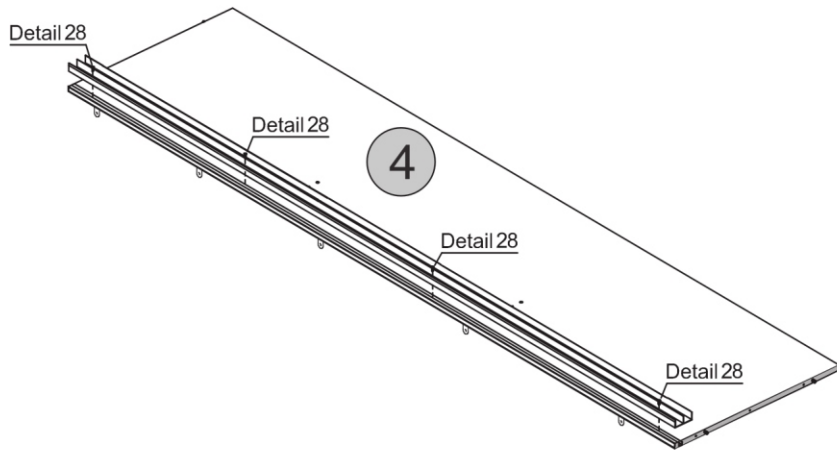



STEP 12


PARTS REQUIRED

4 - TOP PANEL x1



HARDWARE REQUIRED

A  02

O  05

X  01

TOOLS REQUIRED

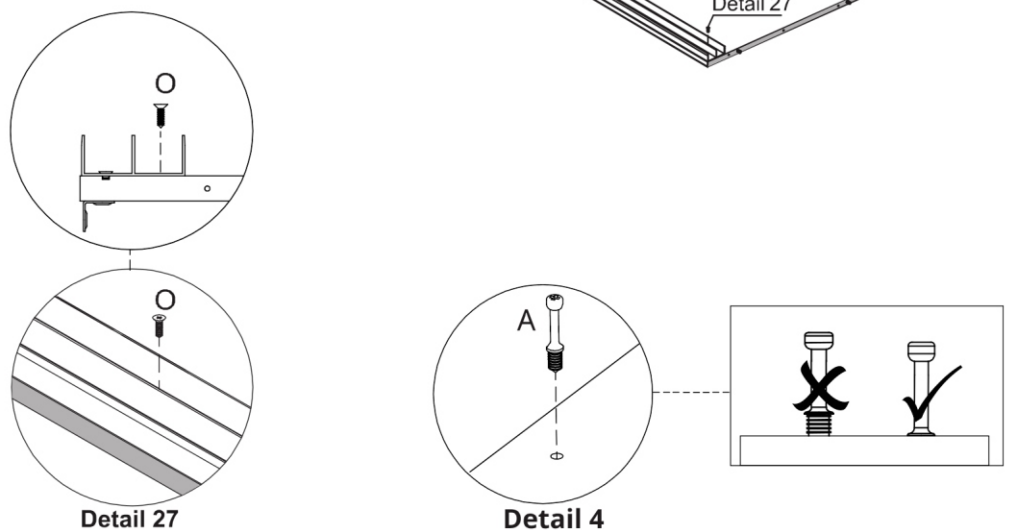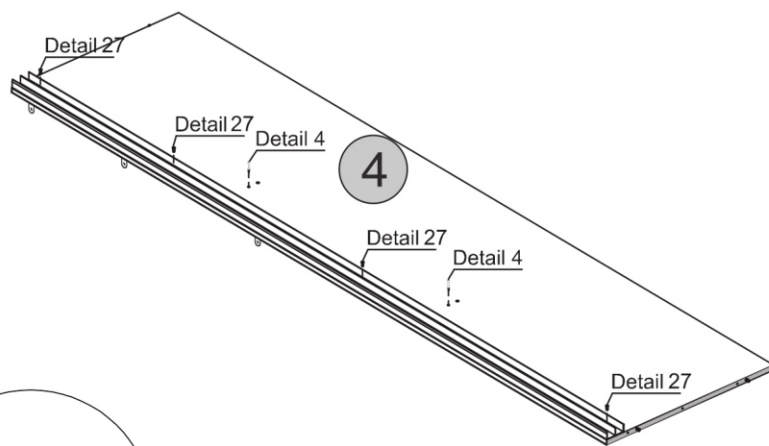



STEP 13




PARTS REQUIRED

7 - FRONT BASEBOARD	x1
8 - BACK BASEBOARD	x1
9 - CROSSBEAM	x1


HARDWARE REQUIRED

C		02
G		01

TOOLS REQUIRED

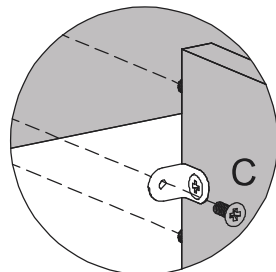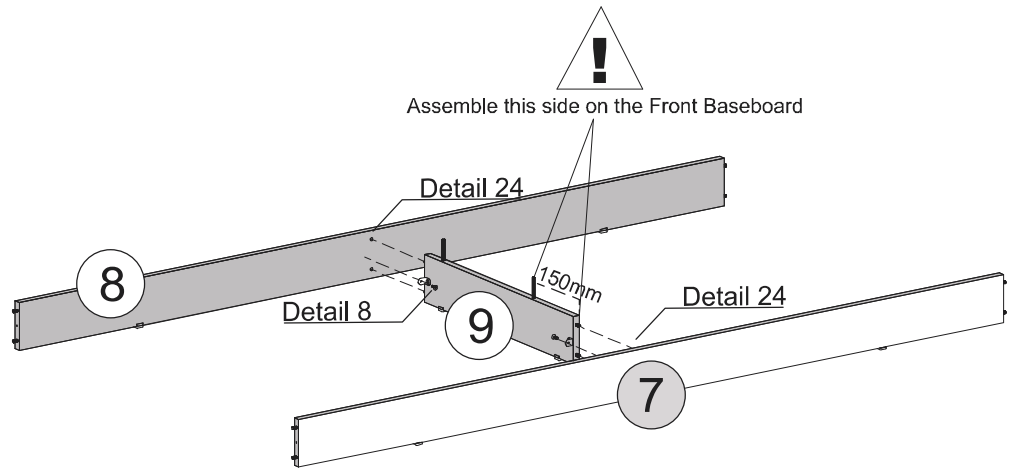

Detail 8

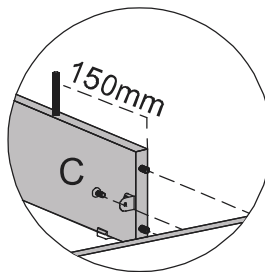


Detail 24




STEP 14

PARTS REQUIRED




2 - LEFT SIDE	x1
---------------	----




HARDWARE REQUIRED

F		02
G		01
Q		02

TOOLS REQUIRED

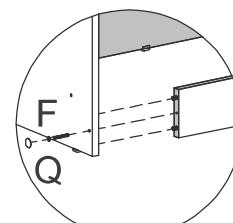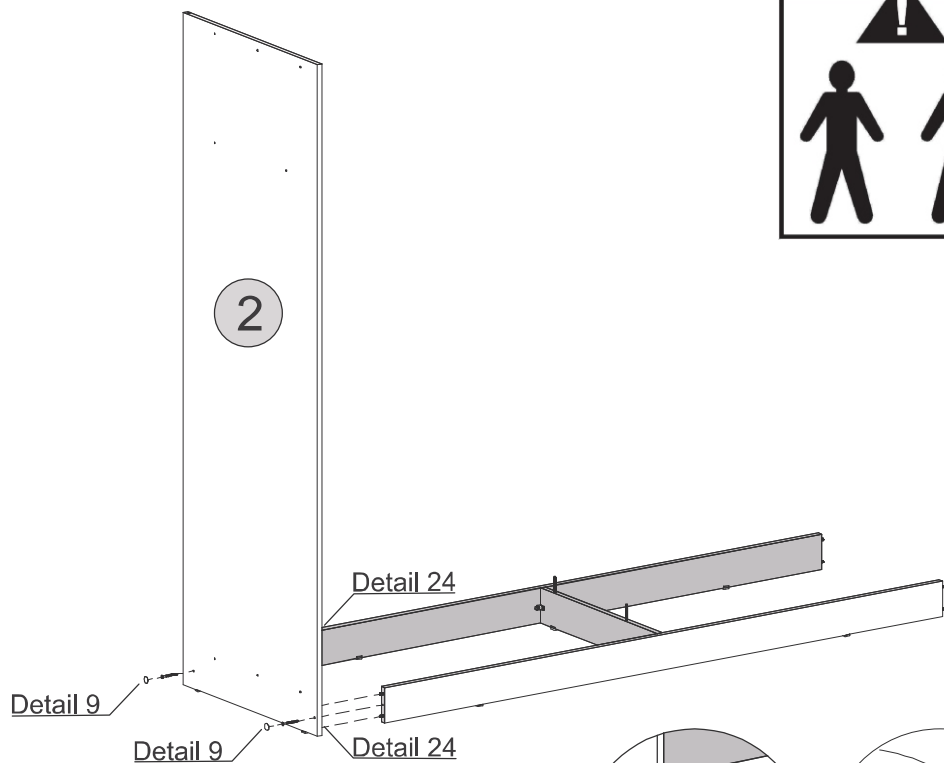

Detail 9

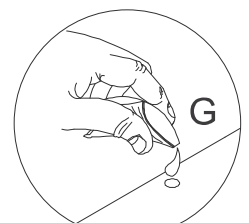


Detail 24

STEP 15

PARTS REQUIRED


1 - BASE PANEL x1

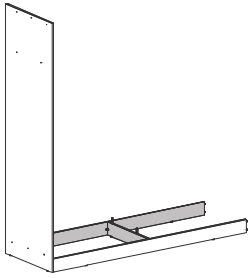



HARDWARE REQUIRED

F  03

G  01

Q  03


TOOLS REQUIRED

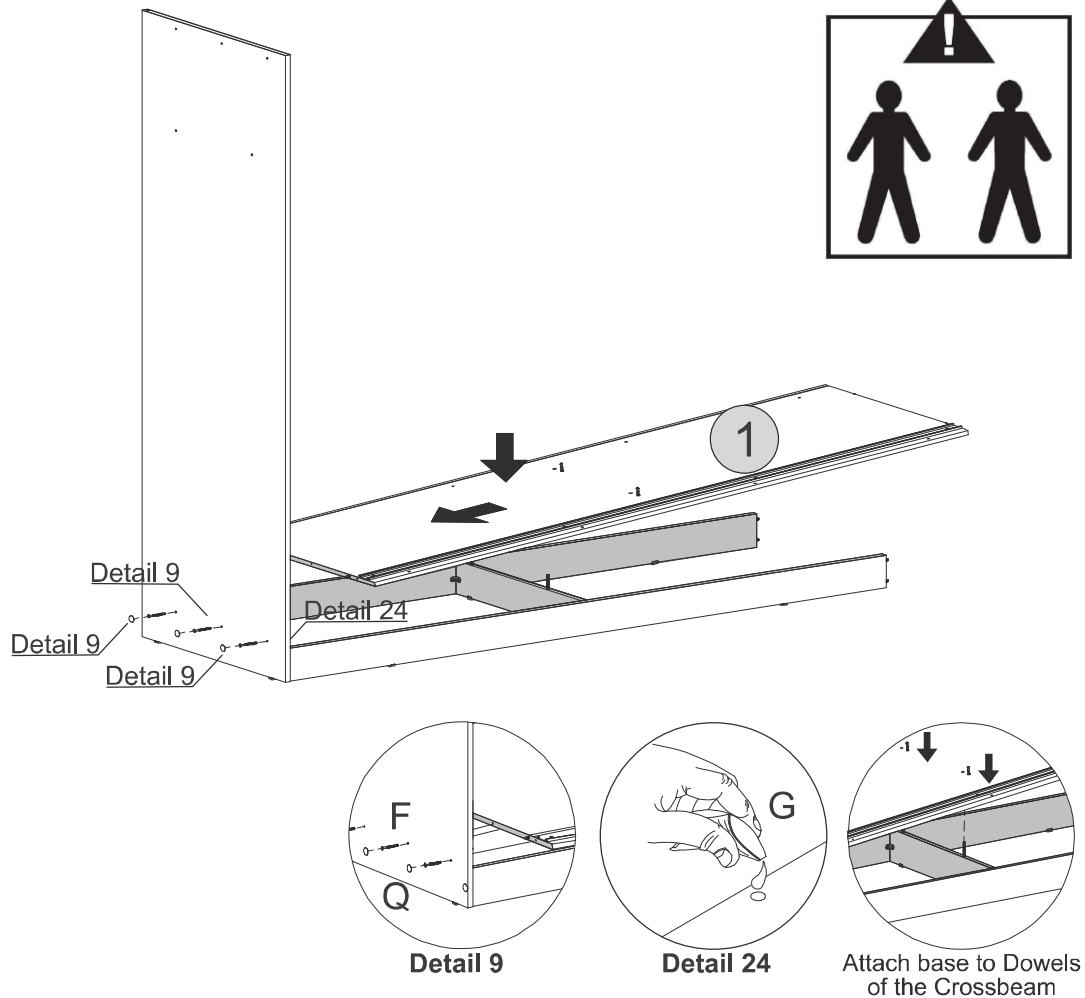

STEP 16

PARTS REQUIRED


3 - RIGHT SIDE x1

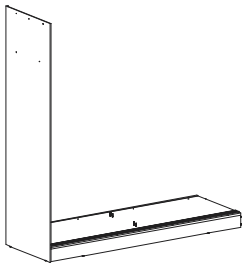



HARDWARE REQUIRED

F  05

G  01


Q  05

TOOLS REQUIRED

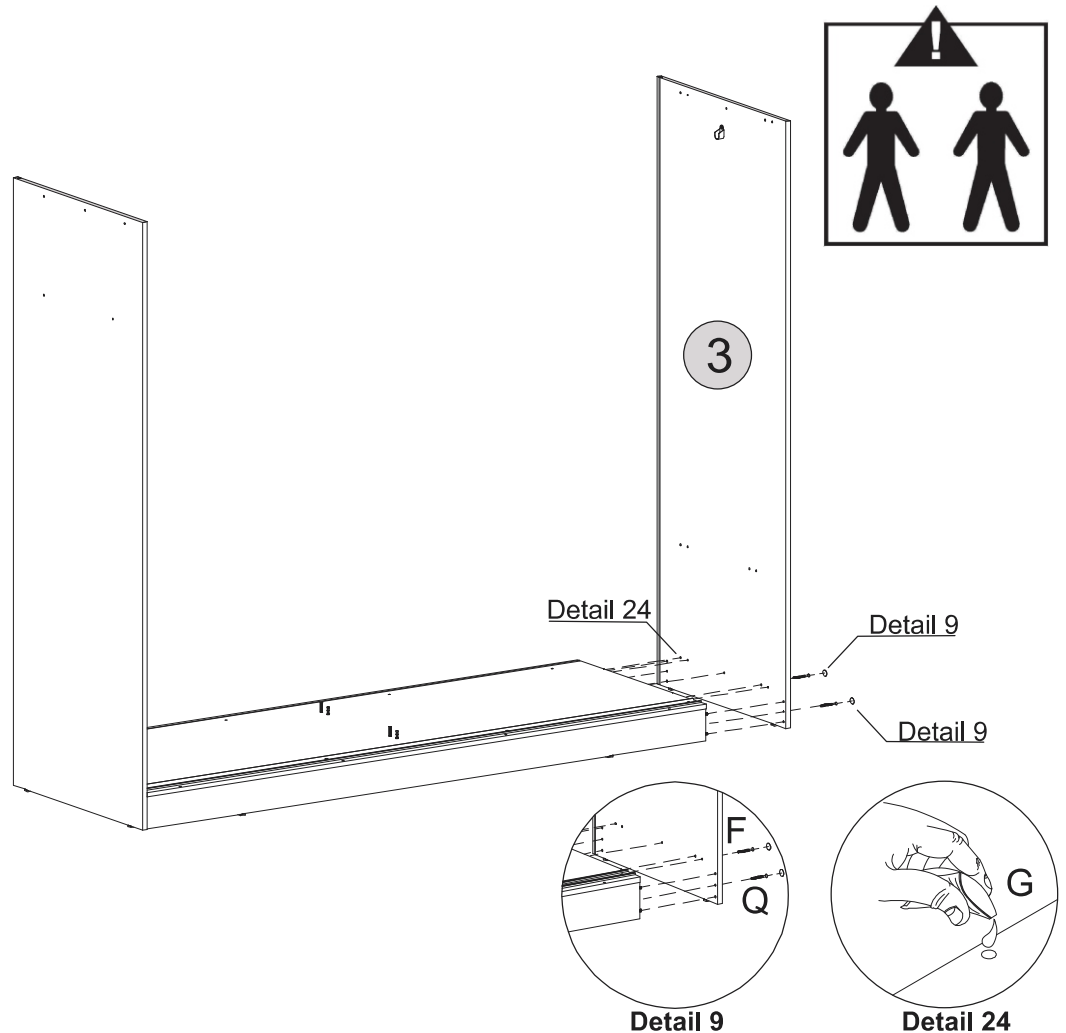



STEP 17




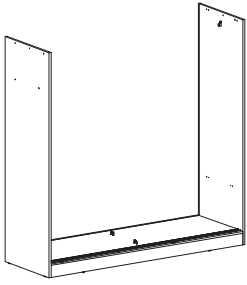
PARTS REQUIRED



HARDWARE REQUIRED

- Q  08
- R  08


TOOLS REQUIRED

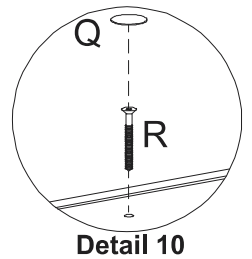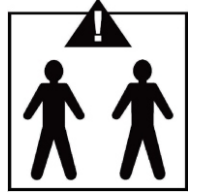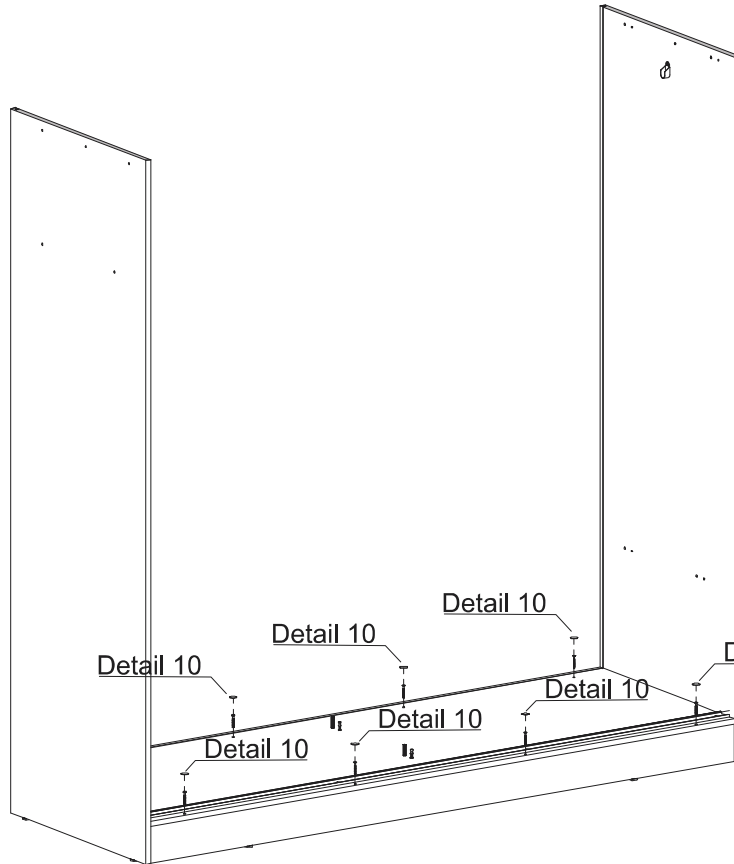




STEP 18

PARTS REQUIRED





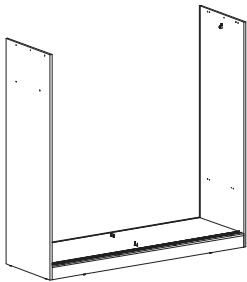
- 5 - DIVISION PANEL x1



HARDWARE REQUIRED

- B  02
- G  01
- Q  02


TOOLS REQUIRED

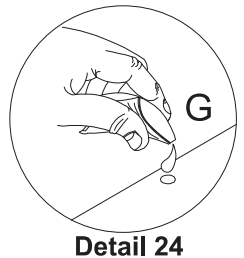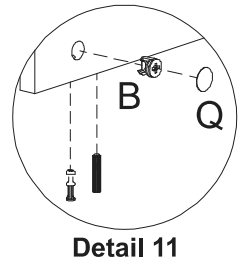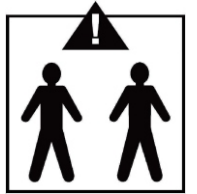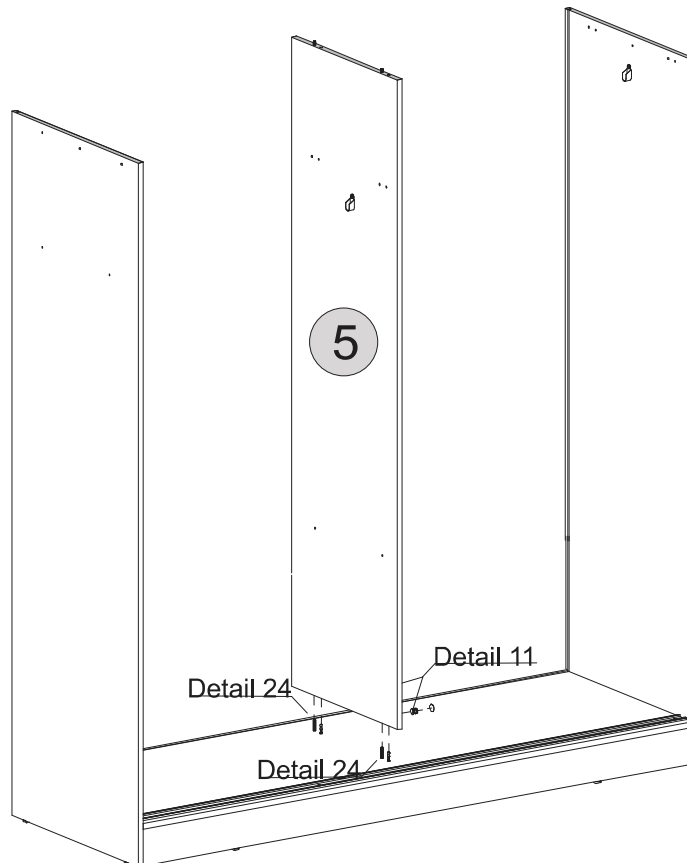





STEP 19

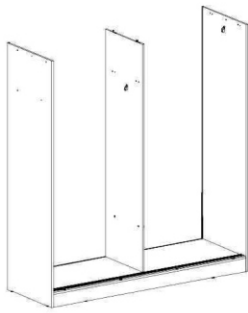PARTS REQUIRED





6 - SHELF x2




HARDWARE REQUIRED

- F  08
- G  01
- Q  04
- C1  04


TOOLS REQUIRED

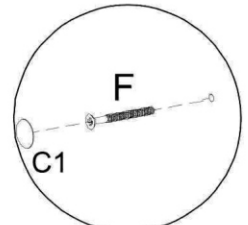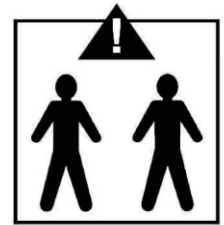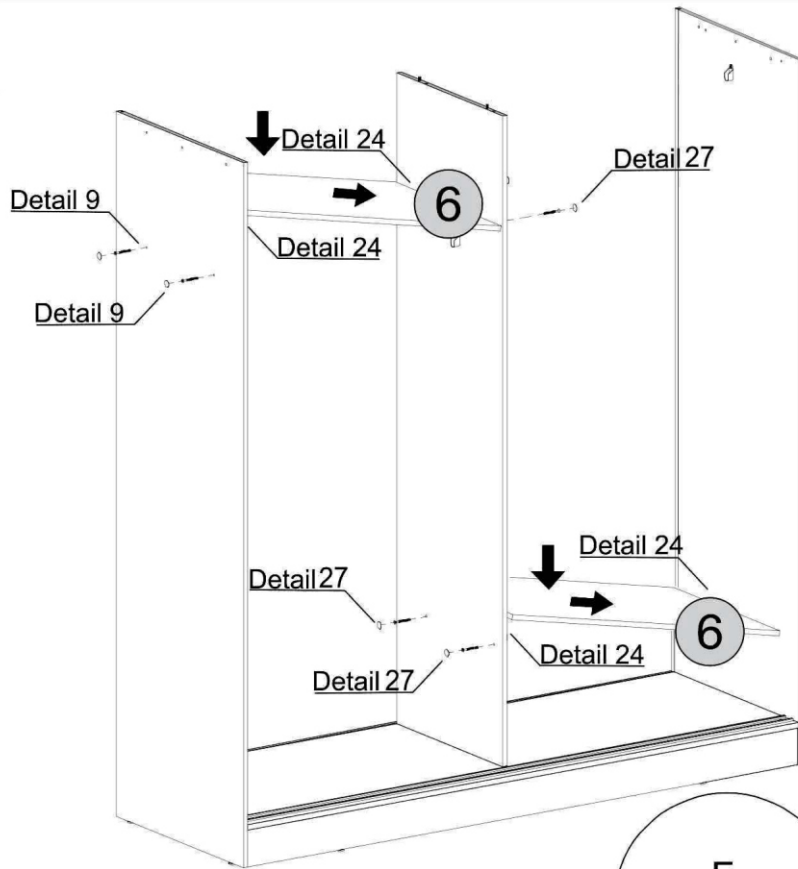

Detail 27

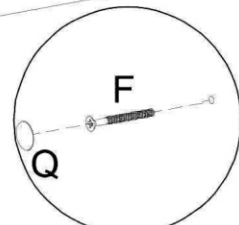

Detail 9

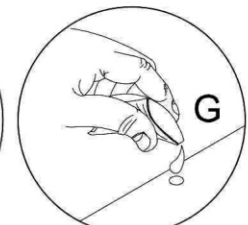

Detail 24


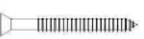



STEP 20

PARTS REQUIRED





4 - TOP PANEL x1




HARDWARE REQUIRED

- B  02
- F  06
- G  01
- Q  06
- C1  02


TOOLS REQUIRED

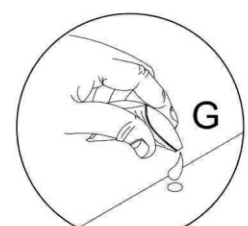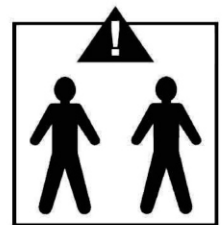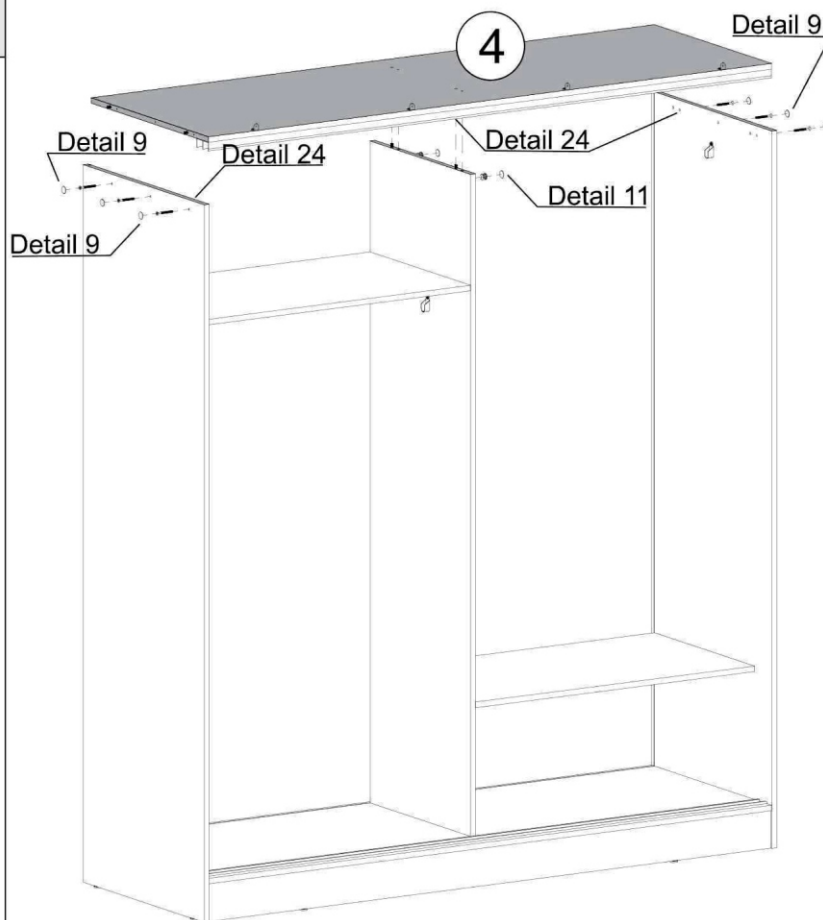

Detail 24

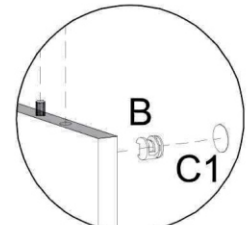

Detail 11

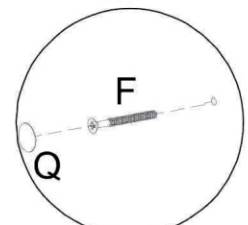


Detail 9

STEP 21

PARTS REQUIRED





13 - BACK PANEL x2

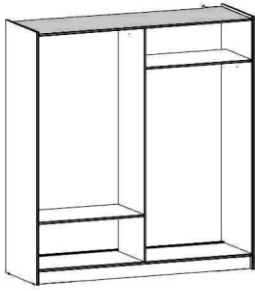

HARDWARE REQUIRED

H 06

TOOLS REQUIRED

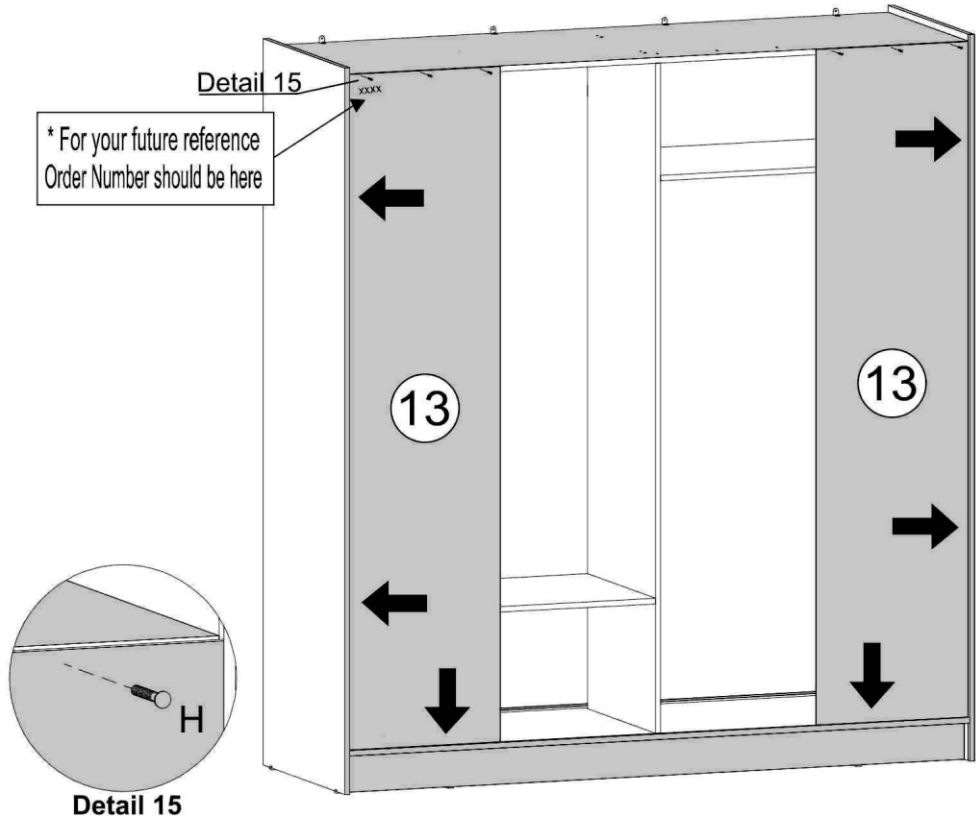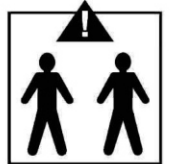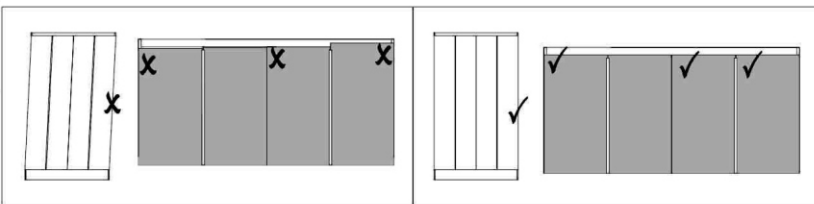


Detail 15

STEP 22

PARTS REQUIRED

13 - BACK PANEL x2

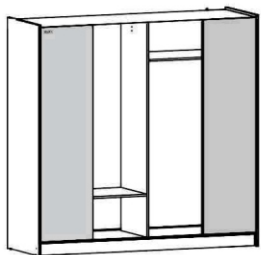






HARDWARE REQUIRED

H 17


I 11

A1 02


TOOLS REQUIRED

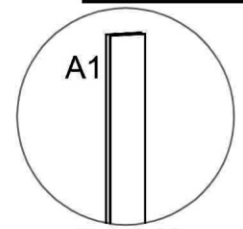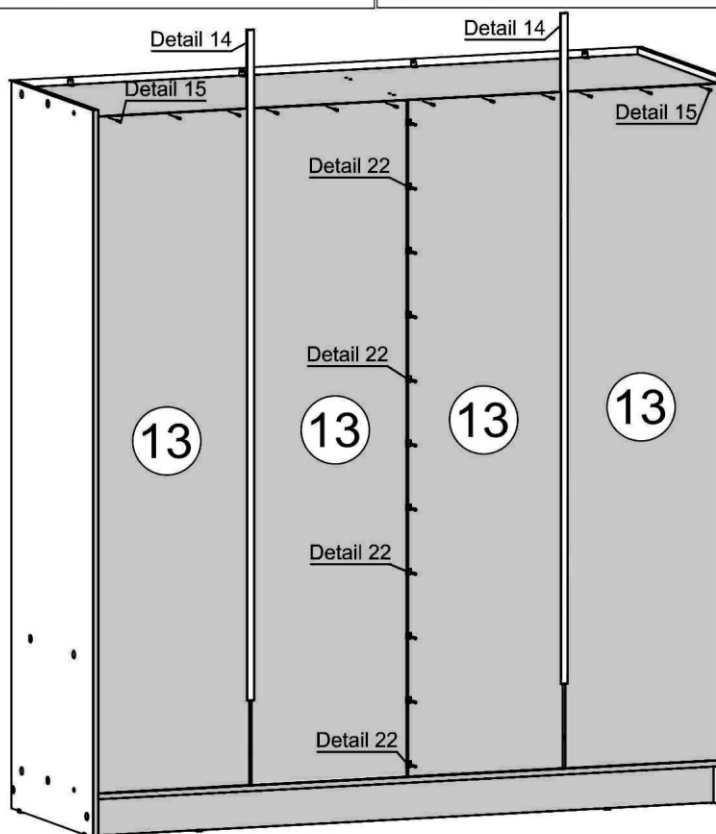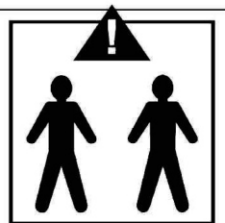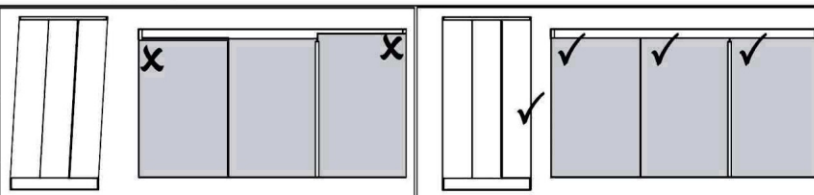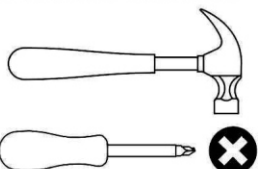

Detail 14

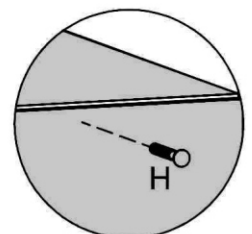




Detail 15

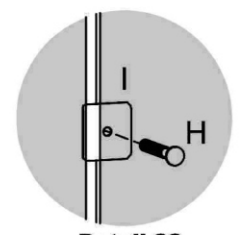


Detail 22

STEP 23


PARTS REQUIRED

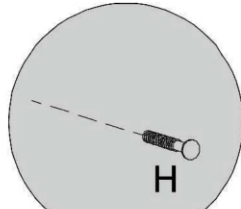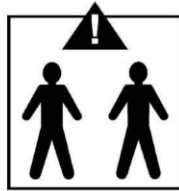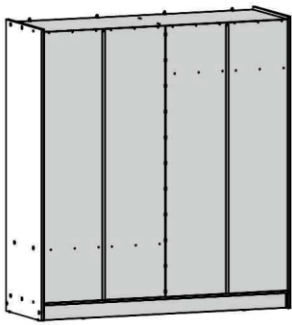

Detail 15

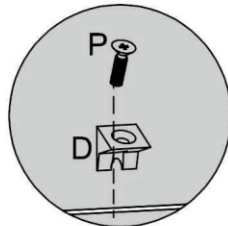


Detail 20

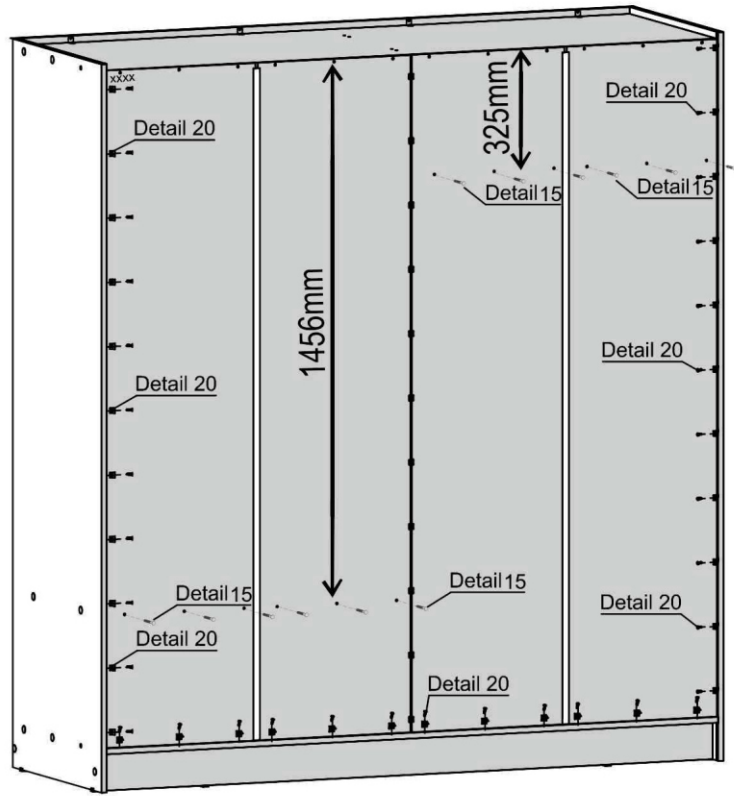



HARDWARE REQUIRED

D  34

H  12

P  34

TOOLS REQUIRED

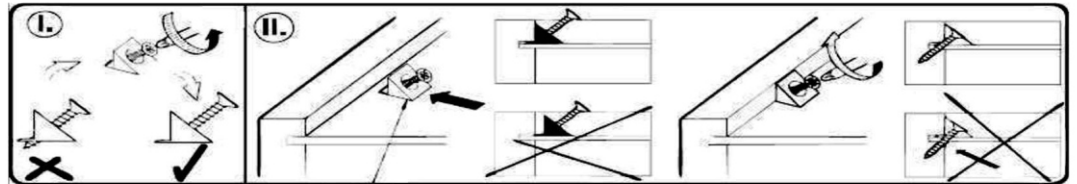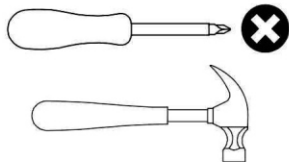

STEP 24

PARTS REQUIRED



HARDWARE REQUIRED




W  02

Y  01


B1  04

B1  04


TOOLS REQUIRED

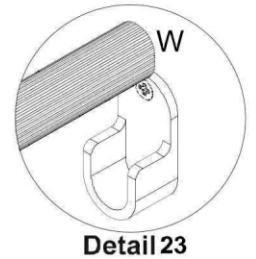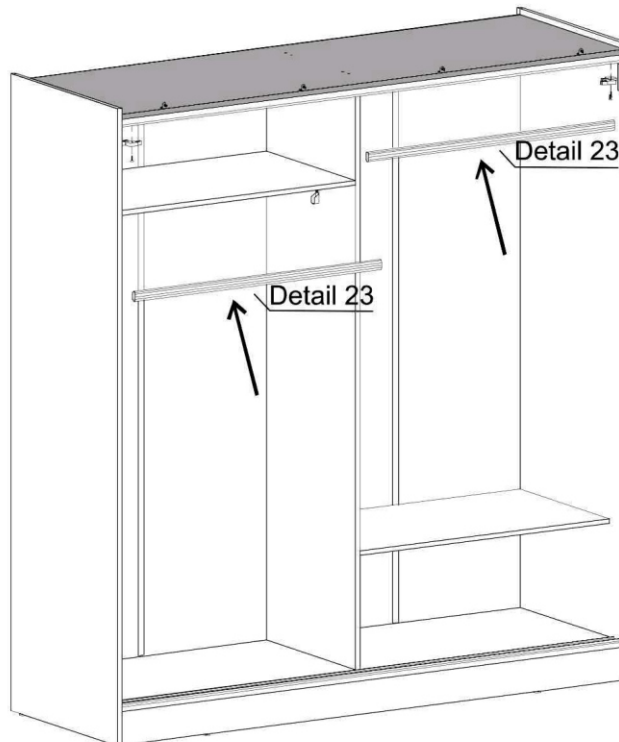



Detail 23

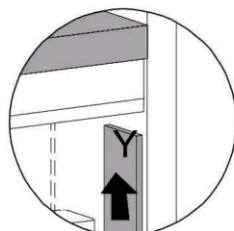

USE TEMPLATE (Y) TO ASSEMBLE THE SLIDING SYSTEM BRAKE

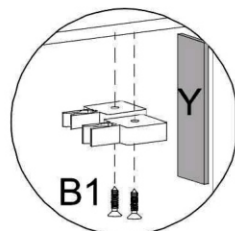


MAKE THIS ASSEMBLY ON BOTH SIDES OF THE WARDROBE

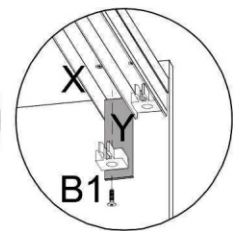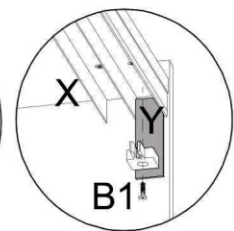


STEP 25

PARTS REQUIRED



10 - FRAME x1

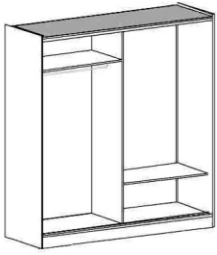


HARDWARE REQUIRED

C  02


TOOLS REQUIRED

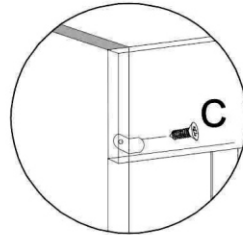


Detail 13

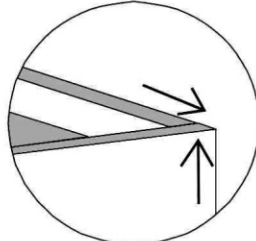

Align Corners

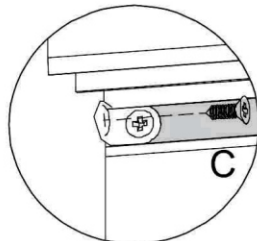


Detail 13

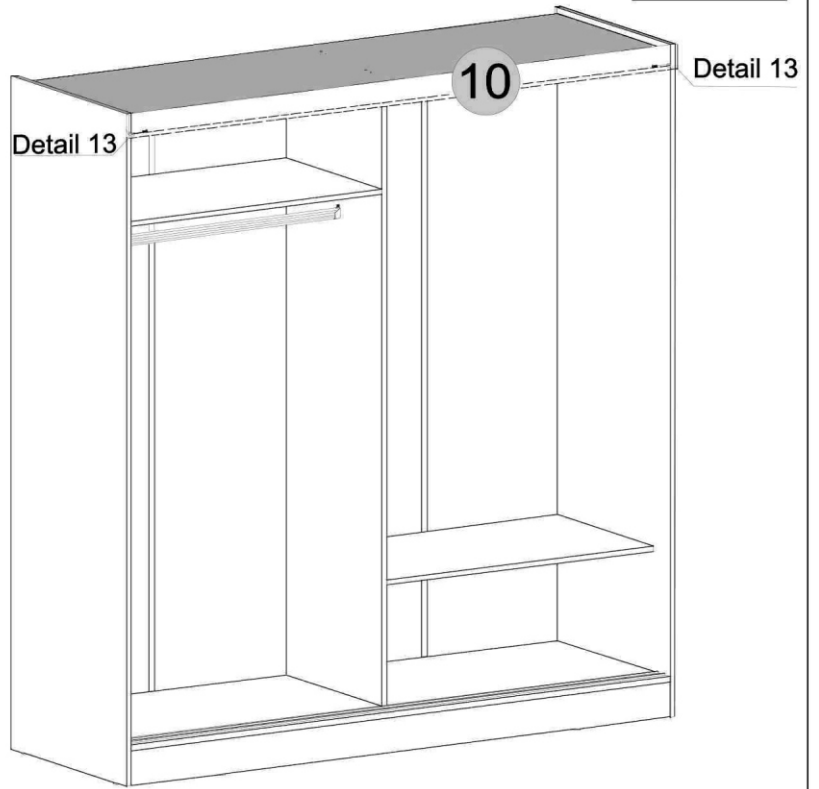


STEP 26

PARTS REQUIRED


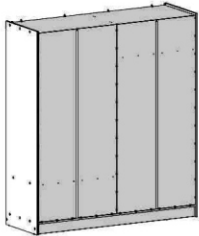


HARDWARE REQUIRED



C  08

J  02


TOOLS REQUIRED

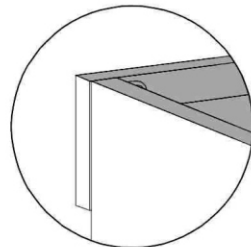

Measure from View to Top

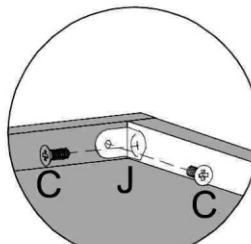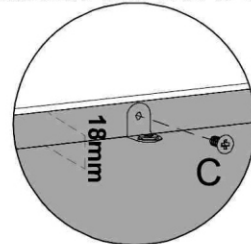

Detail 12

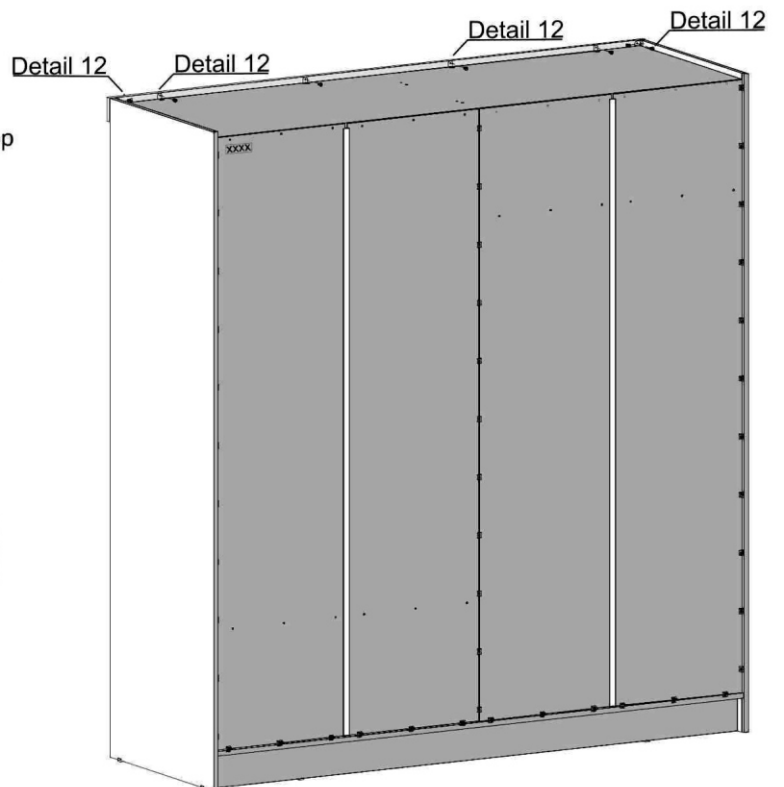

STEP 27

PARTS REQUIRED

11 - MIRRORED DOOR x1



12 - DOOR x1

HARDWARE REQUIRED

O  10

Z  02

TOOLS REQUIRED

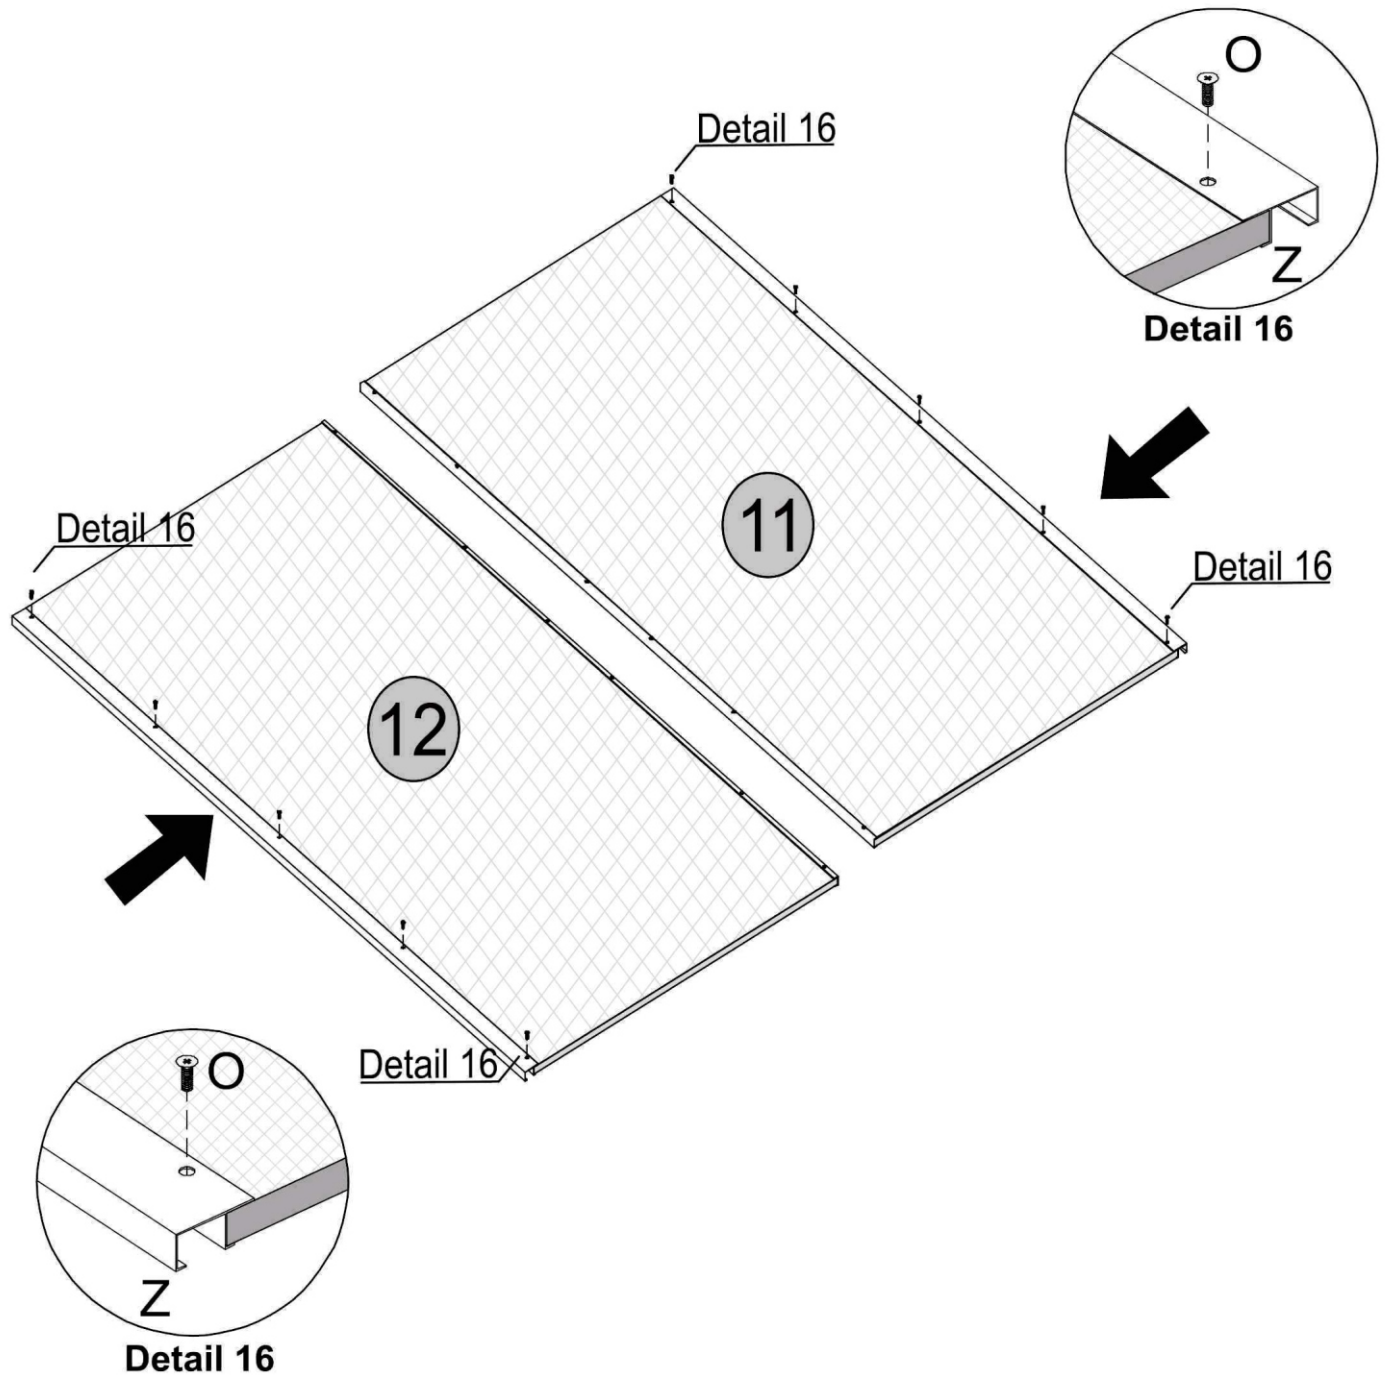

STEP 28

PARTS REQUIRED


HARDWARE REQUIRED

TOOLS REQUIRED


B1

SLIDING SYSTEM KIT


x2

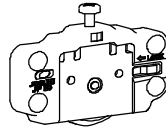


Lower Roller Latch x4




1° UNSCREW

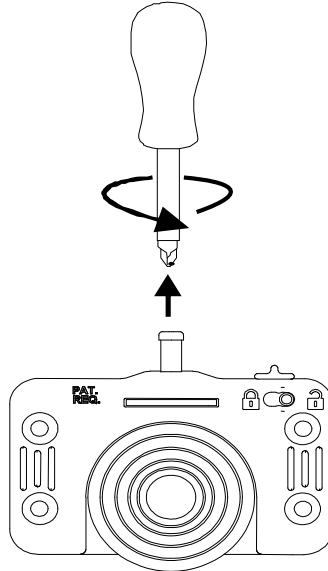

2° PUSH THE WHEEL UP UNTIL IT TOUCHES THE SCREW

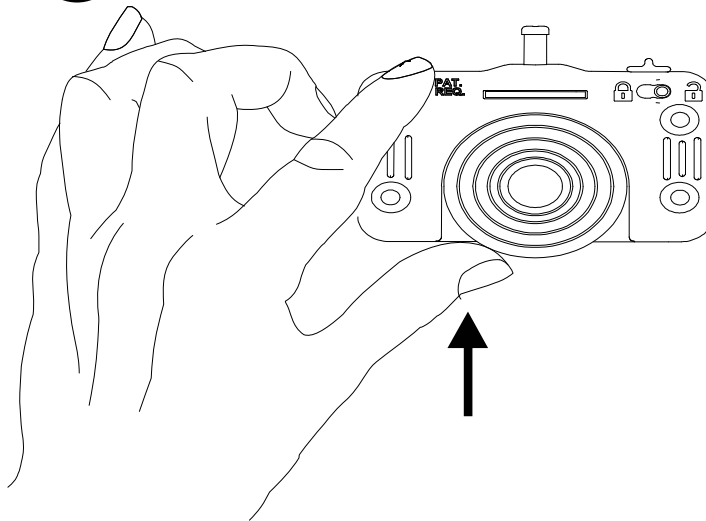

3° SLIDE TO LOCK

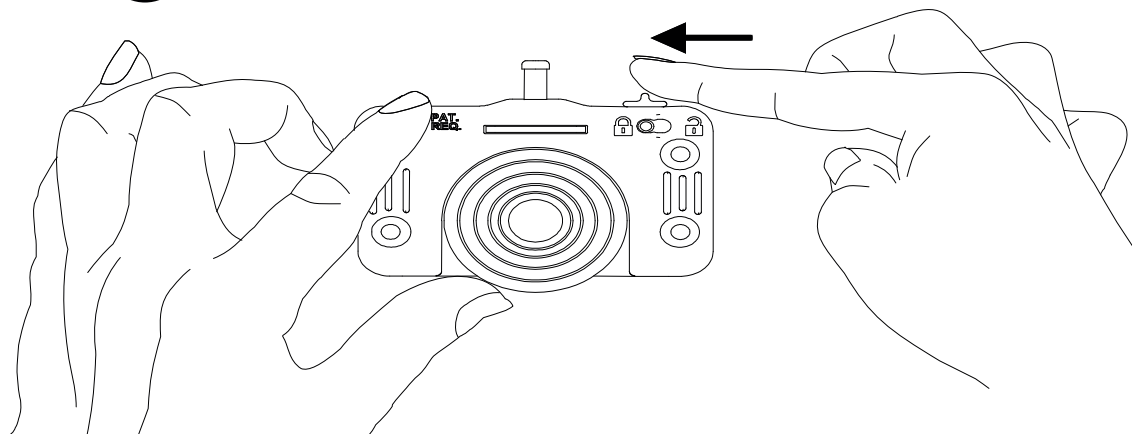

STEP 29

PARTS REQUIRED

11 - MIRRORED DOOR x1

12 - DOOR x1

HARDWARE REQUIRED



B1 **SLIDING SYSTEM KIT** **x2**

Lower Roller Latch x4





Upper Roller Latch x4

Screw Ø3.5 x 16 mm x24



TOOLS REQUIRED

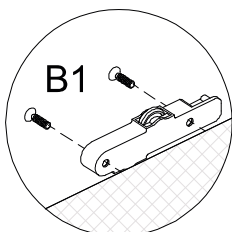


Detail 19

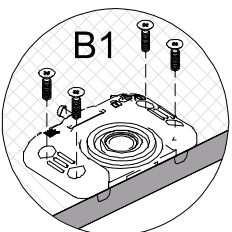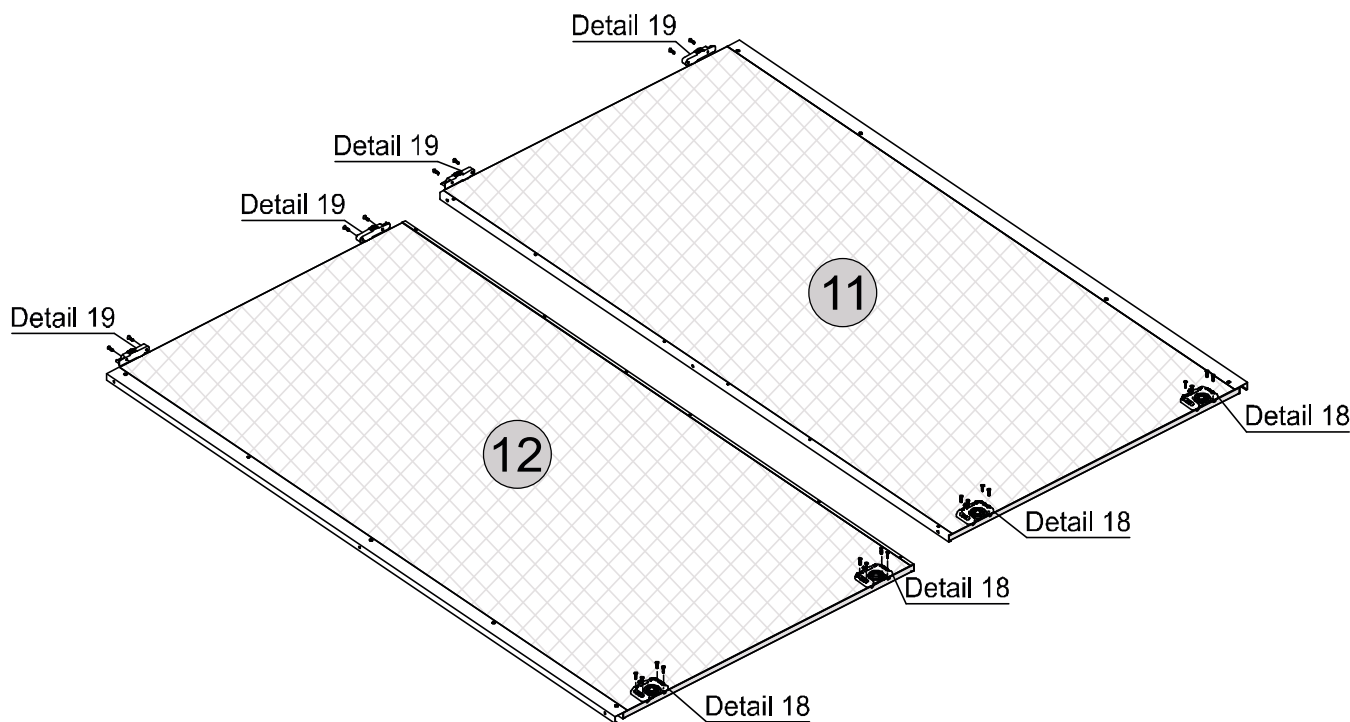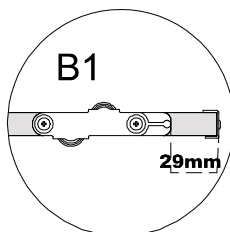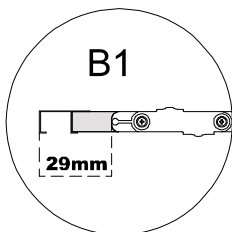


Detail 16

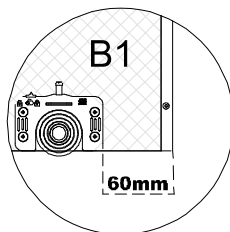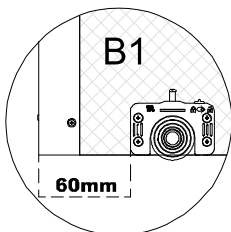

ATTENTION

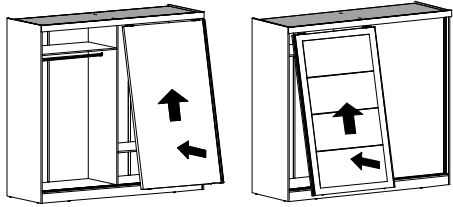

1° *Fit the Door*

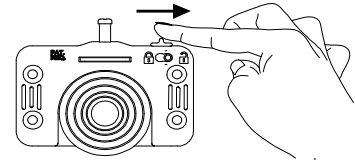


2° *Unlock the Pulley*

STEP 30


PARTS REQUIRED

12 - DOOR x1

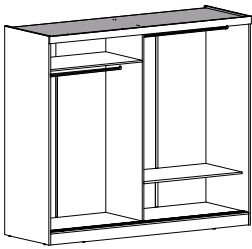

HARDWARE REQUIRED


TOOLS REQUIRED

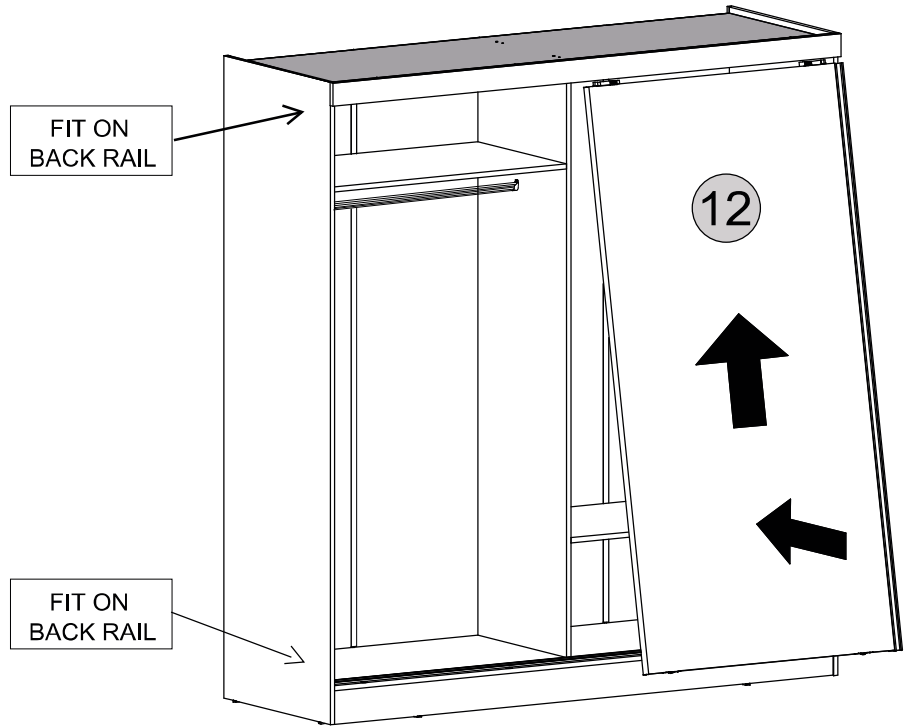

STEP 31


PARTS REQUIRED

11 - MIRRORED DOOR x1

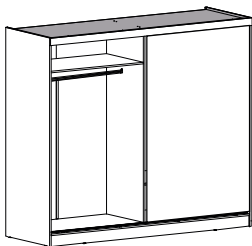


HARDWARE REQUIRED

TOOLS REQUIRED

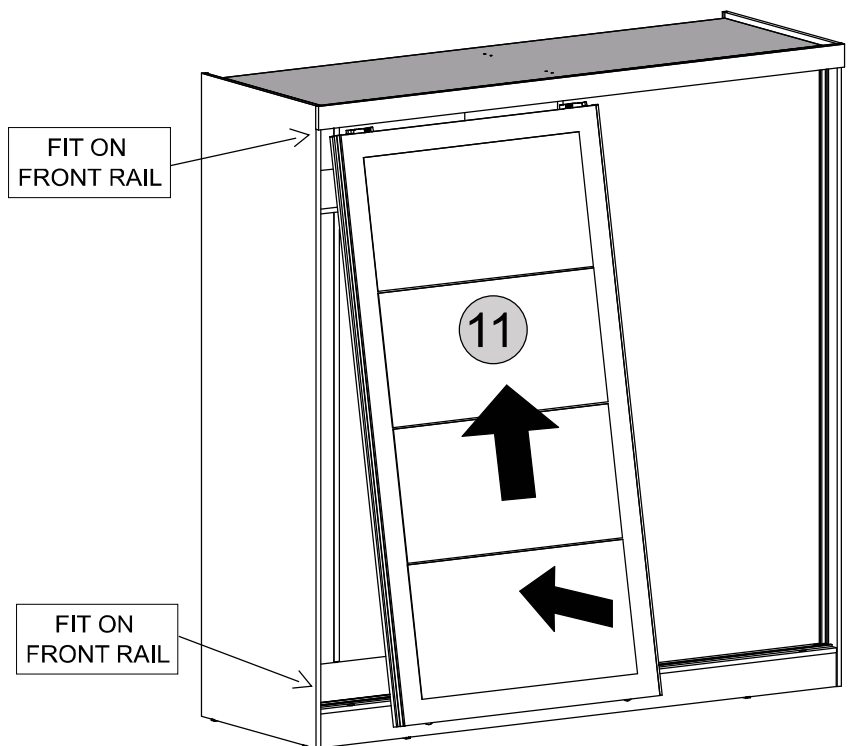

STEP 32




PARTS REQUIRED

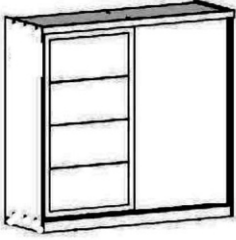

HARDWARE REQUIRED

U		12
---	--	----

TOOLS REQUIRED


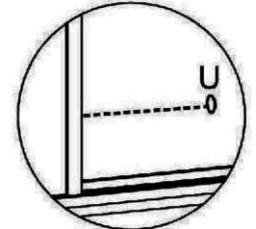
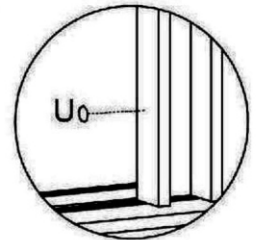
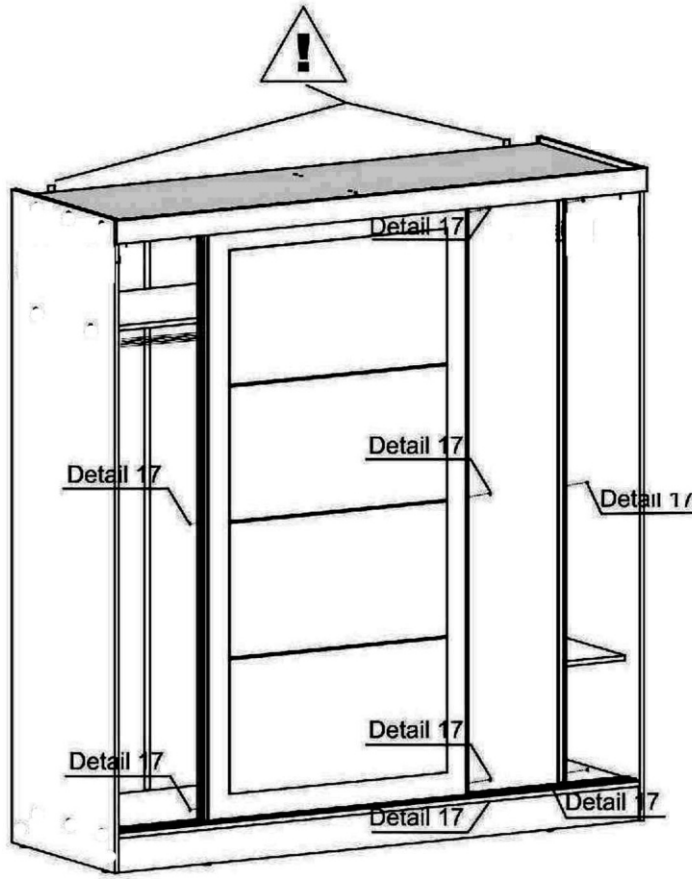


Detail 17


ATTENTION

Doors Adjustment

Illustrative picture

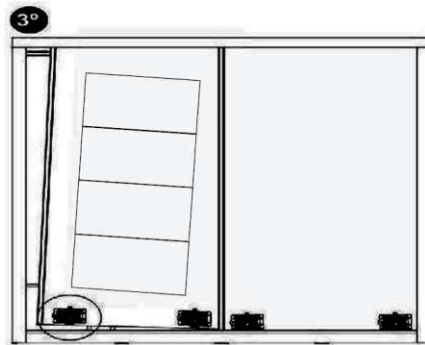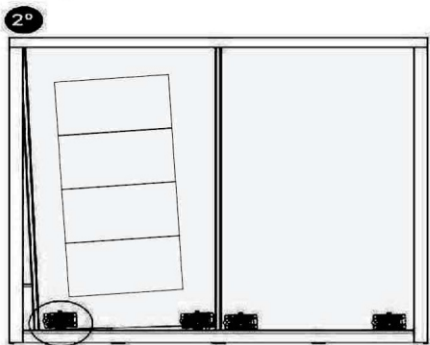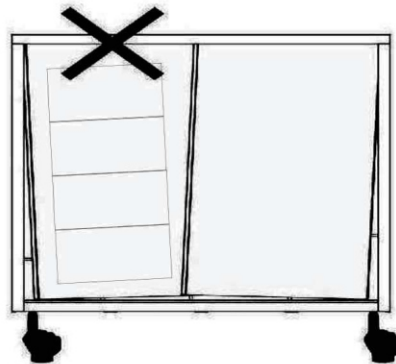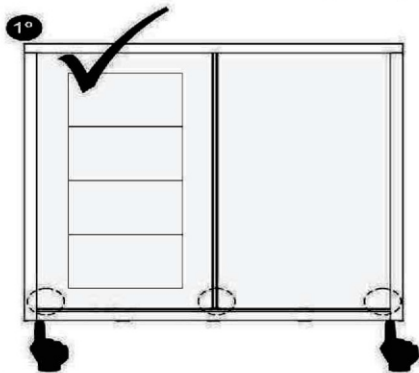

BEFORE REGULATION
UNLOCK THE PULLEY

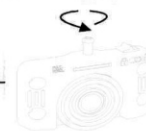

BEFORE REGULATION
UNLOCK THE PULLEY

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices.

Please make sure you use fixings suitable for the walls in your home.

