
# NEVADA 2 DOOR SLIDER WARDROBE ASSEMBLY INSTRUCTIONS

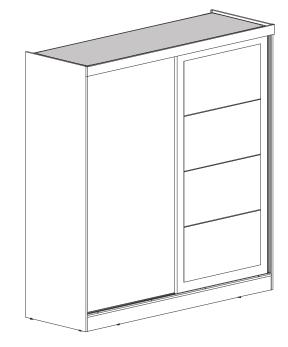








## IMPORTANT FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

### **CARE AND MAINTENANCE**

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.


- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

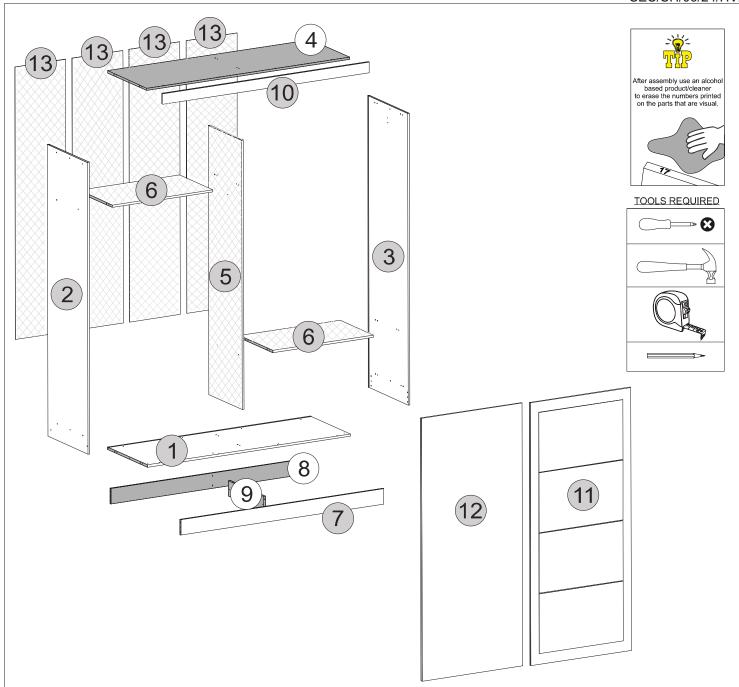

Please Note:

The below parts have all been stamped with the part number to help identify them during assembly.

Part Number	Part Description	Quantity	<u>Carton</u>
1	Base Panel	1	1/3
2	Left Side	1	2/3
3	Right Side	1	2/3
4	Top Panel	1	1/3
5	<b>Division Panel</b>	1	2/3
6	Shelf	2	1/3
7	Front Baseboard	1	1/3
8	Back Baseboard	1	1/3
9	Crossbeam	1	1/3
10	Frame	1	2/3
11	Mirrored Door	1	3/3
12	Door	1	3/3
13	Back Panel	4	2/3

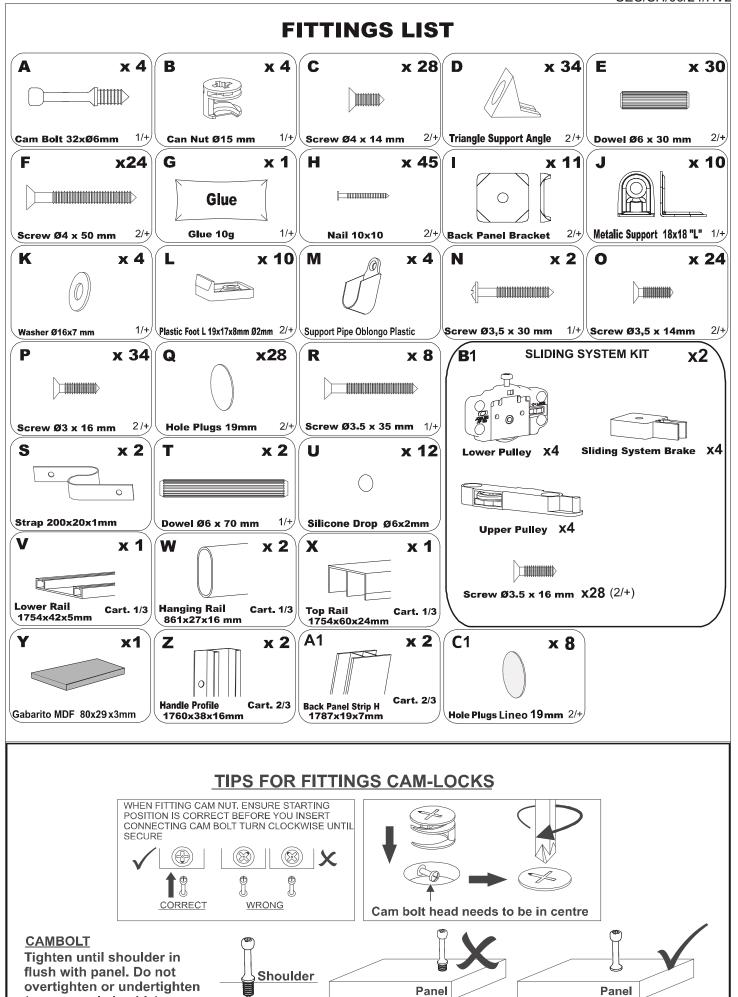


(see example beside)



x1

x1

x1

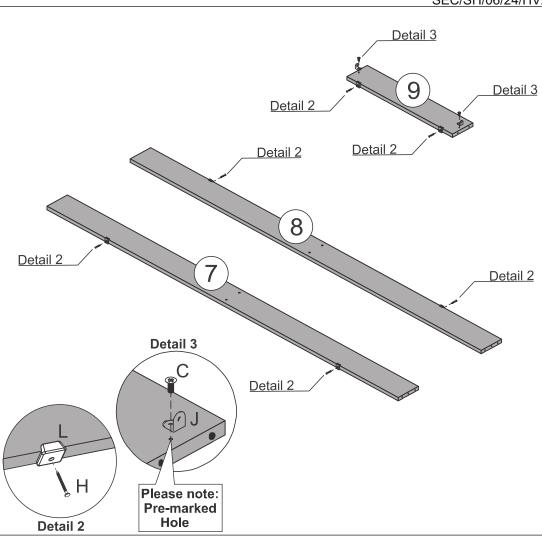



### STEP 2


#### **PARTS REQUIRED**


7 - FRONT BASEBOARD x1 8 - BACK BASEBOARD x1 9 - CROSSBEAM х1

#### **HARDWARE REQUIRED**





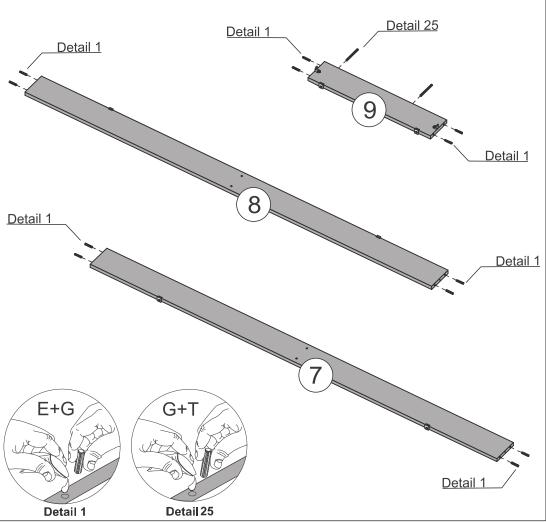

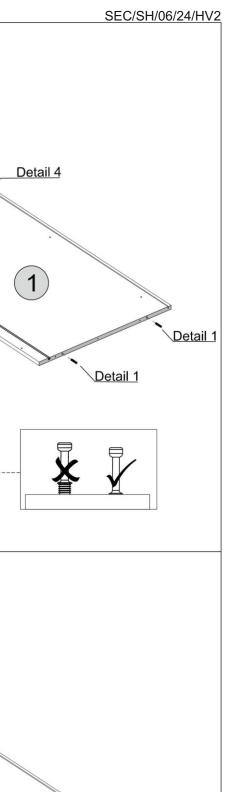

Detail 1

Detail 4

Detail 1

PARTS REQUIRED

1 - BASE PANEL x1


#### HARDWARE REQUIRED








**TOOLS REQUIRED** 



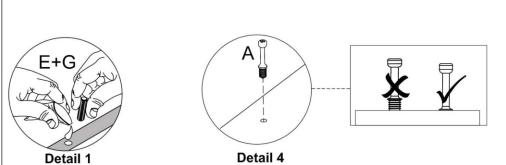


### STEP 4


#### PARTS REQUIRED


1 - BASE PANEL x1

#### HARDWARE REQUIRED






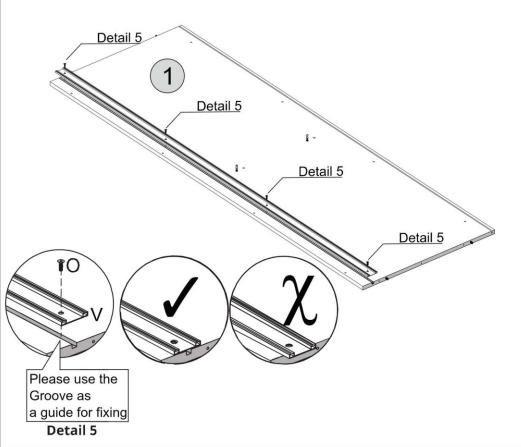

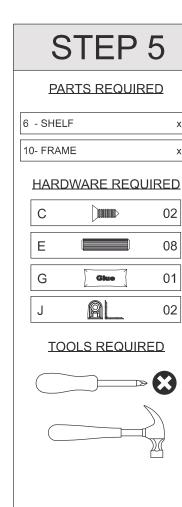

x1

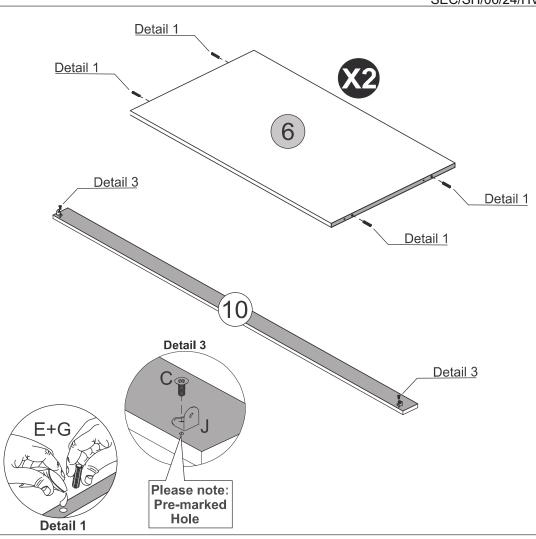


### STEP 6


#### PARTS REQUIRED

2 - LEFT SIDE x1

#### HARDWARE REQUIRED

С		02
Н		02
L		02
М	R	01




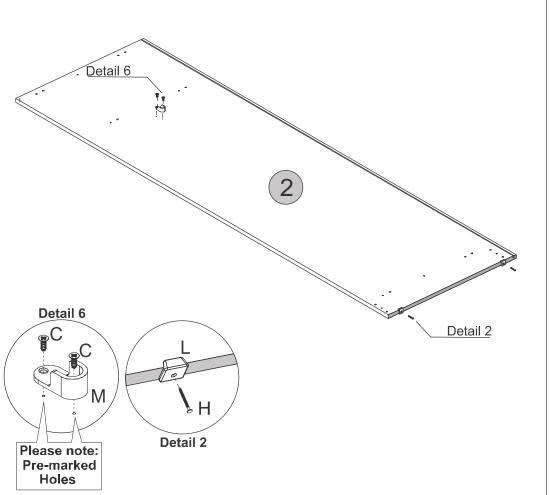


#### PARTS REQUIRED


3 - RIGHT SIDE x1

#### **HARDWARE REQUIRED**

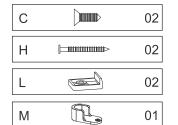

#### **TOOLS REQUIRED**



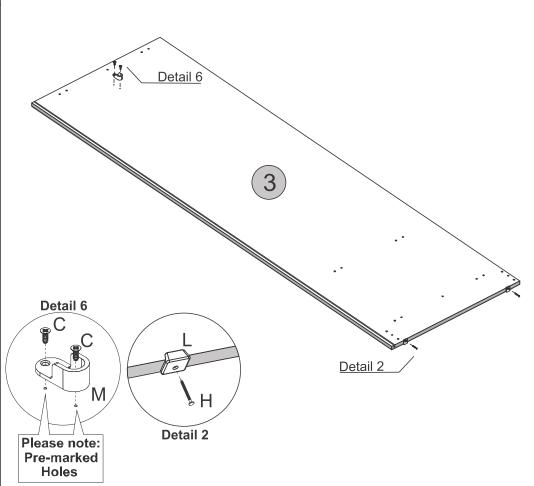



### STEP 8


#### PARTS REQUIRED

5 - DIVISION PANEL x1

#### **HARDWARE REQUIRED**





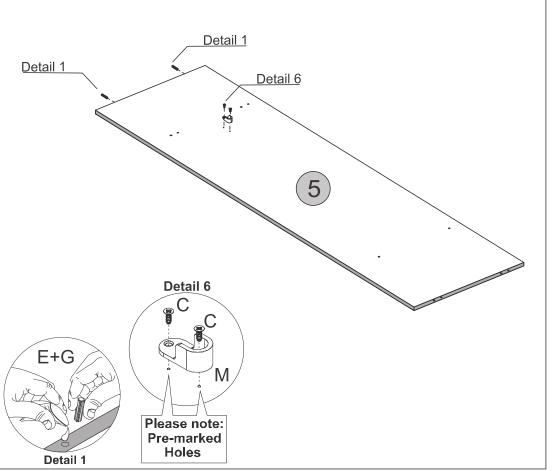





#### **PARTS REQUIRED**


5 - DIVISION PANEL x1

#### **HARDWARE REQUIRED**



**TOOLS REQUIRED** 



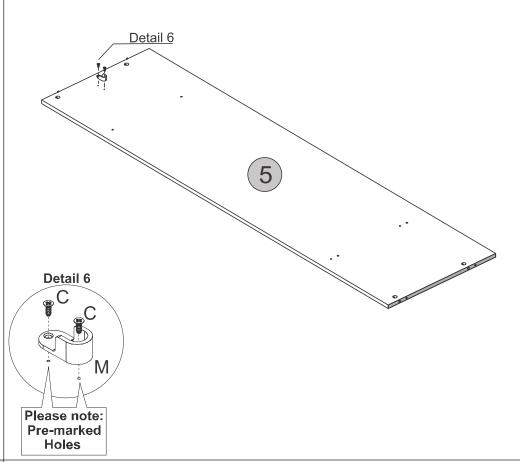

### STEP 10


#### PARTS REQUIRED


4 - TOP PANEL x1

#### HARDWARE REQUIRED

С		04
Е		04
G	Glue	01
J		04



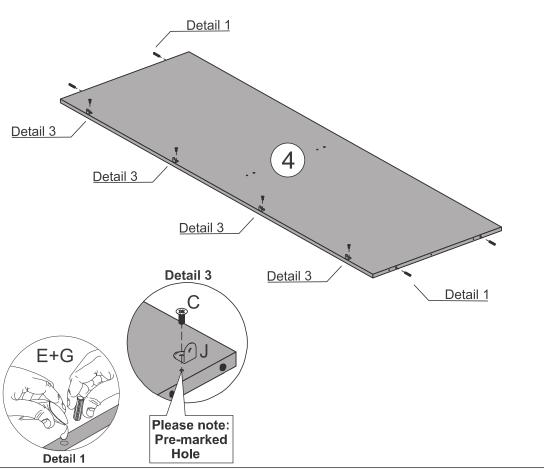


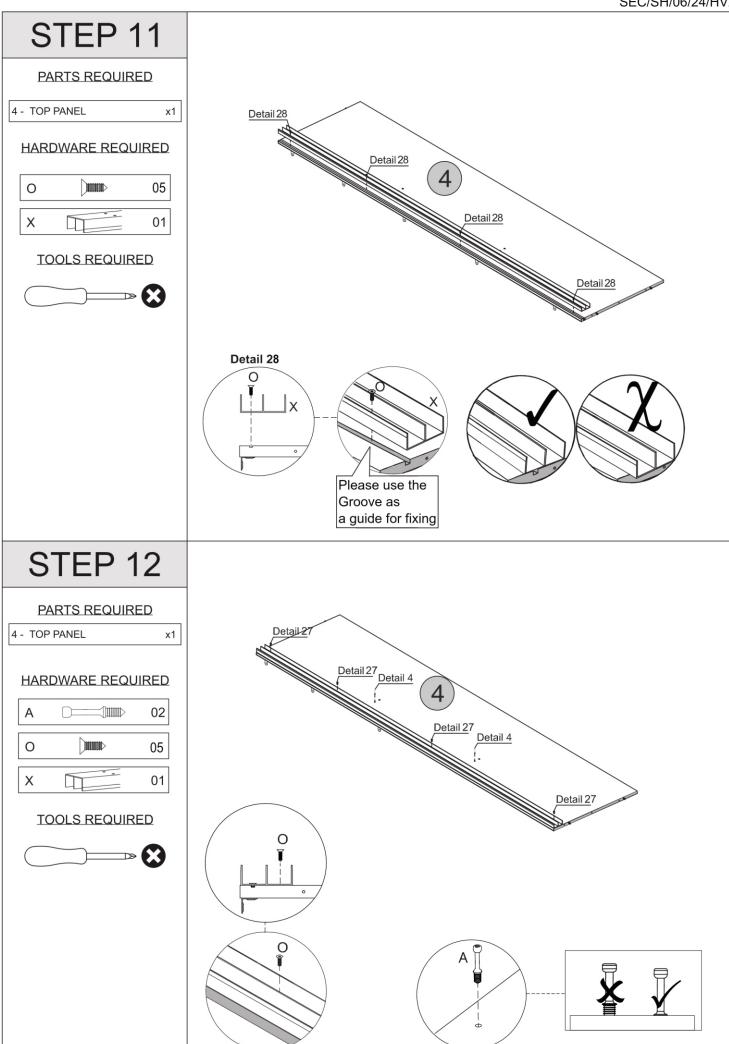


Detail 27

Detail 4


#### PARTS REQUIRED





#### HARDWARE REQUIRED



#### **TOOLS REQUIRED**



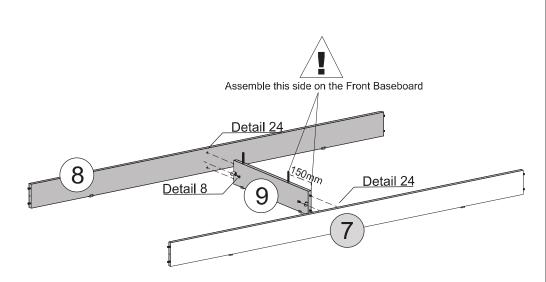


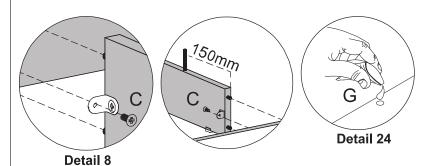


### STEP 14


#### PARTS REQUIRED


2 - LEFT SIDE x1





#### **HARDWARE REQUIRED**







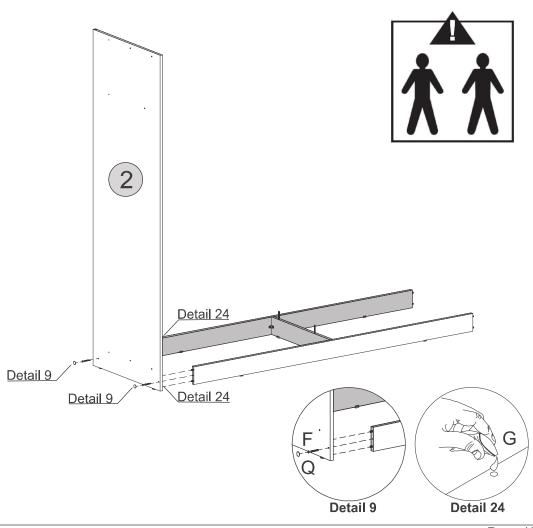

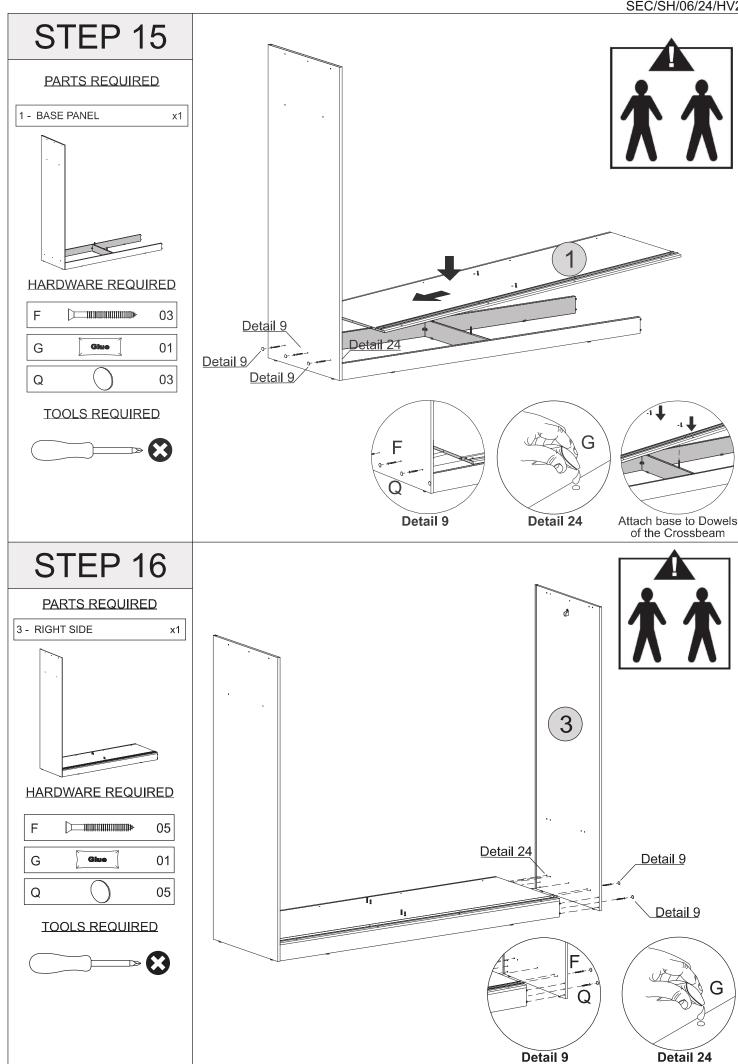

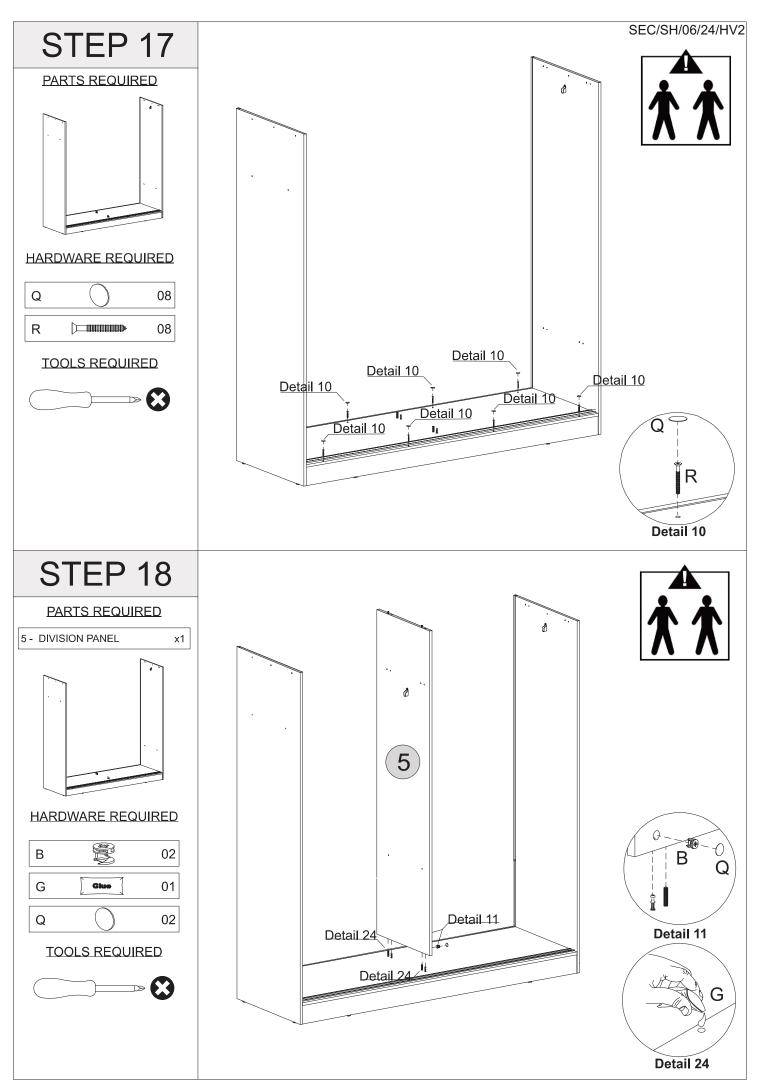

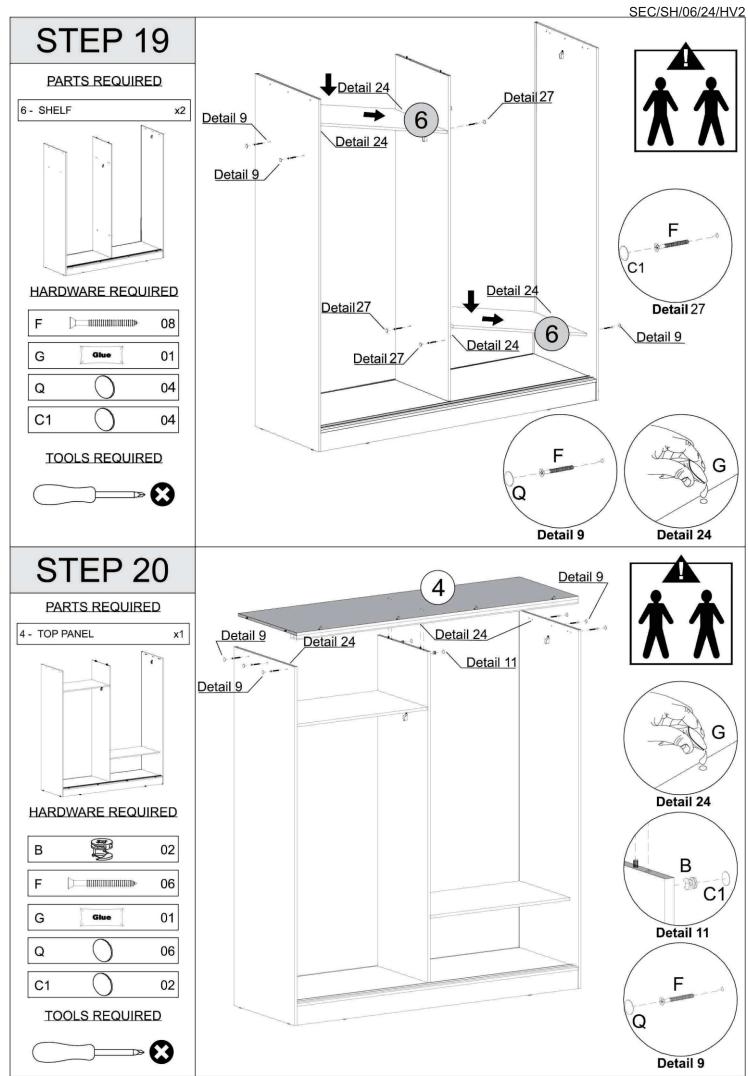


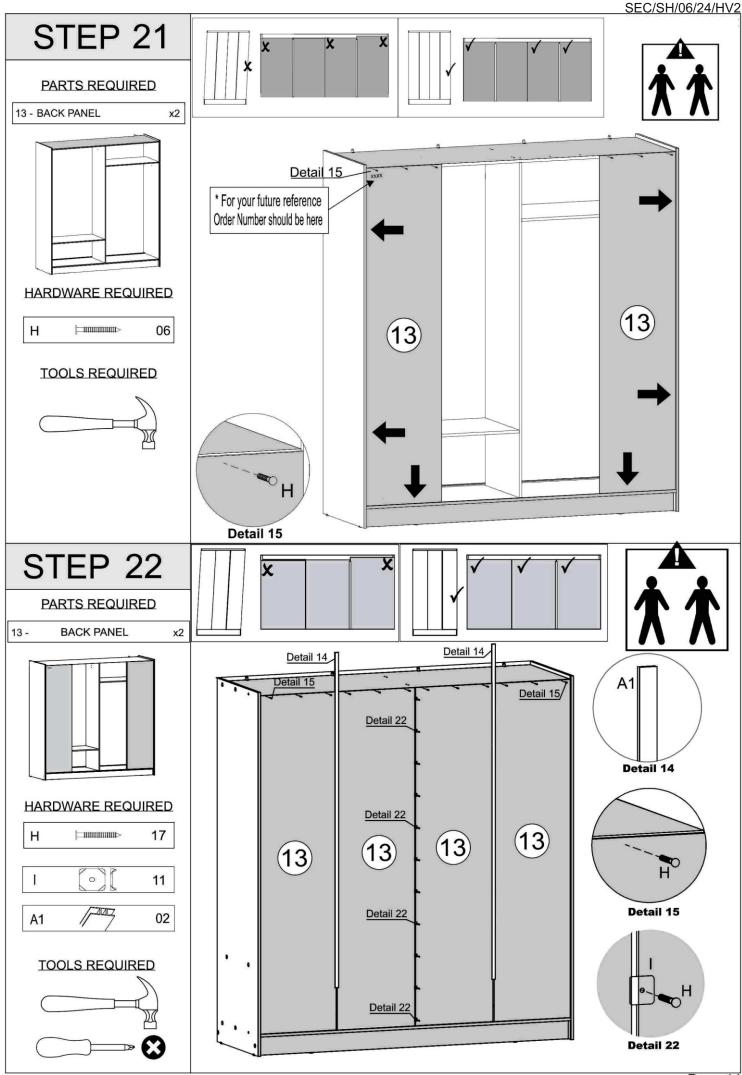


Page 14




#### PARTS REQUIRED

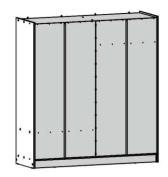

#### HARDWARE REQUIRED



#### **TOOLS REQUIRED**




### STEP 24


#### PARTS REQUIRED




#### HARDWARE REQUIRED

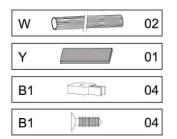


#### **TOOLS REQUIRED**







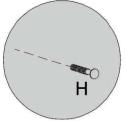



Detail 15

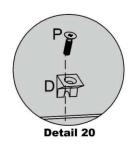

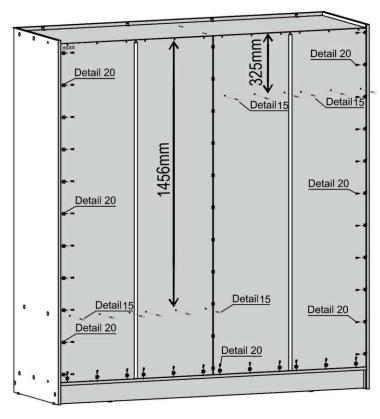





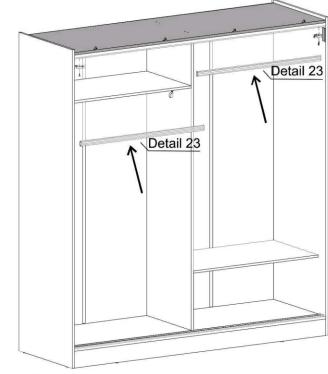


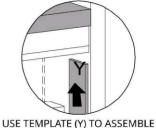

THE SLIDING SYSTEM BRAKE








Detail 23


MAKE THIS ASSEMBLY ON BOTH SIDES OF THE WARDROBE

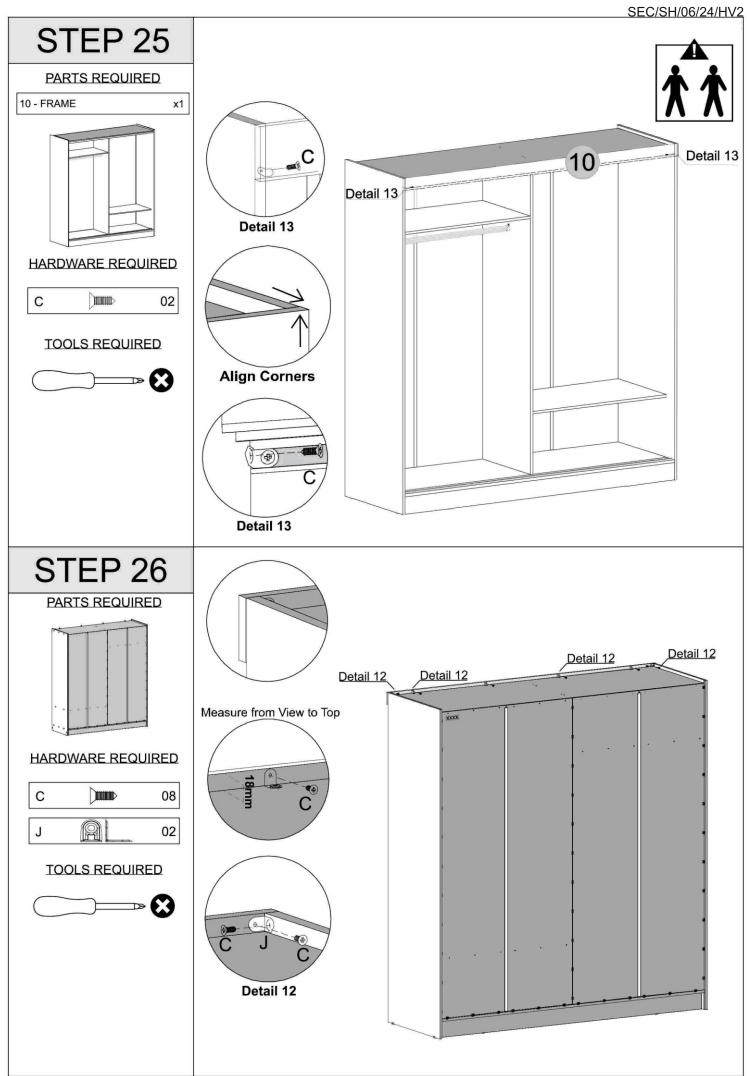


#### PARTS REQUIRED

11 - MIRRORED DOOR x1
12 - DOOR x1

#### HARDWARE REQUIRED





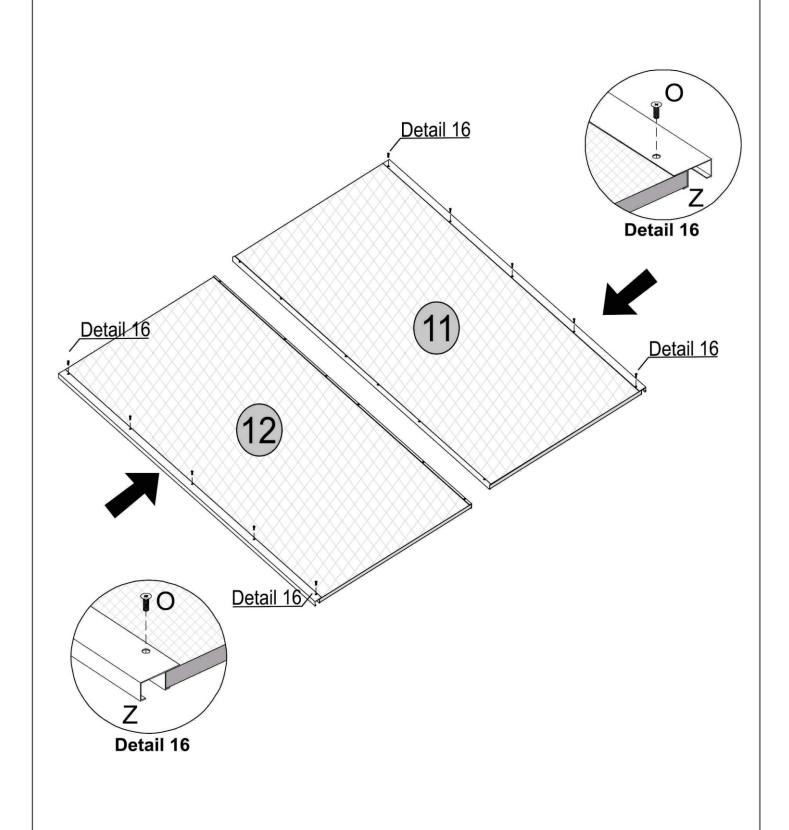


# SEC/SH/06/24/HV2 STEP 28 PARTS REQUIRED HARDWARE REQUIRED **TOOLS REQUIRED** SLIDING SYSTEM KIT **x2** Lower Roller Latch x4 UNSCREW PUSH THE WHEEL UP UNTIL IT TOUCHES THE SCREW SLIDE TO LOCK


**TOOLS REQUIRED** 


### STEP 29






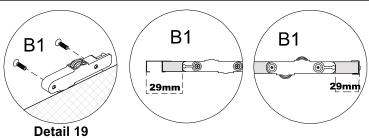

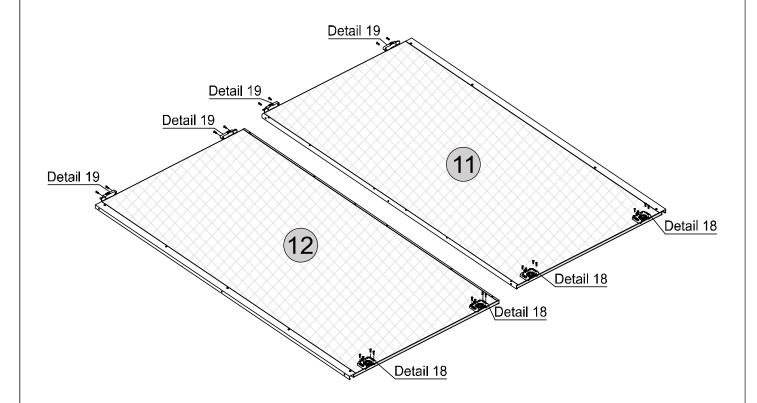

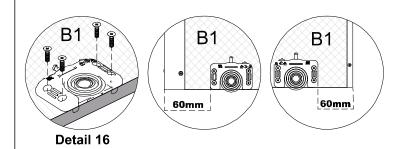

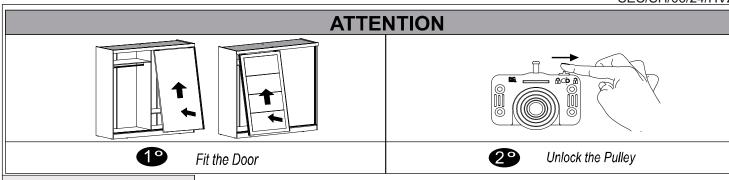


PARTS REQUIRED



HARDWARE REQUIRED

TOOLS REQUIRED



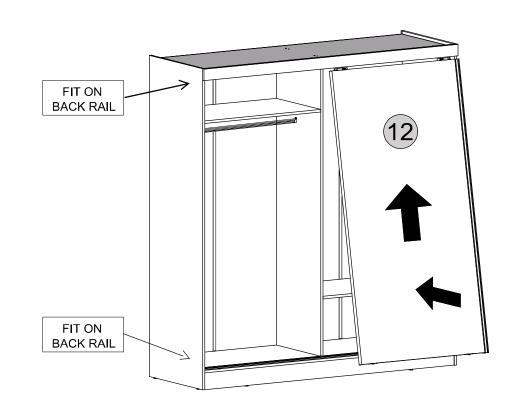

### STEP 31


PARTS REQUIRED




HARDWARE REQUIRED

TOOLS REQUIRED



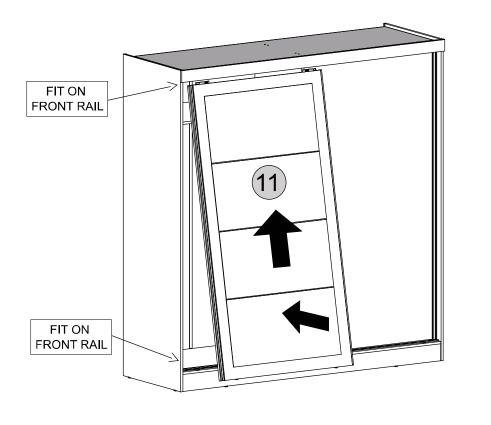

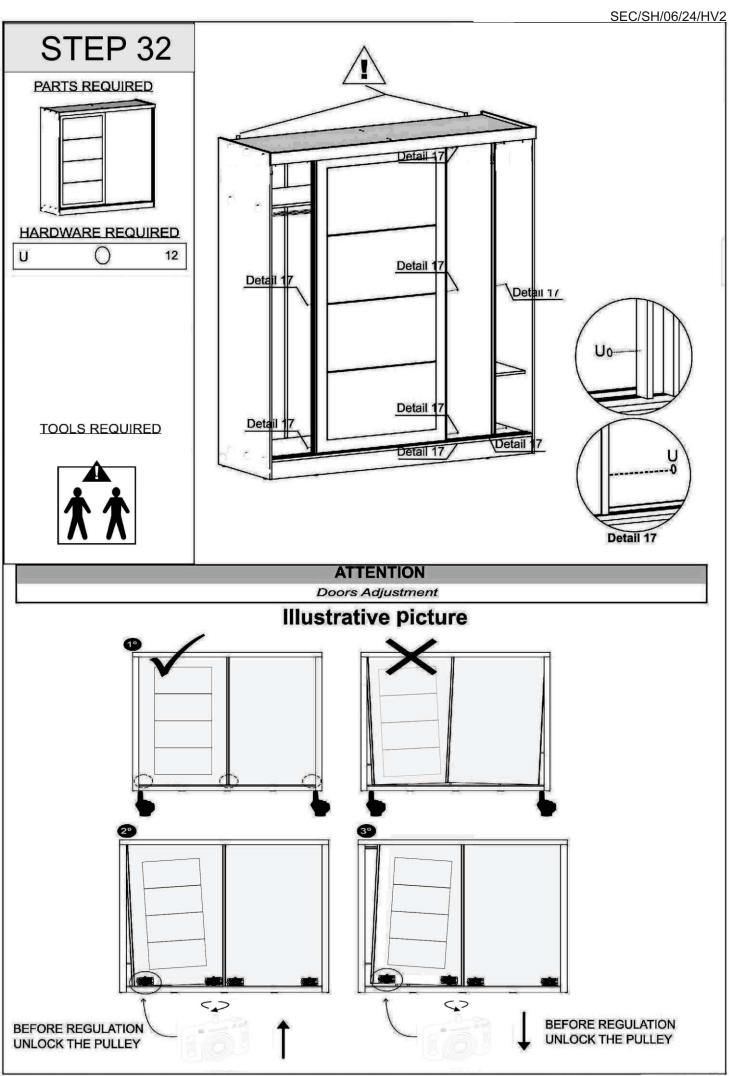

### **WARNING**

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices.

Please make sure you use fixings suitable for the walls in your home.

