


MALVERN 3 DRAWER BEDSIDE ASSEMBLY INSTRUCTIONS

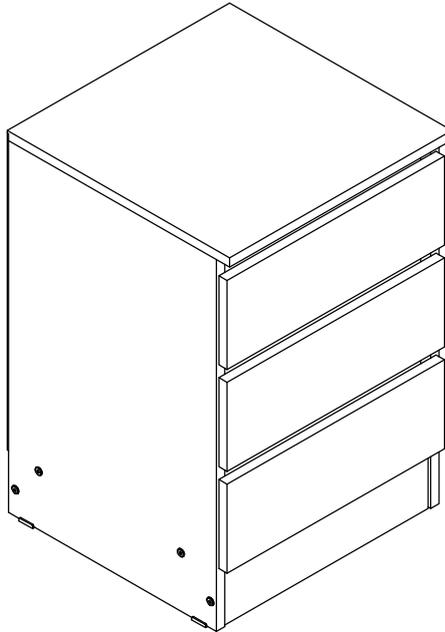

IMPORTANT FOR DOMESTIC USE ONLY PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.


ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE. DO NOT OVERTIGHTEN FIXING.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET) DO NOT USE POLISH, DÉTERGENT OR CHEMICAL CLEANERS.



THE SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

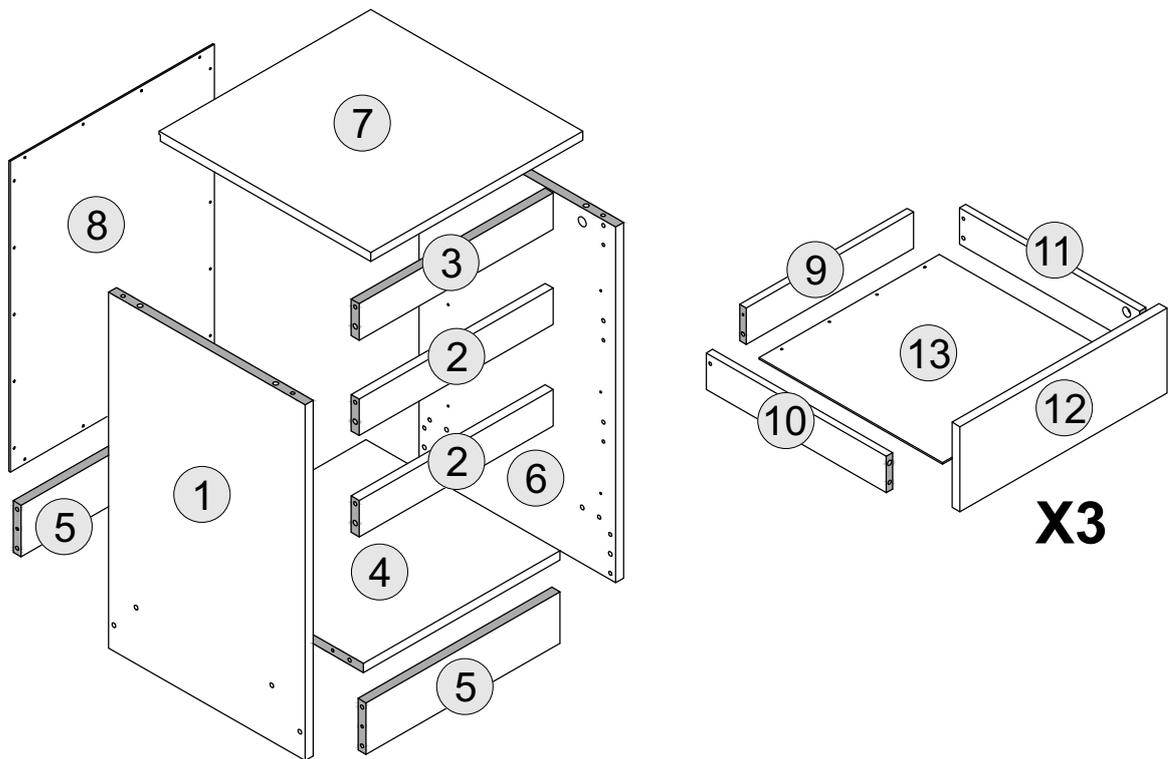


PART LIST

Part Number	Part Code	Part Description	Quantity	Carton
1	S100-103-093-EU1-01	Side Panel - Left	1	1/1
2	S100-103-093-EU1-02	Crossbar	2	1/1
3	S100-103-093-EU1-03	Top Crossbar	1	1/1
4	S100-103-093-EU1-04	Bottom Panel	1	1/1
5	S100-103-093-EU1-05	Base Apron	2	1/1
6	S100-103-093-EU1-06	Side Panel - Right	1	1/1
7	S100-103-093-EU1-07	Top Panel	1	1/1
8	S100-103-093-EU1-08	Back Panel	1	1/1
9	S100-103-093-EU1-09	Drawer Back	3	1/1
10	S100-103-093-EU1-10	Drawer Side - Left	3	1/1
11	S100-103-093-EU1-11	Drawer Side - Right	3	1/1
12	S100-103-093-EU1-12	Drawer Front	3	1/1
13	S100-103-093-EU1-13	Drawer Base	3	1/1


HARDWARE LIST

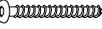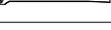A		DOWEL 6 X 30MM	34 PCS
B		ALLEN KEY	1 PC
C		BOLT M6 X 50MM	8 PCS
D		SCREW M3.5 X 16MM	22 PCS
E		TACK	18 PCS
F		PLASTIC FOOT	4 PCS
G		SCREW M3.5 X 12MM	36 PCS
H		CAM BOLT + CAM NUT	16 SETS
I		DRAWER RUNNER A - L/R	6 PCS
J		DRAWER RUNNER B - L/R	6 PCS
K		SCREW M4 X 38MM	6 PCS

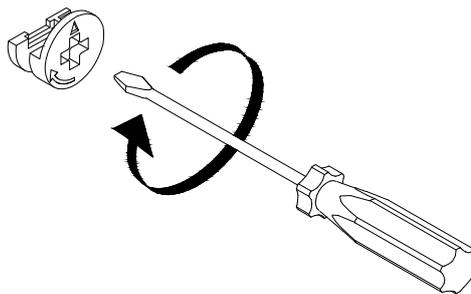

(SCREWDRIVER NOT PROVIDED)

USE A FLAT HEAD SCREWDRIVER TO TIGHTEN THE CAM NUTS. A QUARTER TURN CLOCKWISE IS ALL THAT IS NEEDED.

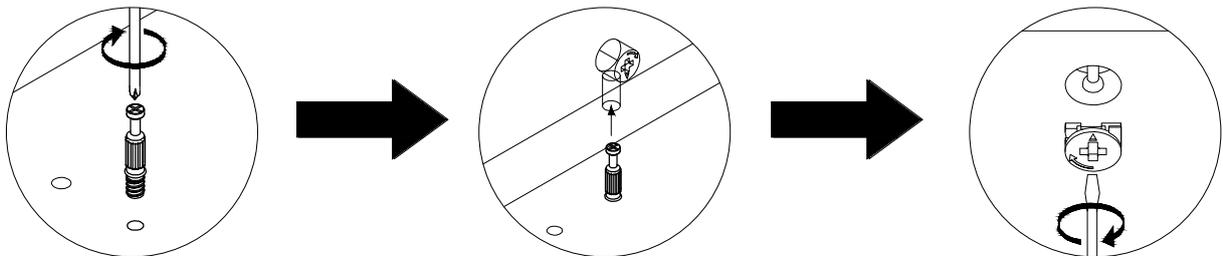

STEP 1 - USE A CROSS SLOT SCREWDRIVER TO TIGHTEN THE CAM BOLT INTO THE HOLE.

STEP 2 - ALIGN THE CAM BOLT WITH THE HOLE AND PUSH TOGETHER UNTIL FLUSH. (MAKE SURE THE ARROW OF THE CAM LOCK IS POINTING TOWARD ON THE EDGE OF THE PANEL.)

STEP 3 - THE HEAD OF THE BOLT GOES INTO THE WIDE MOUTH OF THE CAM LOCK. YOU THEN TURN THE LOCK SO THE NARROW PART CLOSES OVER THE BOLT.

STEP 1

PARTS REQUIRED

1 - SIDE PANEL - LEFT x1


HARDWARE REQUIRED

A  02




G  12

H  03

H  02

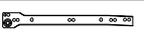I  03

TOOLS REQUIRED

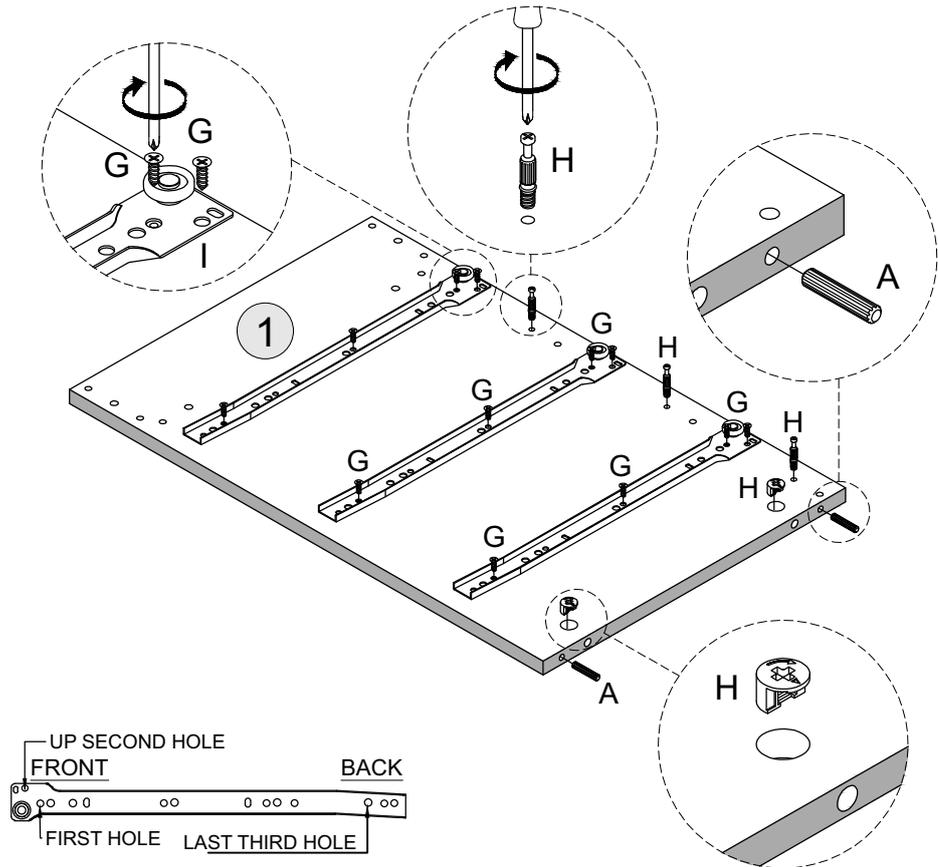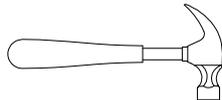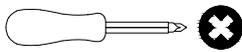

STEP 2

PARTS REQUIRED

6 - SIDE PANEL - RIGHT x1


HARDWARE REQUIRED

A  02




G  12

H  03

H  02

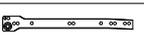I  03

TOOLS REQUIRED

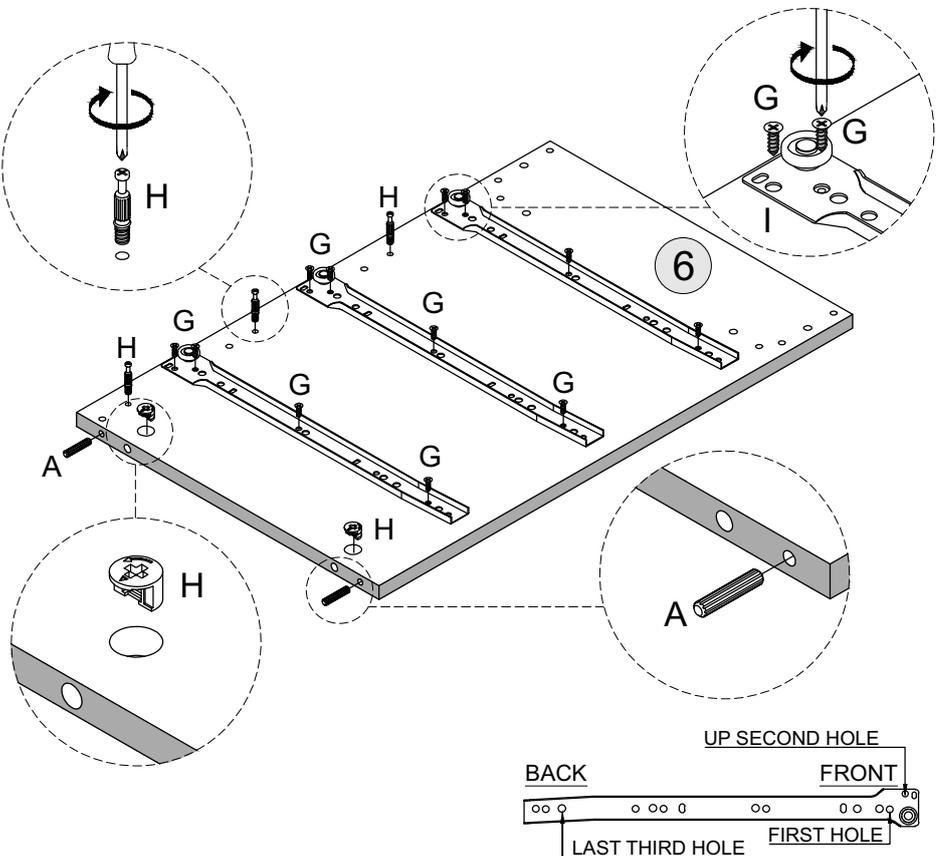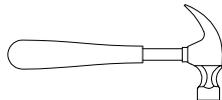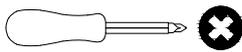

STEP 3



PARTS REQUIRED

2 - CROSSBAR	x2
3 - TOP CROSSBAR	x1
5 - BASE APRON	x2

HARDWARE REQUIRED

A		14
H		06

TOOLS REQUIRED

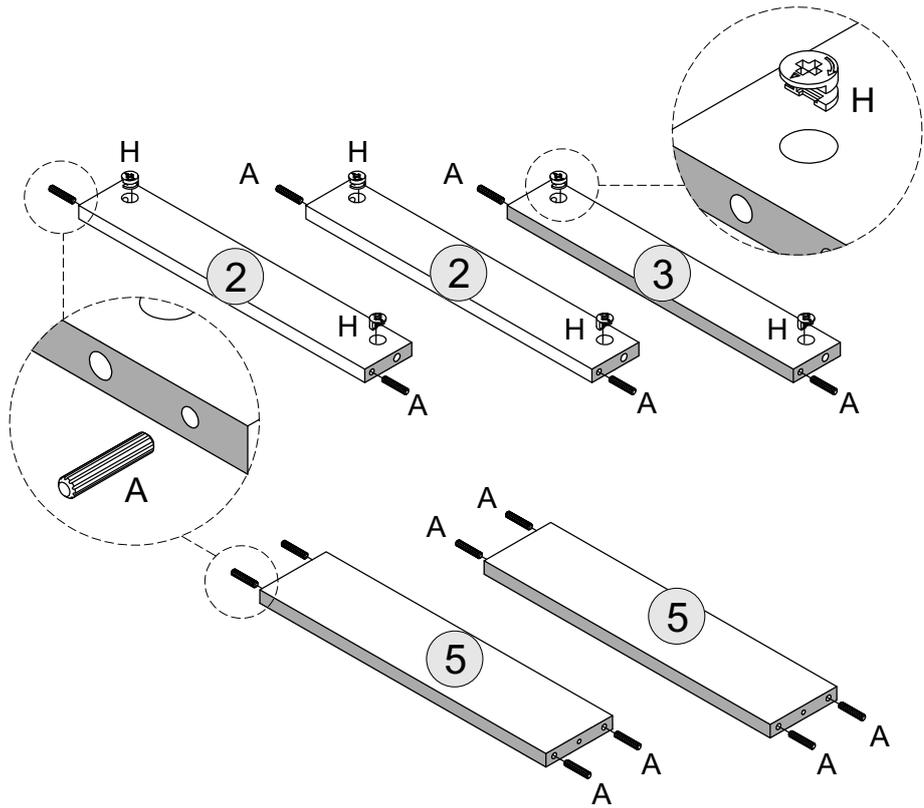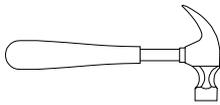

STEP 4



PARTS REQUIRED

4 - BOTTOM PANEL	x1
7 - TOP PANEL	x1

HARDWARE REQUIRED

A		04
H		04

TOOLS REQUIRED

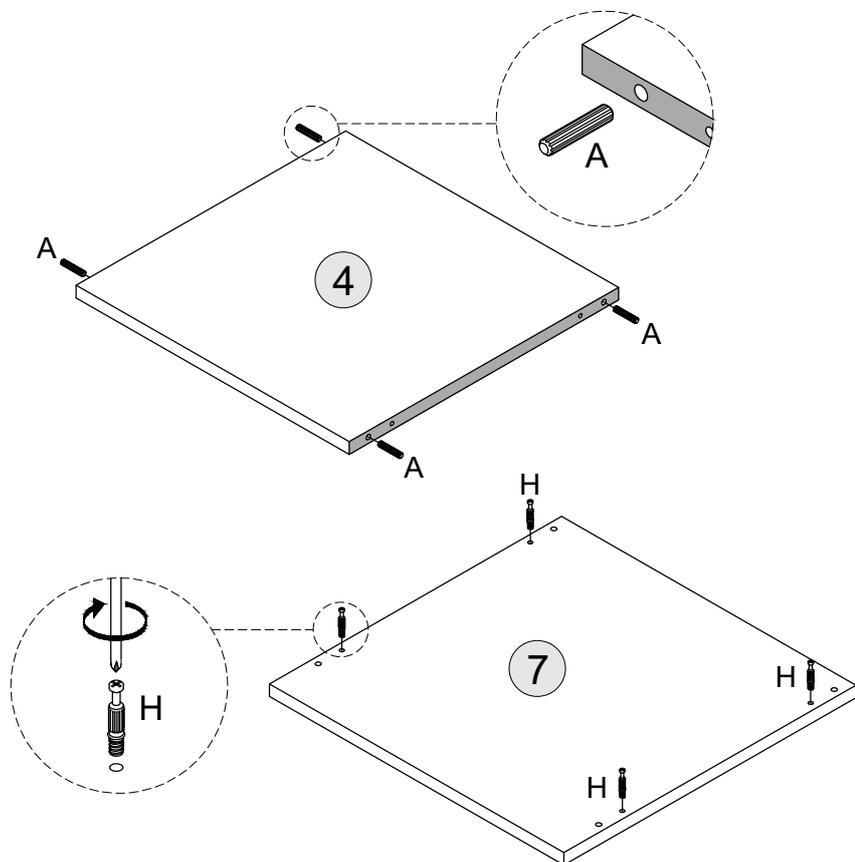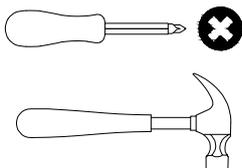


STEP 5

PARTS REQUIRED

1 - SIDE PANEL - LEFT	x1
2 - CROSSBAR	x2
3 - TOP CROSSBAR	x1

HARDWARE REQUIRED


TOOLS REQUIRED

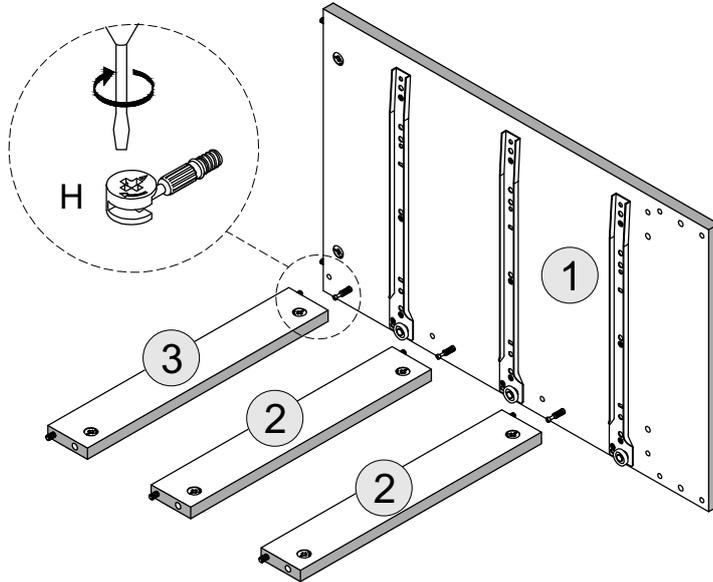

STEP 6

PARTS REQUIRED


4 - BOTTOM PANEL	x1
5 - BASE APRON	x2

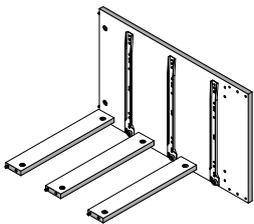

HARDWARE REQUIRED

C		04
---	--	----


TOOLS REQUIRED

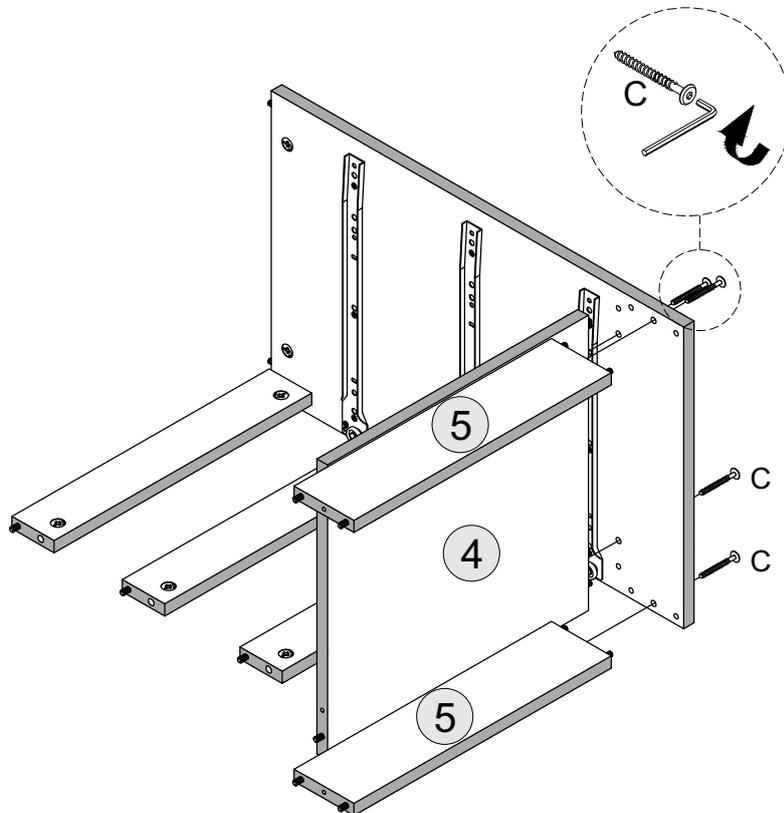


STEP 7

PARTS REQUIRED



6 - SIDE PANEL - RIGHT x1

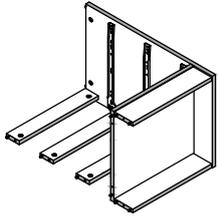

HARDWARE REQUIRED

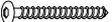C  04


TOOLS REQUIRED

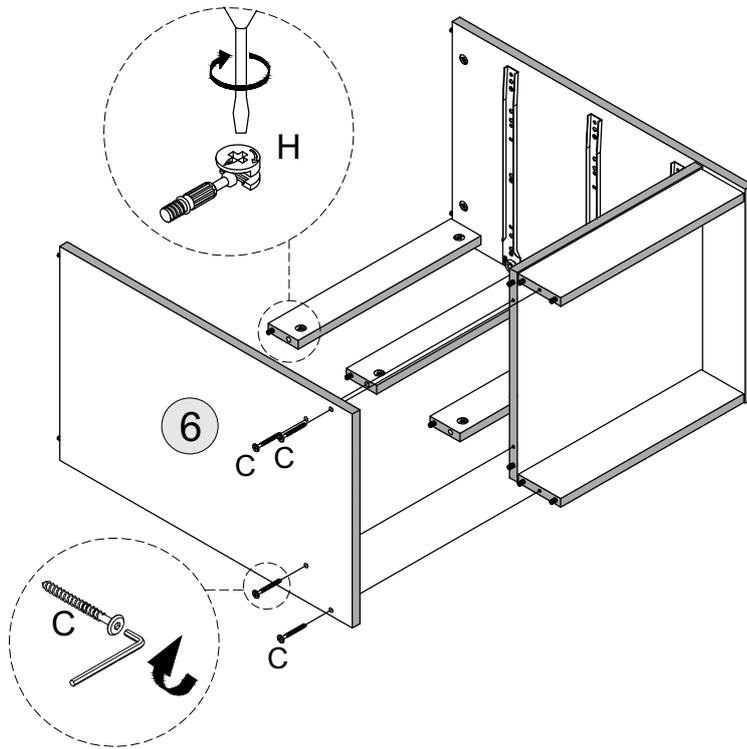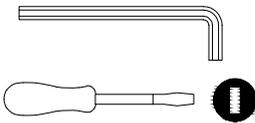

STEP 8

PARTS REQUIRED

7 - TOP PANEL x1


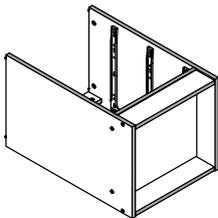


HARDWARE REQUIRED

D  04

F  04


TOOLS REQUIRED

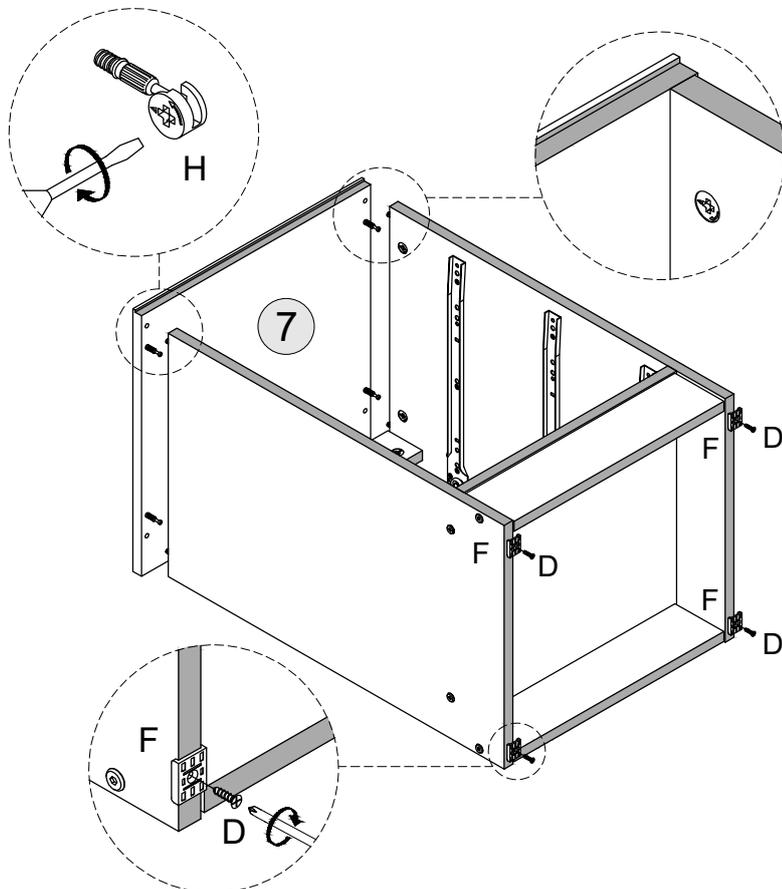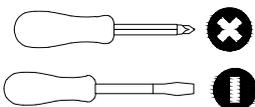

STEP 9

PARTS REQUIRED



8 - BACK PANEL x1

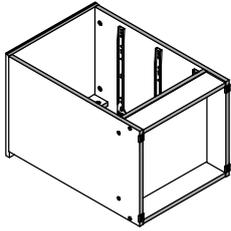

HARDWARE REQUIRED

E  18

TOOLS REQUIRED

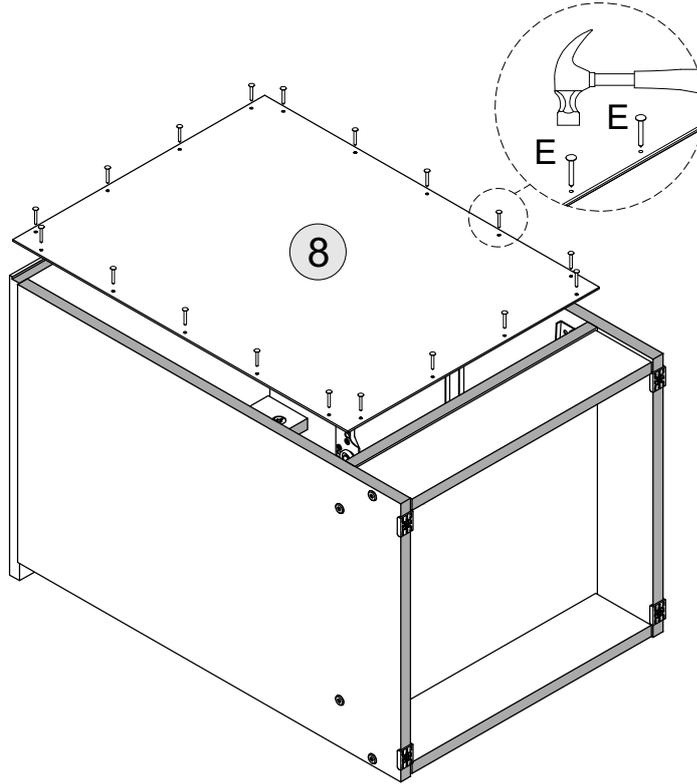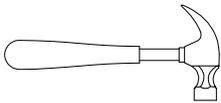

STEP 10

PARTS REQUIRED

9 - DRAWER BACK x3

10 - DRAWER SIDE-LEFT x3

11 - DRAWER SIDE-RIGHT x3

12 - DRAWER FRONT x3



HARDWARE REQUIRED

A  12

H  06

K  06


TOOLS REQUIRED

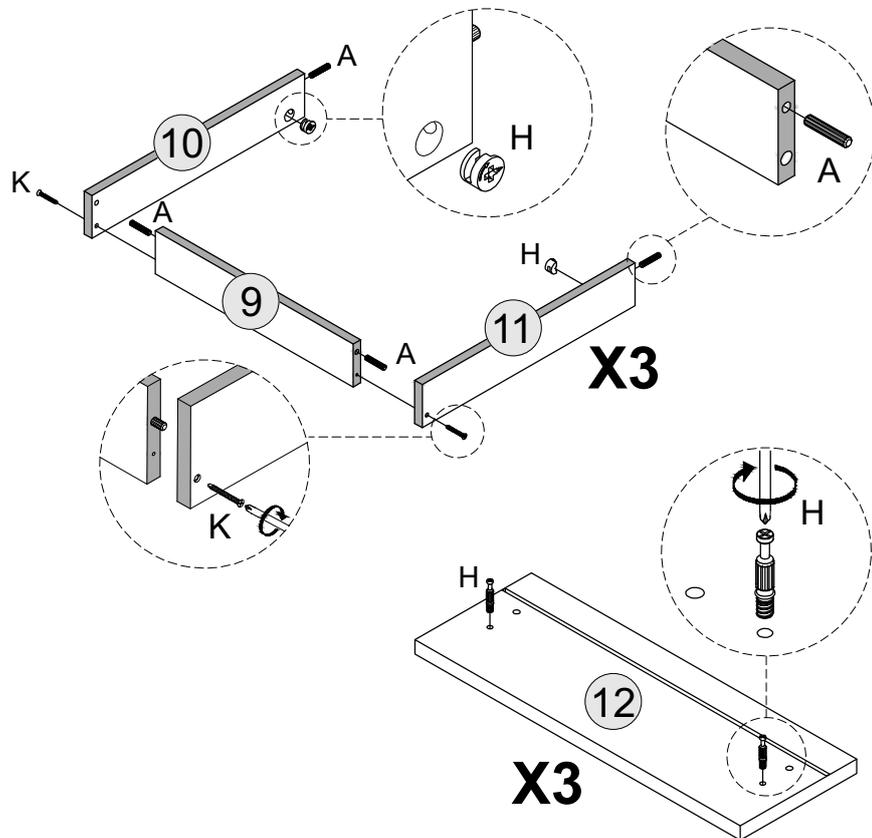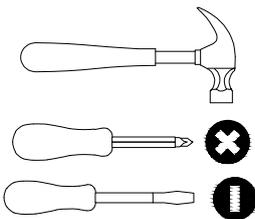

STEP 11

PARTS REQUIRED



13 - DRAWER BASE x3

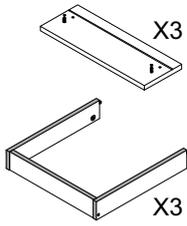

HARDWARE REQUIRED


G  12

TOOLS REQUIRED

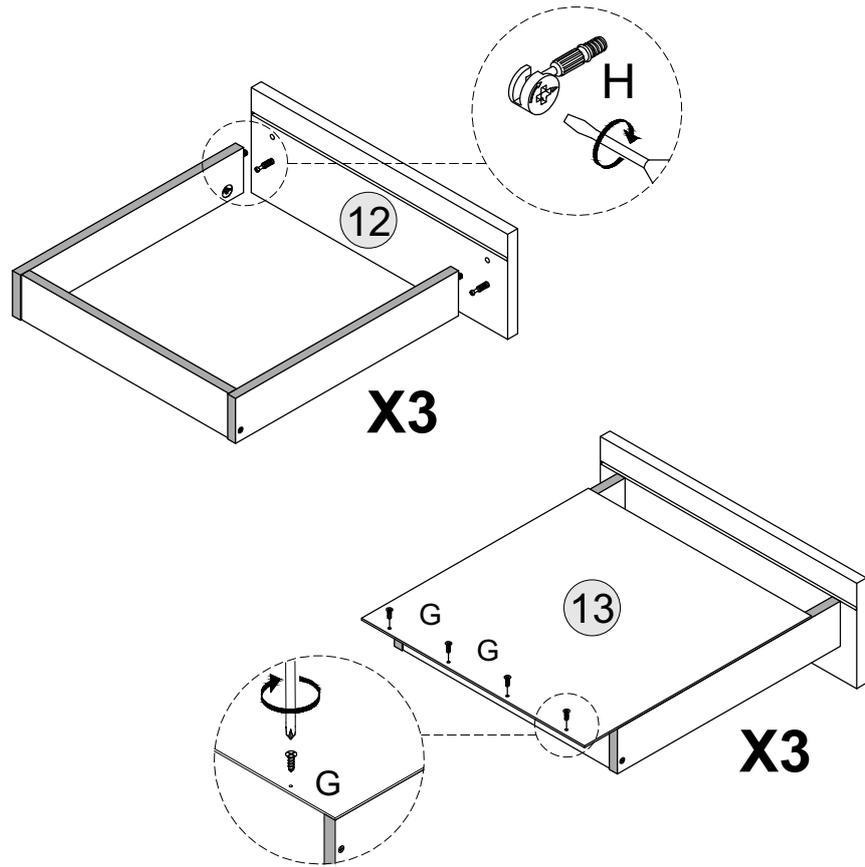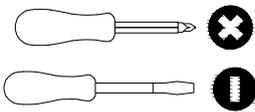

STEP 12

PARTS REQUIRED

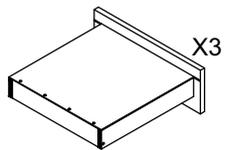


HARDWARE REQUIRED

D  18



J  06

TOOLS REQUIRED

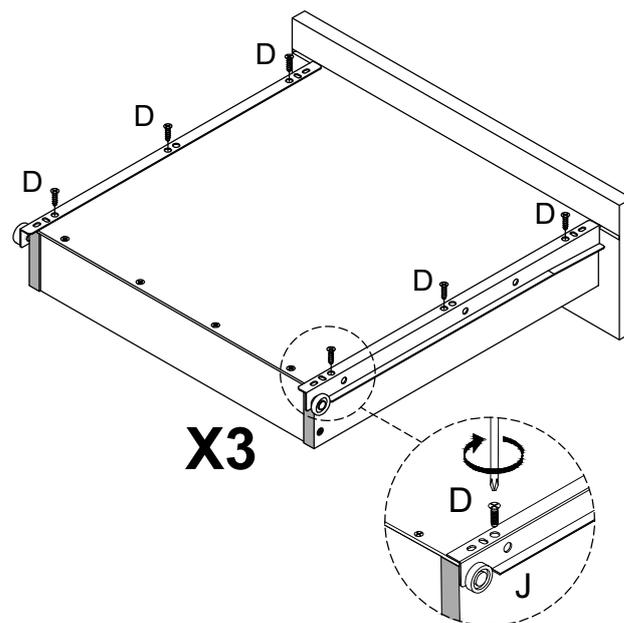


STEP 13

PARTS REQUIRED

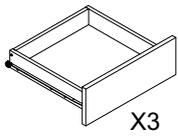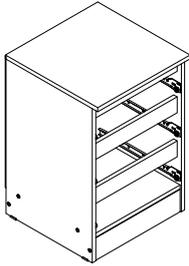


HARDWARE REQUIRED

TOOLS REQUIRED

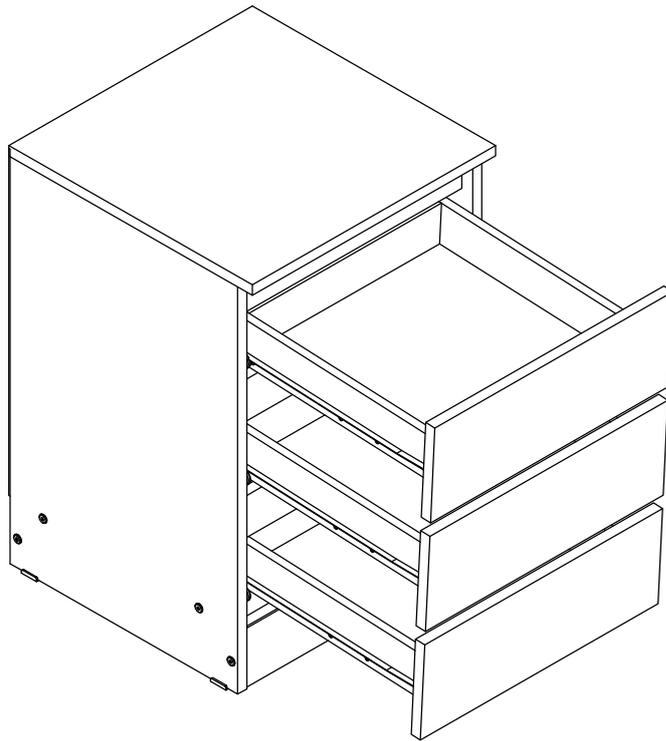

STEP 14

PARTS REQUIRED

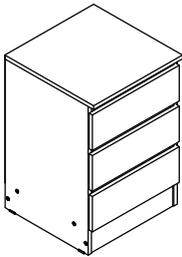

HARDWARE REQUIRED

TOOLS REQUIRED

