



CORONA 3 DRAWER BEDSIDE ASSEMBLY INSTRUCTIONS

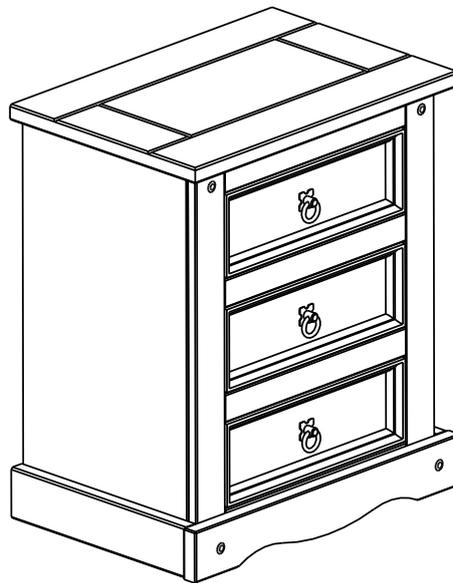

IMPORTANT PLEASE READ BEFORE YOU CONTINUE FURTHER **FOR DOMESTIC USE ONLY** **CARE AND MAINTENANCE**

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- We strongly recommend that you keep children away from your work area.
- Assemble this product as close to its final position as possible.
- Never drag or push products as this could cause damage to the joints making it inferior.
- Do not place this product next to a radiator or in direct sunlight.
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a duster, and do not use detergents of any kind. However, the surface will need to be retreated from time to time. This can be done by using block wax (unperfumed) and rubbing it over the whole item.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.



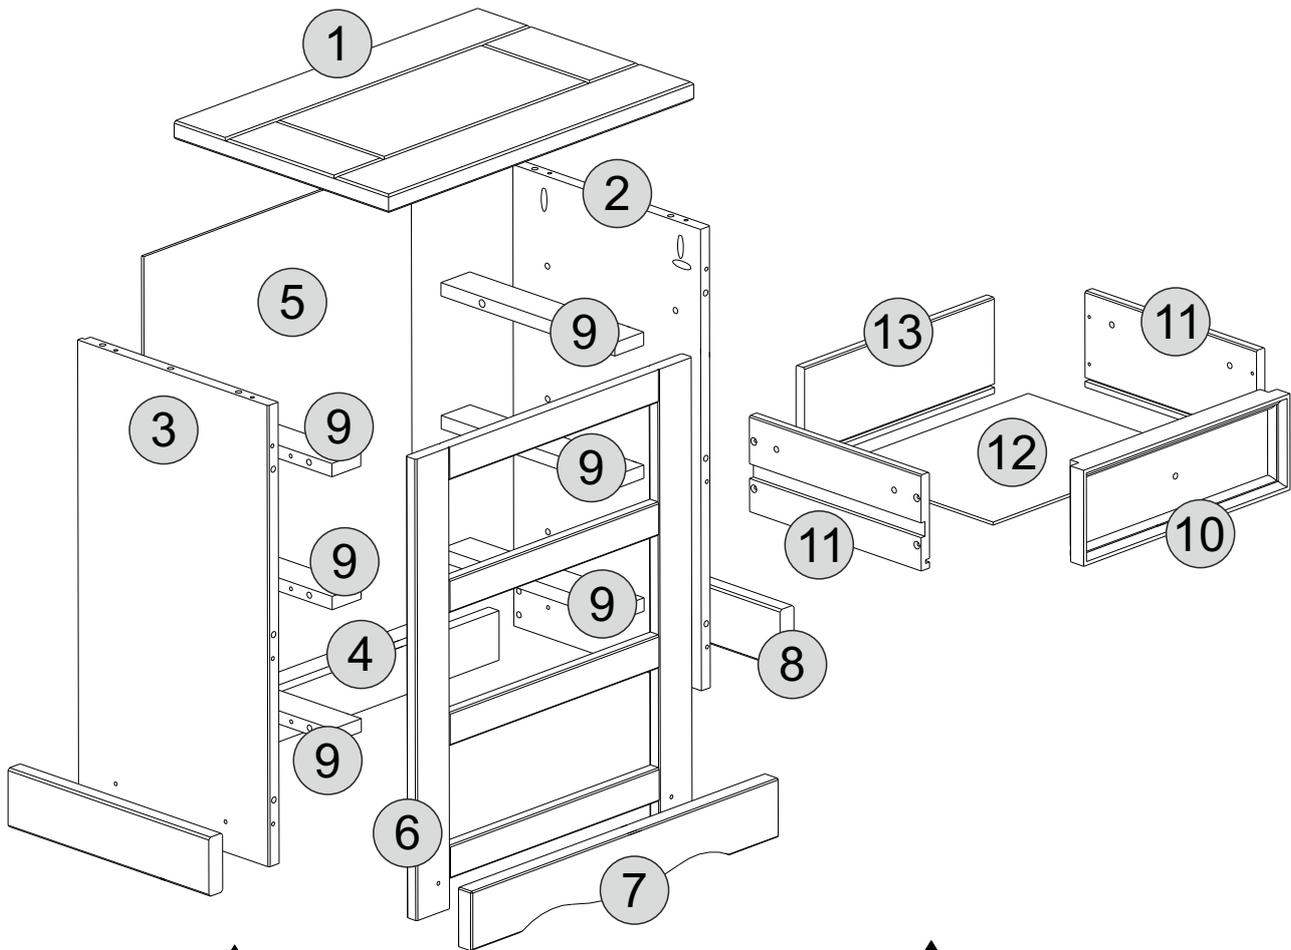


* Use of power tools to assemble this product will invalidate any claim and damage this product making it unsafe !!!
* Please assemble on a clean soft surface to avoid damage.


* Please check contents and read the instructions before commencing assembly.
* Assemble this product following the enclosed instructions carefully.
* Please take care to avoid damaging panels during assembly.

Part Number	Part Code	Part Description	Quantity	Carton
1	S100-103-010-MY1-01	Top Panel	1	1/1
2	S100-103-010-MY1-02	Right Side Panel	1	1/1
3	S100-103-010-MY1-03	Left Side Panel	1	1/1
4	S100-103-010-MY1-04	Back Crossbeam	1	1/1
5	S100-103-010-MY1-05	Back Panel	1	1/1
6	S100-103-010-MY1-06	Front Frame	1	1/1
7	S100-103-010-MY1-07	Front Plinth	1	1/1
8	S100-103-010-MY1-08	Side Plinth	2	1/1
9	S100-103-010-MY1-09	Drawer Runner	6	1/1
10	S100-103-010-MY1-10	Drawer Front	3	1/1
11	S100-103-010-MY1-11	Drawer Side	6	1/1
12	S100-103-010-MY1-12	Drawer Bottom	3	1/1
13	S100-103-010-MY1-13	Drawer Back	3	1/1



FITTINGS

A	 Ø 8 x 30mm	34	E	 10x10	15
B	 Ø 4,0 x 40mm	12	F	 3/16" x 1/2"	03
C	 Ø 3,5 x 35mm	18	G		04
D	 Ø 3,0 x 30mm	24	H	 Ø 3,5 x 16mm	04

TOOLS REQUIRED

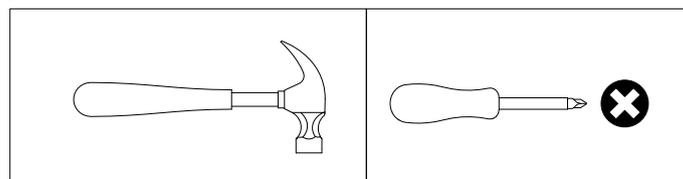

2,5m x 3m

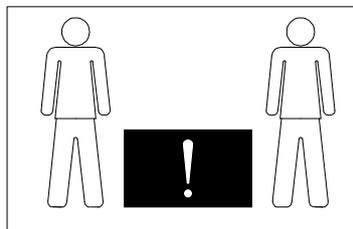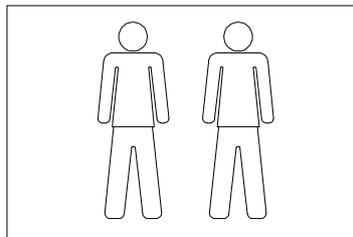

STEP 1


PARTS REQUIRED

2 - RIGHT SIDE PANEL x1


HARDWARE REQUIRED

A  06
Ø 8 x 30mm

TOOLS REQUIRED

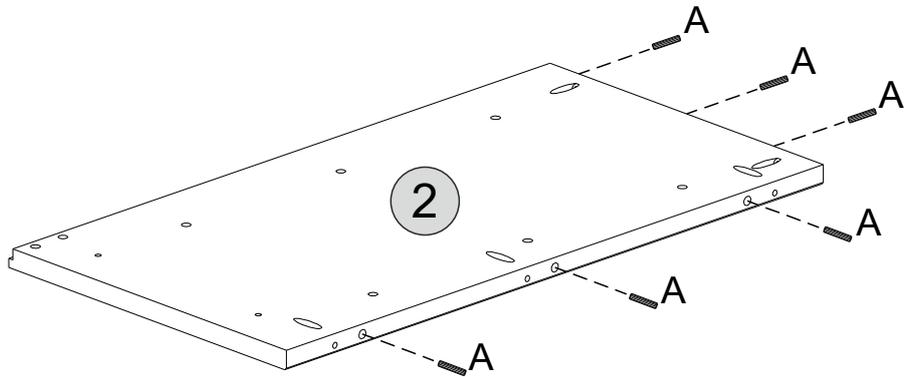

Please assemble on a clean soft surface to avoid damage.

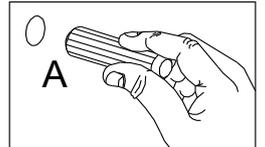

STEP 2


PARTS REQUIRED

3 - LEFT SIDE PANEL x1


HARDWARE REQUIRED

A  06
Ø 8 x 30mm

TOOLS REQUIRED

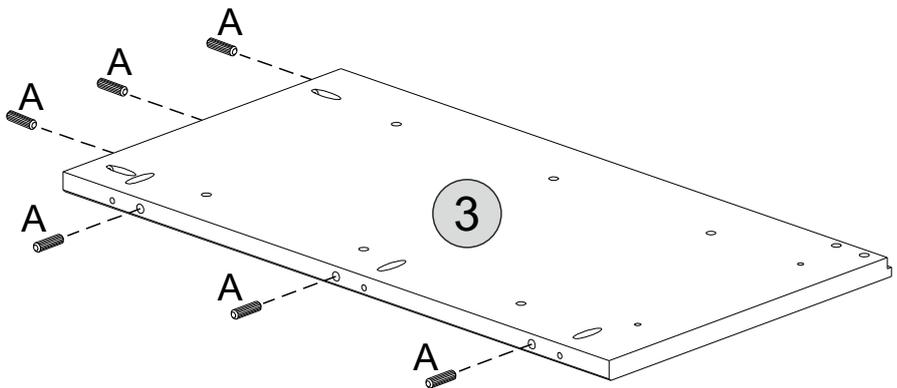

Please assemble on a clean soft surface to avoid damage.

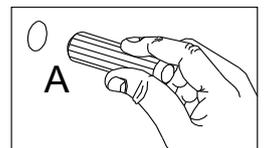

STEP 3

PARTS REQUIRED


4 - BACK CROSSBEAM x1

9 - DRAWER RUNNER x6


HARDWARE REQUIRED

B  16
 Ø 8 x 30mm

TOOLS REQUIRED

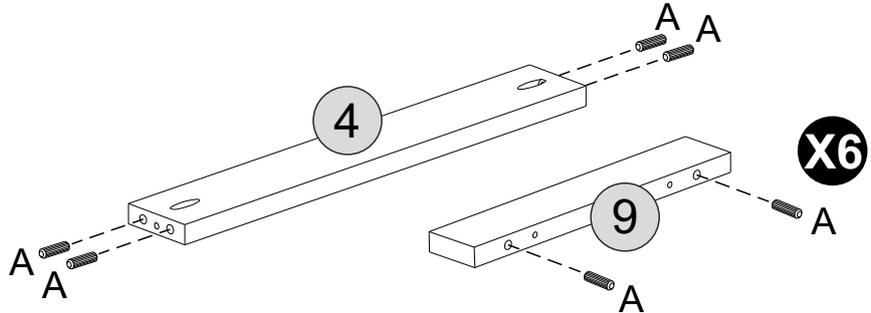


 Please assemble on a clean soft surface to avoid damage.

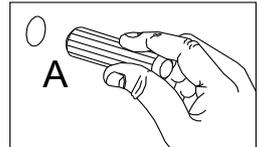

STEP 4

PARTS REQUIRED

2 - RIGHT SIDE PANEL x1



3 - LEFT SIDE PANEL x1

4 - BACK CROSSBEAM x1

HARDWARE REQUIRED

C  02
 Ø 3,5 x 35mm

TOOLS REQUIRED

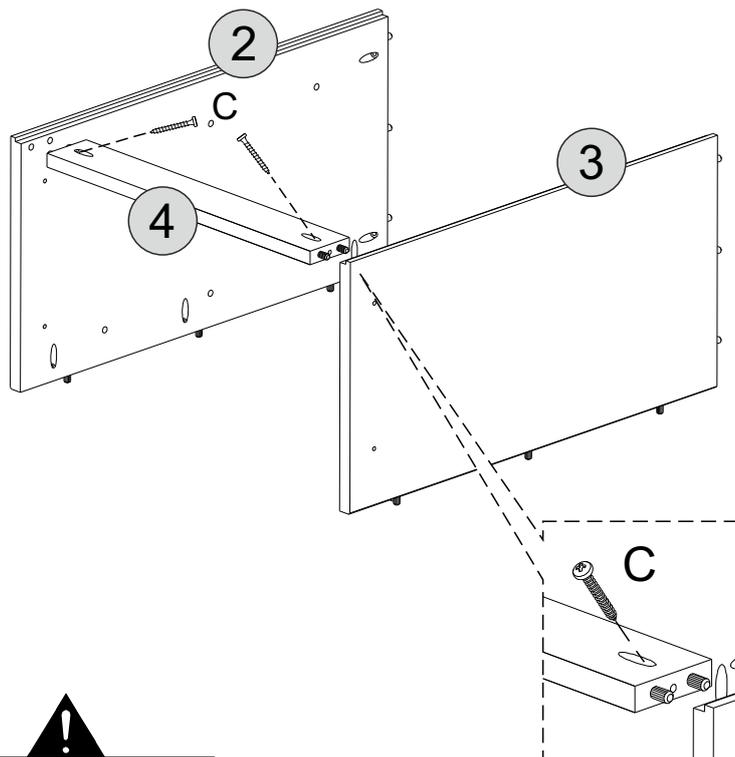



 Please assemble on a clean soft surface to avoid damage.

STEP 5

PARTS REQUIRED



6 - FRONT FRAME x1

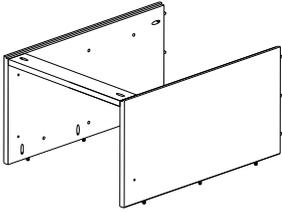

HARDWARE REQUIRED

C  06
Ø 3,5 x 35mm

TOOLS REQUIRED

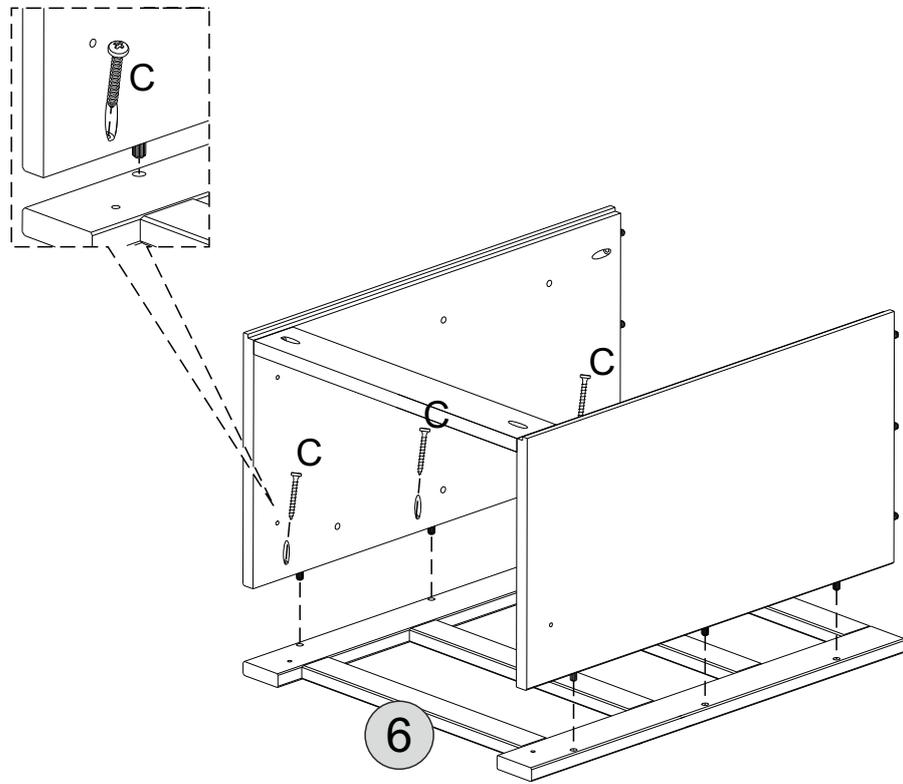


 Please assemble on a clean soft surface to avoid damage.

STEP 6

PARTS REQUIRED



1 - TOP PANEL x1

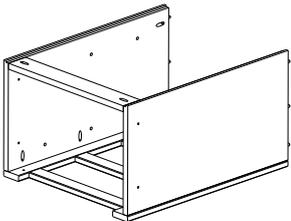

HARDWARE REQUIRED

C  04
Ø 3,5 x 35mm

TOOLS REQUIRED

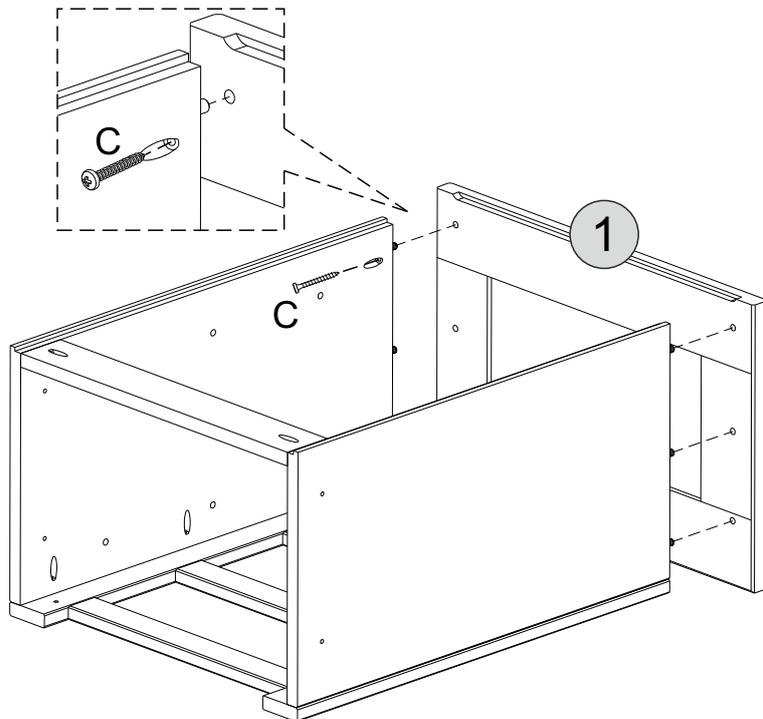


 Please assemble on a clean soft surface to avoid damage.

STEP 7

PARTS REQUIRED

7 - FRONT PLINTH x1



8 - SIDE PLINTH x2

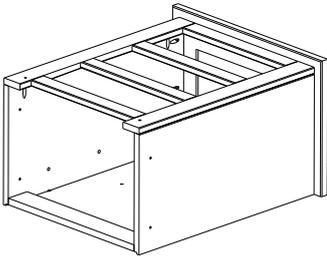

HARDWARE REQUIRED

C  06
Ø 3,5 x 35mm

TOOLS REQUIRED

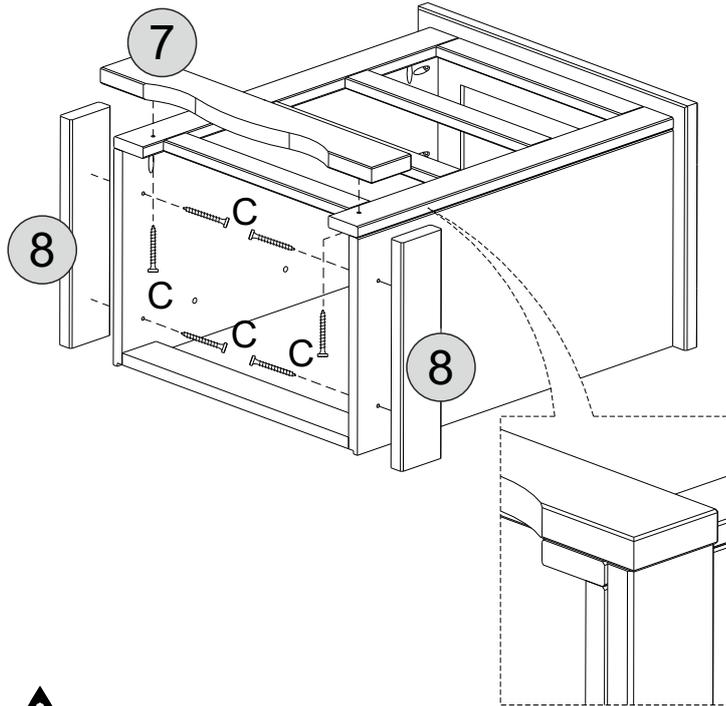



Please assemble on a clean soft surface to avoid damage.


STEP 8

PARTS REQUIRED



9 - DRAWER RUNNER x6

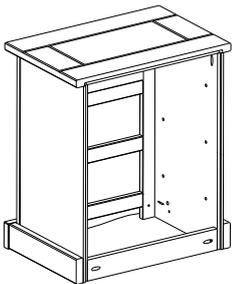

HARDWARE REQUIRED

B  12
Ø 4,0 x 40mm

TOOLS REQUIRED

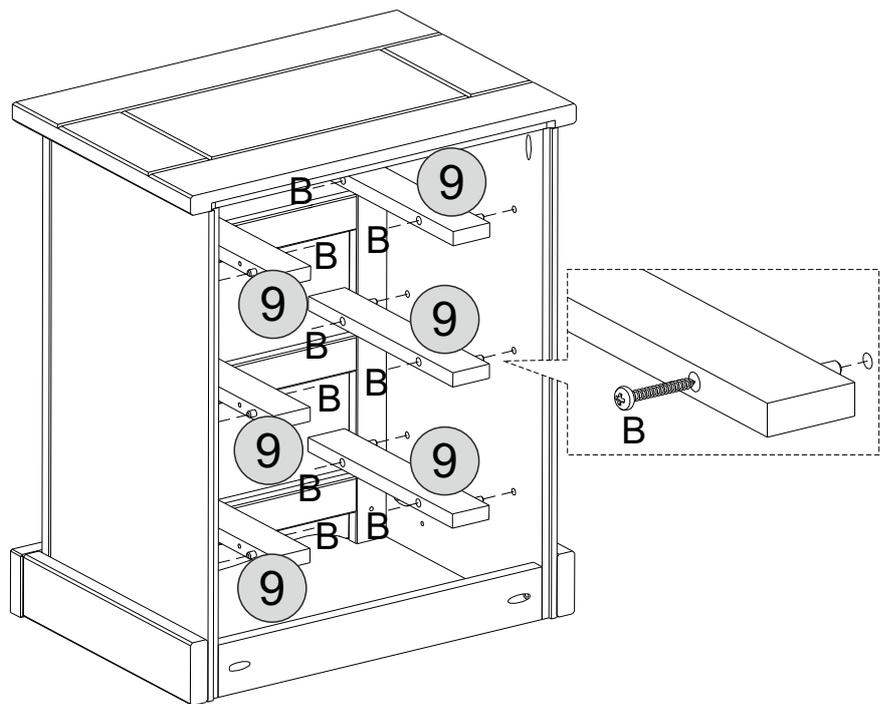



Please assemble on a clean soft surface to avoid damage.

STEP 9

PARTS REQUIRED

5 - BACK PANEL x1



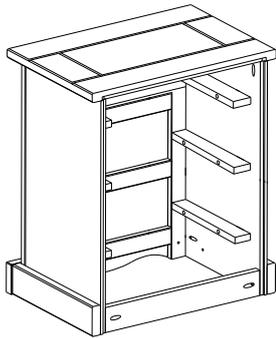


HARDWARE REQUIRED

E  10 x 10 15

H  Ø 3,5 x 16mm 04

TOOLS REQUIRED

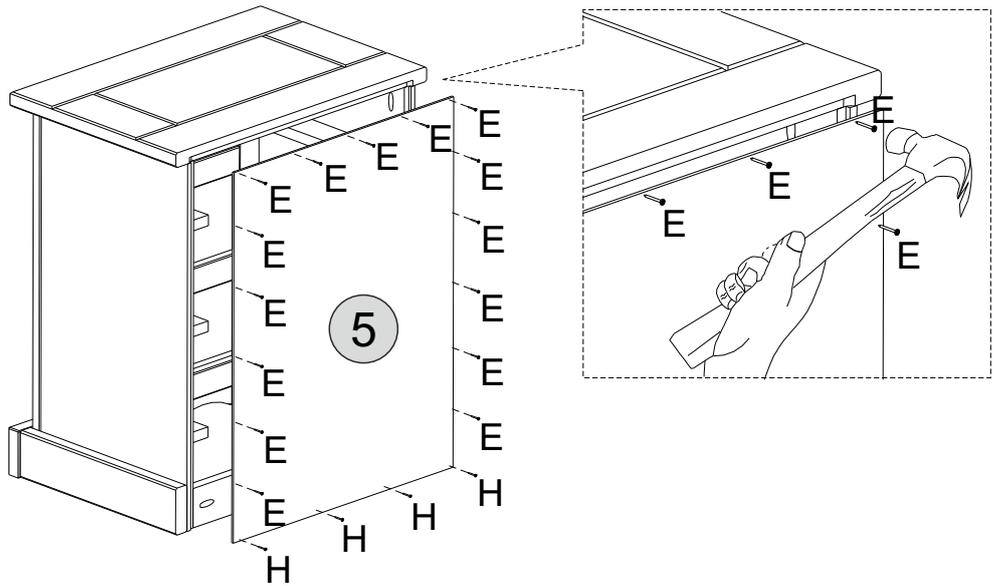

 Please assemble on a clean soft surface to avoid damage.

STEP 10

PARTS REQUIRED

10 - DRAWER FRONT x3



11 - DRAWER SIDE x6

HARDWARE REQUIRED

D  Ø 3,0 x 30mm 12

F  03

TOOLS REQUIRED

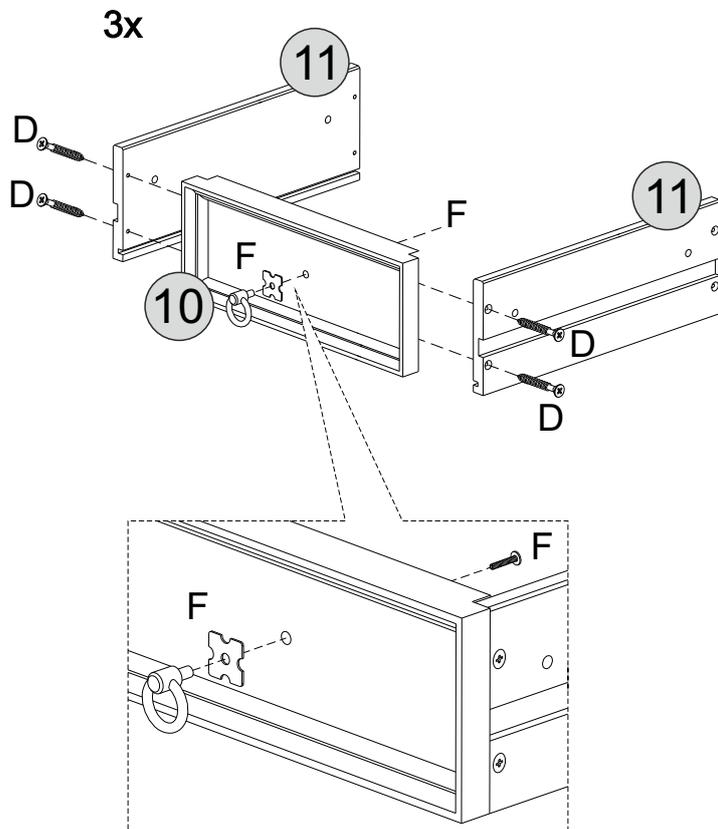



 Please assemble on a clean soft surface to avoid damage.

STEP 11


PARTS REQUIRED

12 - DRAWER BOTTOM x1


13 - DRAWER BACK x1

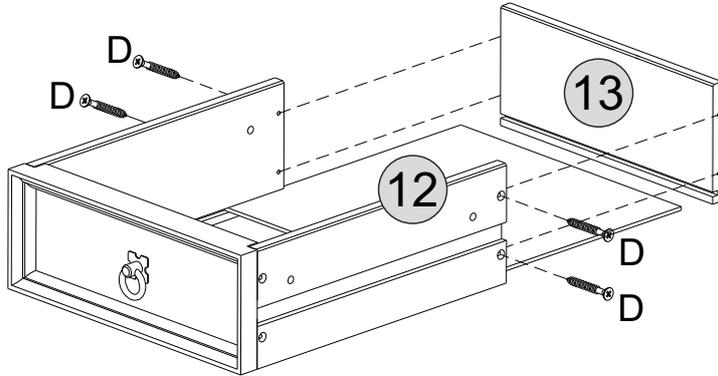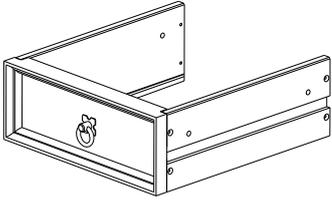

HARDWARE REQUIRED

D  12
Ø 3,0 x 30mm




TOOLS REQUIRED




 Please assemble on a clean soft surface to avoid damage.

STEP 12

PARTS REQUIRED

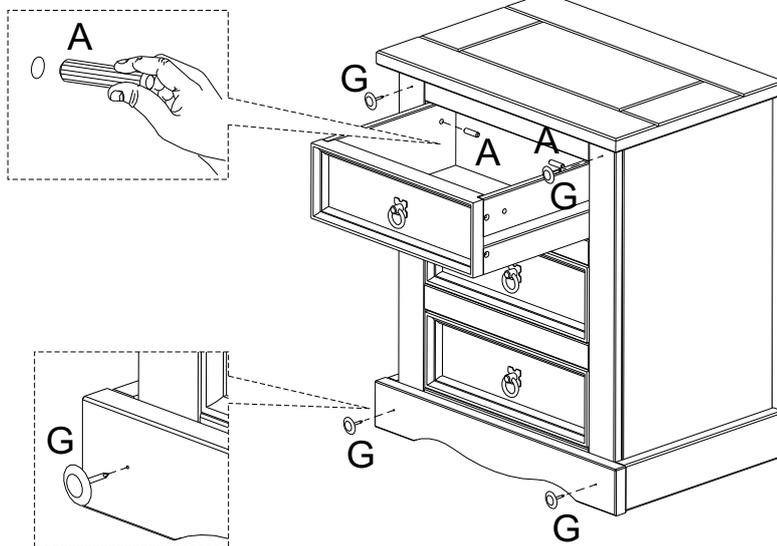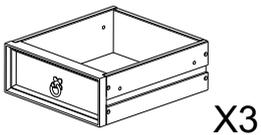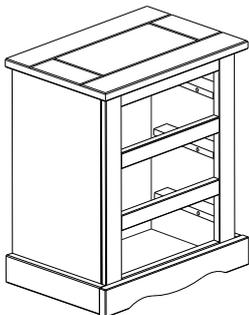


HARDWARE REQUIRED

A  06
Ø 8 x 30mm

G  04

TOOLS REQUIRED



 Please assemble on a clean soft surface to avoid damage.

