
CLEVELAND 2 DOOR WARDROBE ASSEMBLY INSTRUCTIONS WHITE/GREY METAL EFFECT

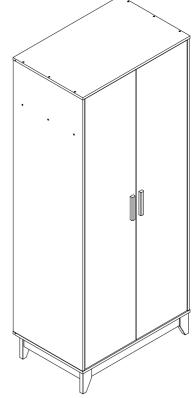






IMPORTANT FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

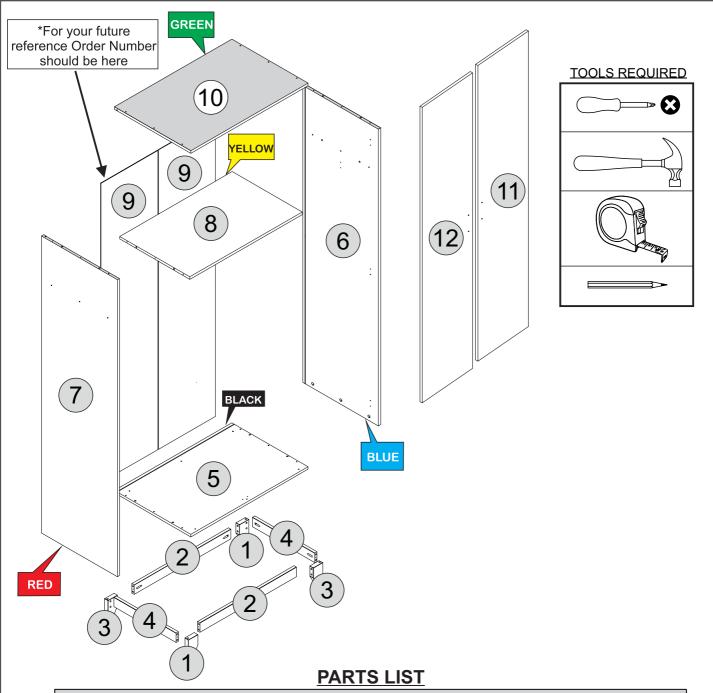


Please Note:


The below parts have all been stamped with the part number/color to help identify them during assembly.


Part Numer/Color	Part Code	Part Description	Quantity	Carton
1	S100-101-210-SP1-01	Left Leg	2	1/2
2	S100-101-210-SP1-02	Leg Support Front & Back	2	1/2
3	S100-101-210-SP1-03	Right Leg	2	1/2
4	S100-101-210-SP1-04	Leg Support Left & Right	2	1/2
5	S100-101-210-SP1-05	Base Panel - BLACK	1	1/2
6	S100-101-210-SP1-06	Right Side Panel - BLUE	1	1/2
7	S100-101-210-SP1-07	Left Side Panel - RED	1	1/2
8	S100-101-210-SP1-08	Shelf - YELLOW	1	1/2
9	S100-101-210-SP1-09	Back Panel	2	2/2
10	S100-101-210-SP1-10	Top Panel - GREEN	1	1/2
11	S100-101-210-SP1-11	Right Door	1	2/2
12	S100-101-210-SP1-12	Left Door	1	2/2

FITTINGS LIST

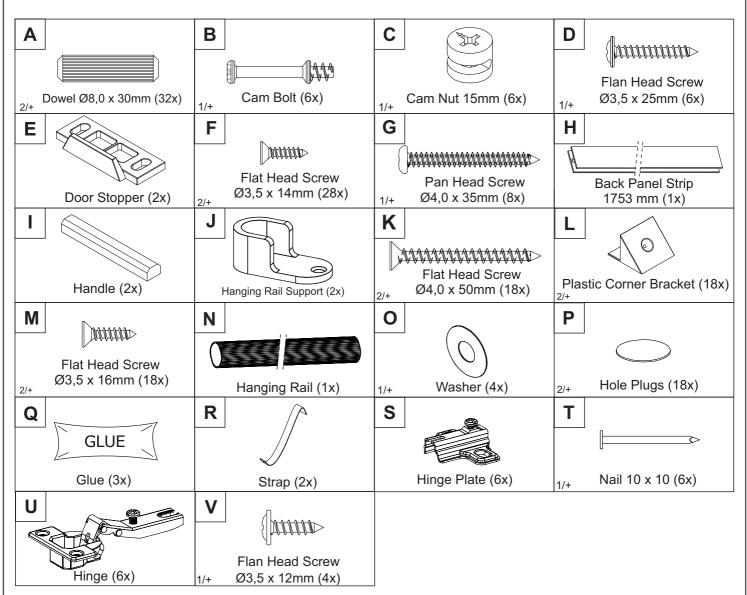


TIPS FOR FITTINGS CAM-LOCKS

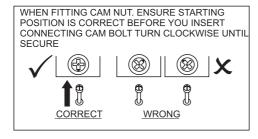


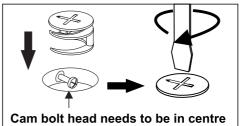

CAMBOLT

Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example beside)








PARTS REQUIRED


1 - LEFT LEG x2 3 - RIGHT LEG x2

HARDWARE REQUIRED



TOOLS REQUIRED



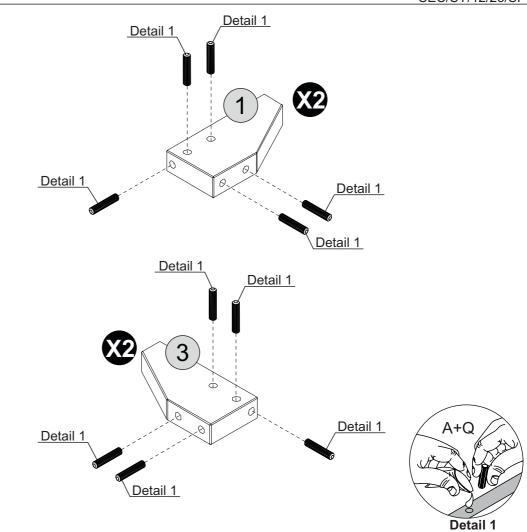

STEP 2


PARTS REQUIRED

1 - LEFT LEG x2


2- LEG SUPPORT FRONT &BACK x2

3 - RIGHT LEG x2

HARDWARE REQUIRED






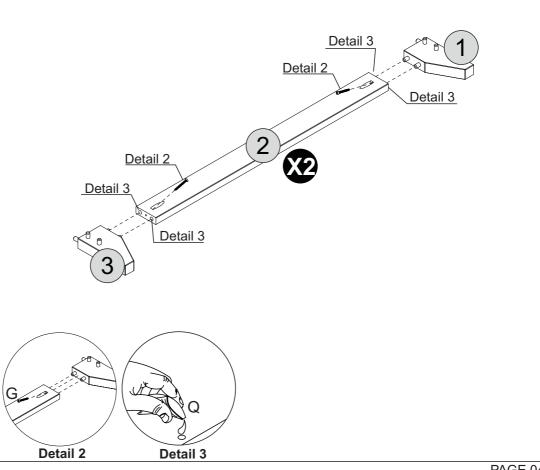



PARTS REQUIRED


4 - LEG SUPPORT LEFT & RIGHT x2




HARDWARE REQUIRED




TOOLS REQUIRED



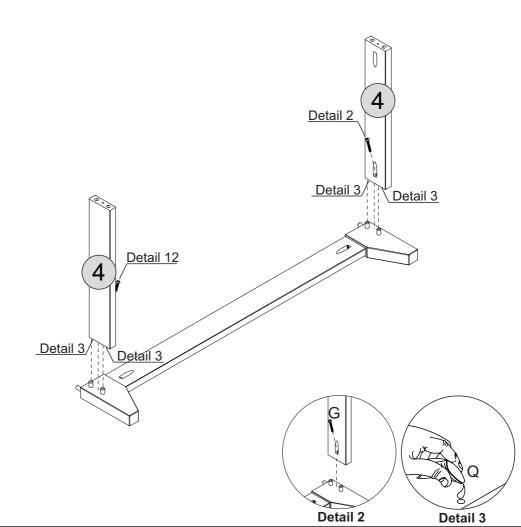


STEP 4

PARTS REQUIRED

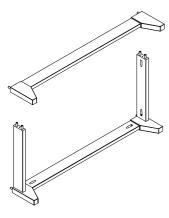



HARDWARE REQUIRED



TOOLS REQUIRED



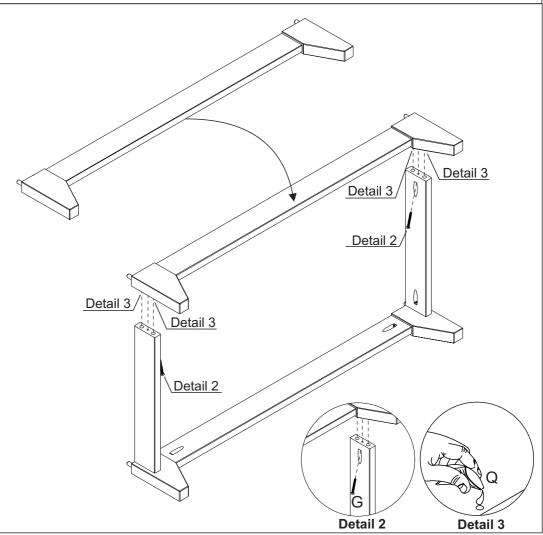

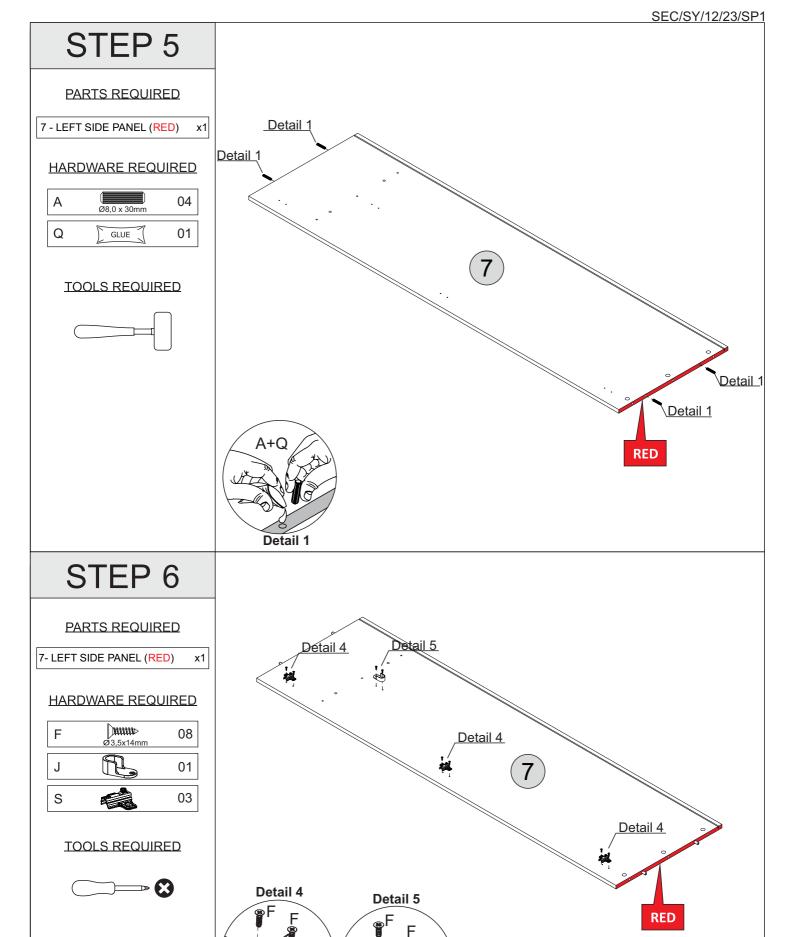

Please note:


Pre-marked

Holes

Please note:

Pre-marked

Holes

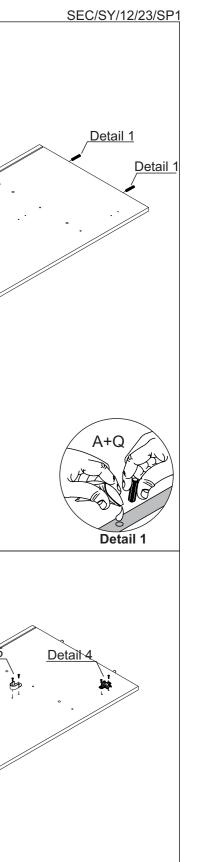

PARTS REQUIRED

6 - RIGHT SIDE PANEL (BLUE) x1

HARDWARE REQUIRED



TOOLS REQUIRED



Detail 1

Detail 1

BLUE

STEP 8


PARTS REQUIRED

6 - RIGHT SIDE PANEL (BLUE) x1

HARDWARE REQUIRED

F	M111111	08
J		01
S		03




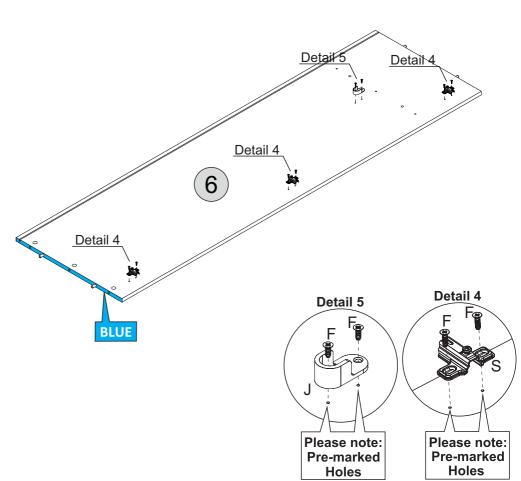

PARTS REQUIRED


8 - SHELF (YELLOW) x1

HARDWARE REQUIRED



TOOLS REQUIRED



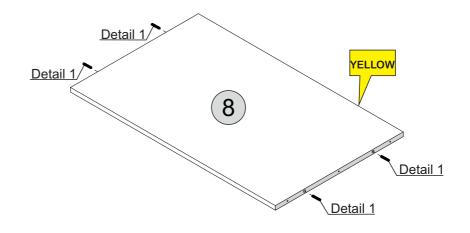




STEP 10

PARTS REQUIRED


5 - BASE PANEL (BLACK) x1

10 - TOP PANEL (GREEN) x1

HARDWARE REQUIRED






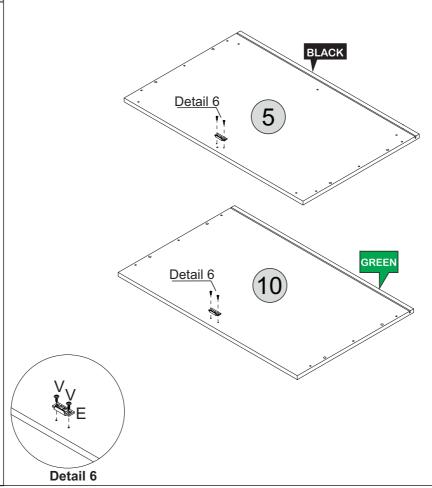



PARTS REQUIRED



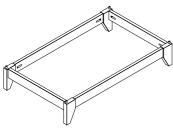


HARDWARE REQUIRED

K	Ø4,0 x 50mm	06	
Р		06	
Q	GLUE	01	


TOOLS REQUIRED



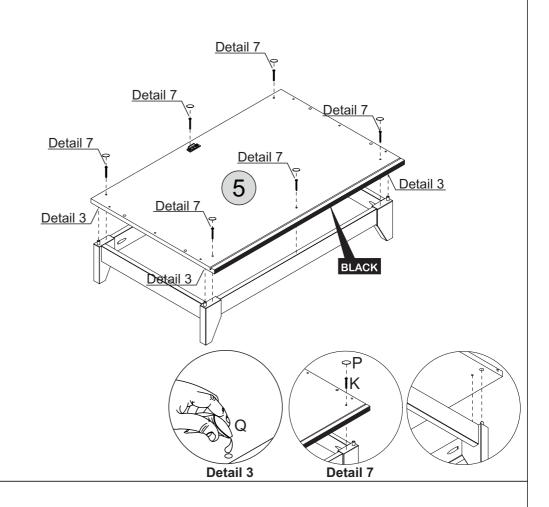

STEP 12

PARTS REQUIRED

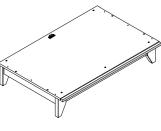


HARDWARE REQUIRED





TOOLS REQUIRED



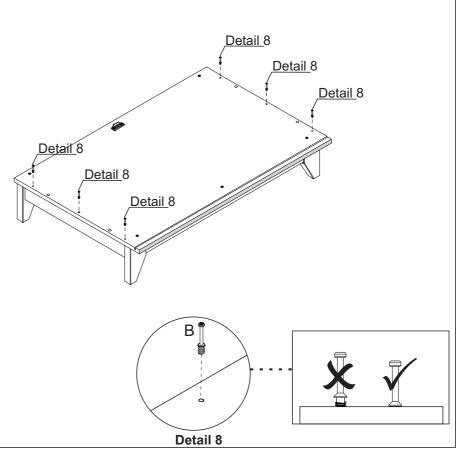

PARTS REQUIRED




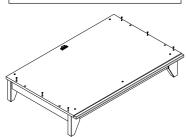



HARDWARE REQUIRED






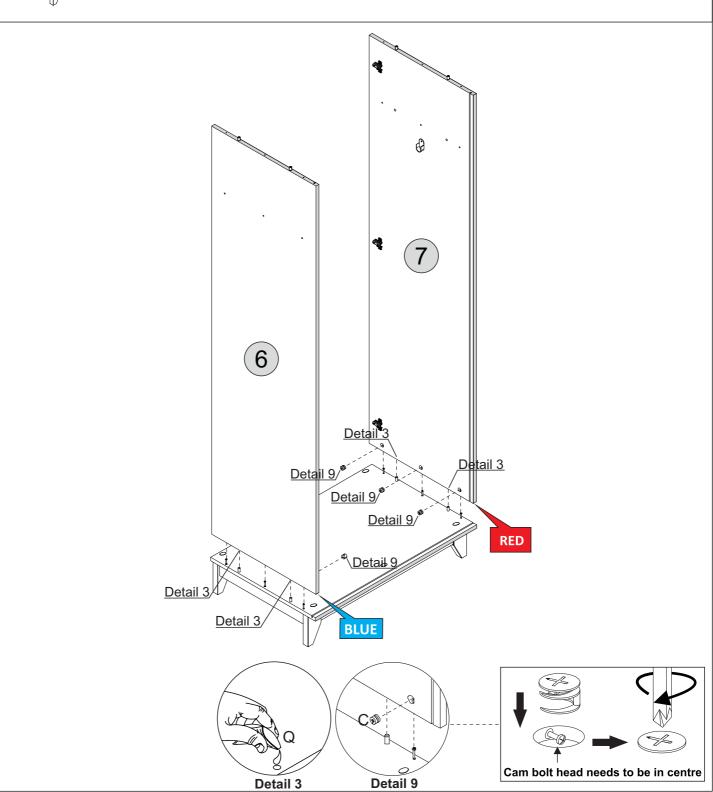

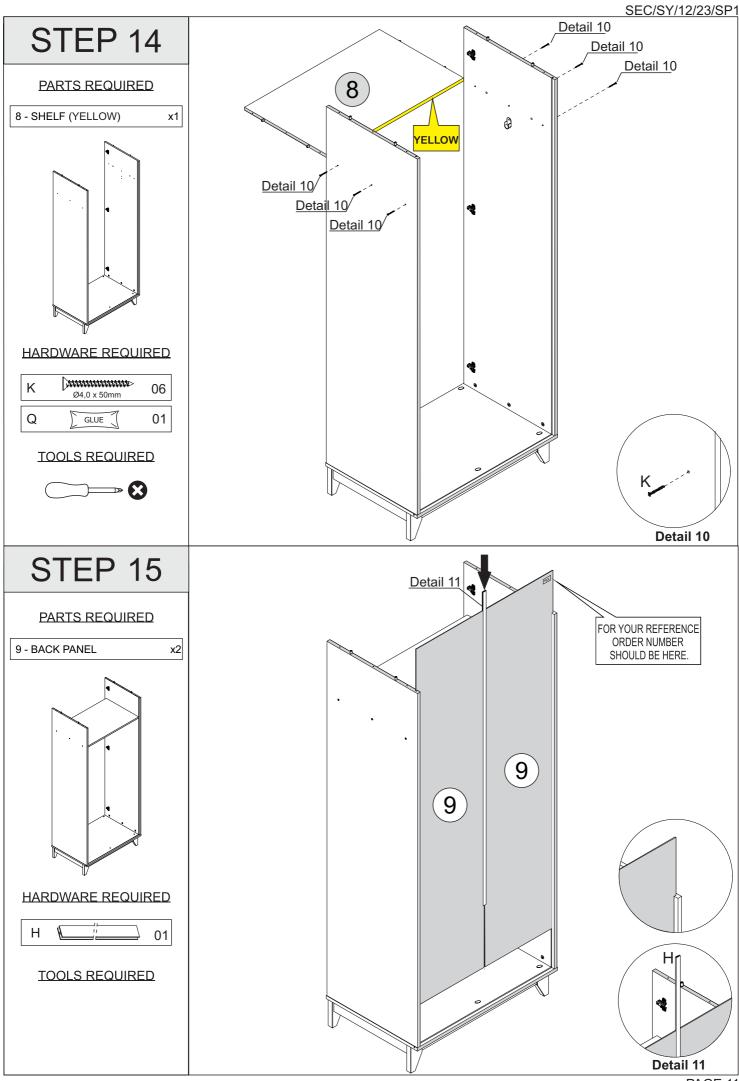


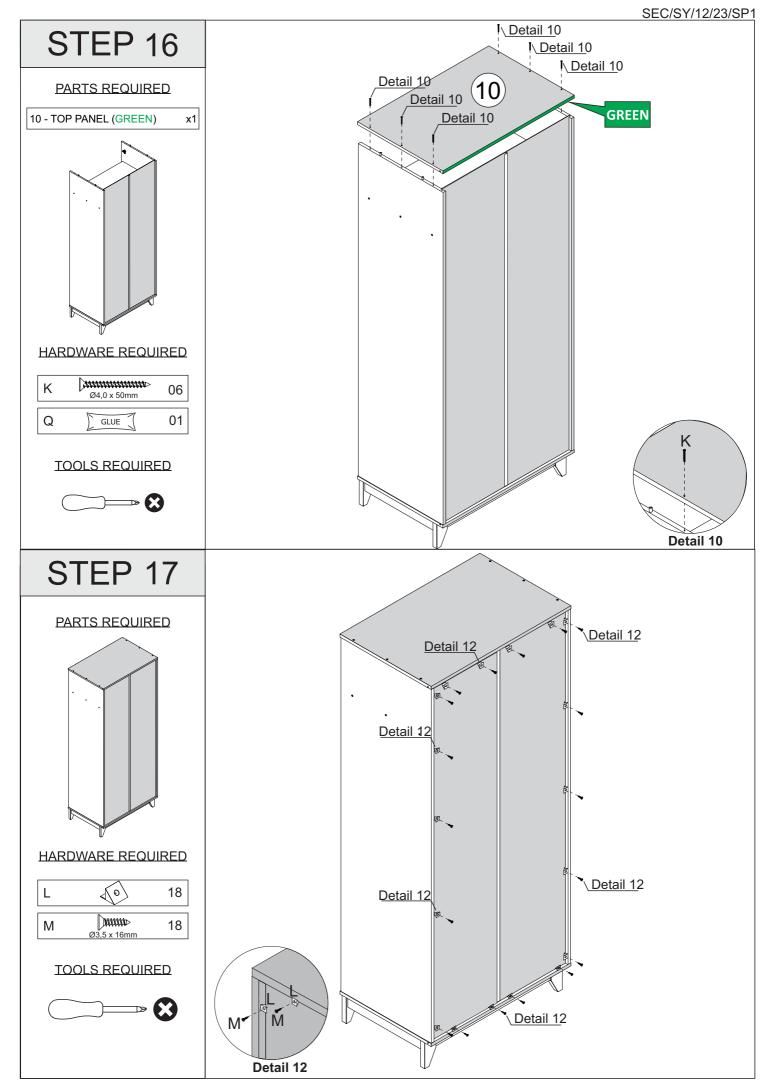



PARTS REQUIRED





HARDWARE REQUIRED





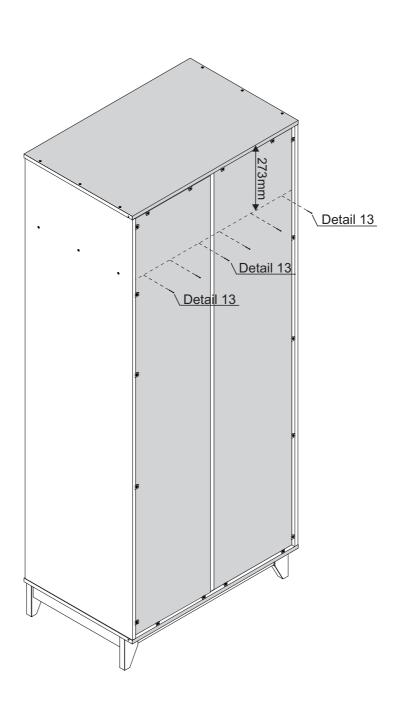

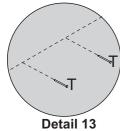


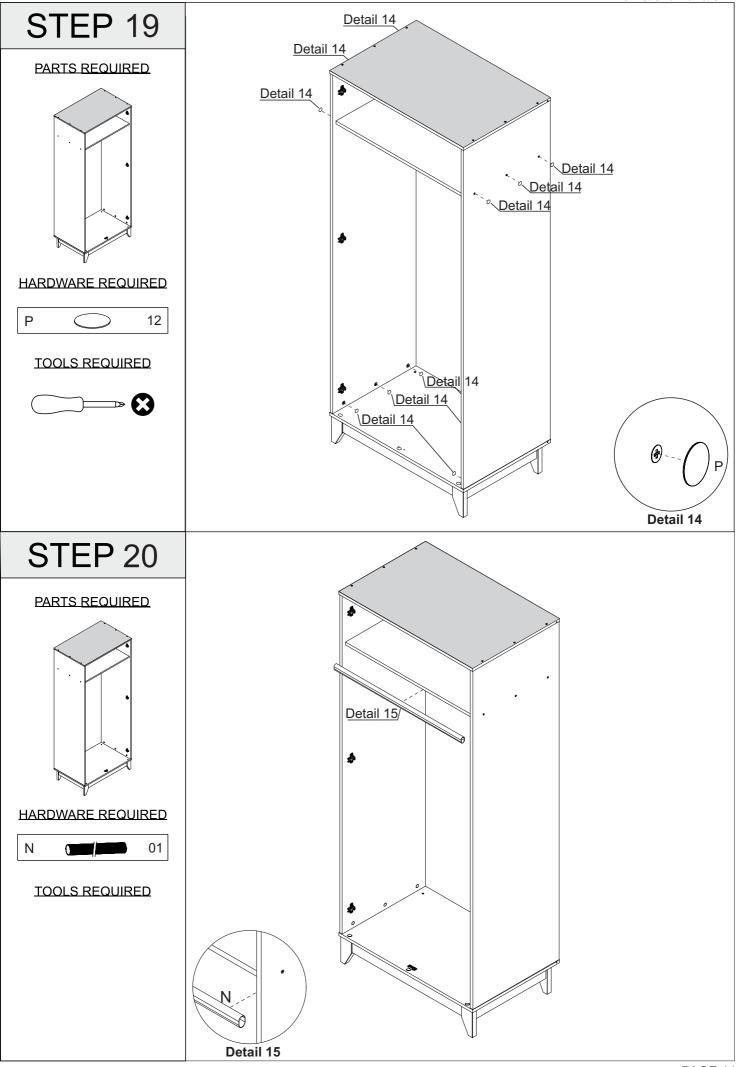


PARTS REQUIRED


11 - RIGHT DOOR 12 - LEFT DOOR **x**1

HARDWARE REQUIRED




TOOLS REQUIRED



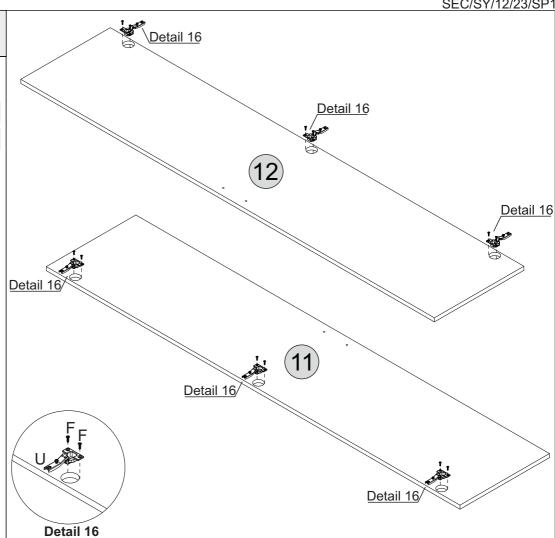



STEP 22

PARTS REQUIRED

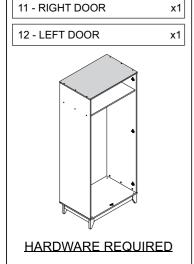






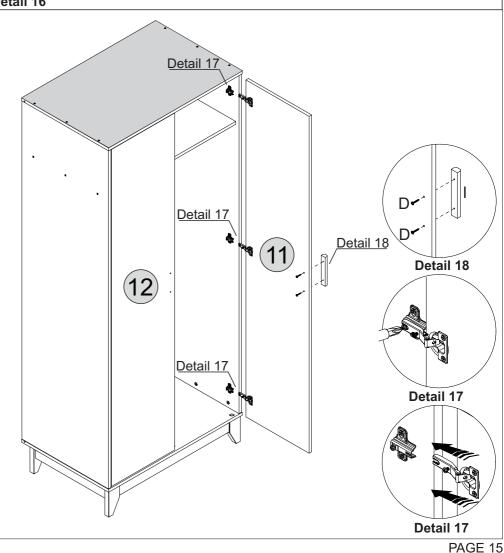

PARTS REQUIRED

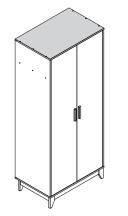

HARDWARE REQUIRED

D	Ø3,5 x 25mm	02
О	0	04
R		02

TOOLS REQUIRED





WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. Please make sure you use fixings suitable for the walls in your home.