


OLIVER 4 DOOR WARDROBE ASSEMBLY INSTRUCTIONS

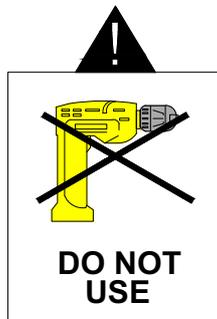

IMPORTANT FOR DOMESTIC USE ONLY PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.


ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE. DO NOT OVERTIGHTEN FIXING.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET) DO NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.




THE SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

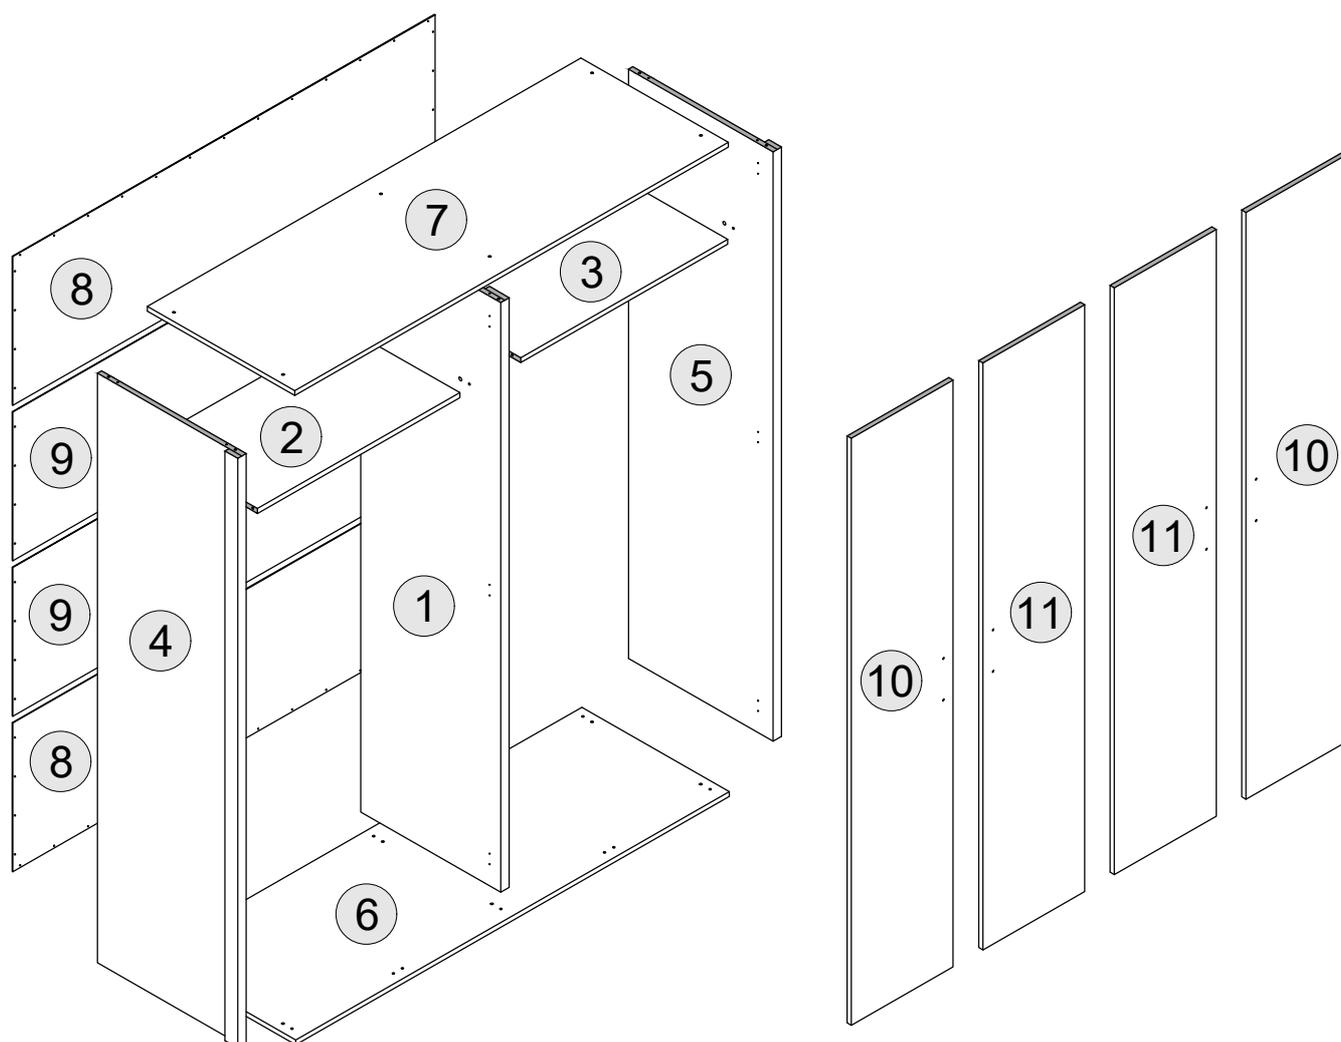


PART LIST

<u>Part Number</u>	<u>Part Code</u>	<u>Part Description</u>	<u>Quantity</u>	<u>Carton</u>
1	S100-101-207-EU1-01	Centre Panel	1	2/3
2	S100-101-207-EU1-02	Shelf Panel - Left	1	1/3
3	S100-101-207-EU1-03	Shelf Panel - Right	1	2/3
4	S100-101-207-EU1-04	Side Panel - Left	1	1/3
5	S100-101-207-EU1-05	Side Panel - Right	1	1/3
6	S100-101-207-EU1-06	Bottom Panel	1	2/3
7	S100-101-207-EU1-07	Top Panel	1	2/3
8	S100-101-207-EU1-08	Back Panel I	2	1/3
9	S100-101-207-EU1-09	Back Panel II	2	1/3
10	S100-101-207-EU1-10	Door - Left & Right	2	3/3
11	S100-101-207-EU1-11	Door - Centre	2	3/3


HARDWARE LIST

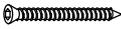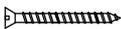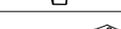A		DOWEL 6 X 30MM	20 PCS
B		CAM BOLT + CAM NUT	8 SETS
C		SCREW M6 X 50MM	12 PCS
D		SCREW M3.5 X 16MM	28 PCS
E		TACK	58 PCS
F		SCREW M4 X 32MM	12 PCS
G		HANDLE	4 PCS
H		TAPPING SCREW M8 X 12MM	24 PCS
I		ALLEN KEY	1 PC
J		HANDLE SCREW 20MM	8 PCS
K		SCREW M3.5 X 12MM	8 PCS
L		L PVC FOOT	2 PCS
M		SQUARE PVC FOOT	3 PCS
N		HINGES 7/8	6 PCS
O		HINGES 5/8	6 PCS
P		PVC STOPPER	4 PCS
Q		HANGING RAIL	2 PCS
R		PLASTIC H STRIP	3 PCS
S		HANGING RAIL SUPPORT	4 PCS
T		ANTI - TIP STRAP	2 PCS
U		SCREW M4 X 16MM	2 PCS

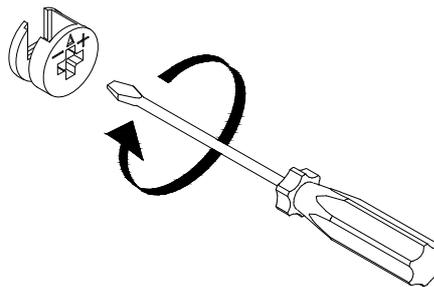

(SCREWDRIVER NOT PROVIDED)

USE A FLAT HEAD SCREWDRIVER TO TIGHTEN THE CAM NUTS. A QUARTER TURN CLOCKWISE IS ALL THAT IS NEEDED.

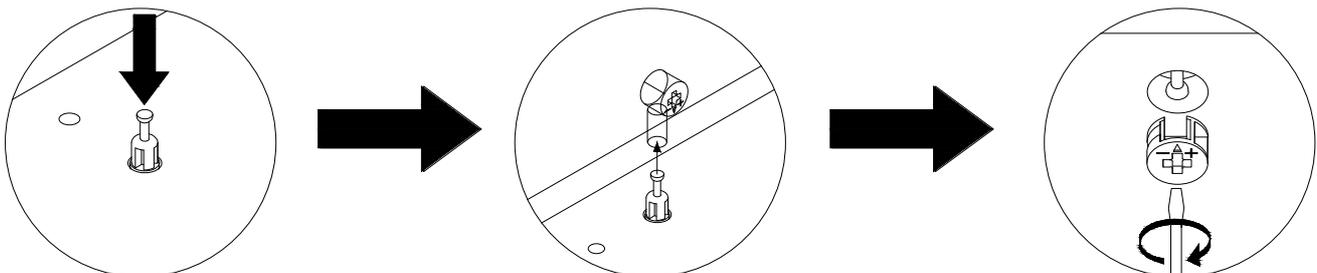

STEP 1 - PUSH CAM BOLT INTO INSERT

STEP 2 - ALIGN THE CAM BOLT WITH THE HOLE AND PUSH TOGETHER UNTIL FLUSH. (MAKE SURE THE ARROW OF THE CAM LOCK IS POINTING TOWARD ON THE EDGE OF THE PANEL.)

STEP 3 - THE HEAD OF THE BOLT GOES INTO THE WIDE MOUTH OF THE CAM LOCK. YOU THEN TURN THE LOCK SO THE NARROW PART CLOSES OVER THE BOLT.

STEP 1

PARTS REQUIRED

1 - CENTRE PANEL x1

HARDWARE REQUIRED




A  04

B  04

K  04

S  02

TOOLS REQUIRED

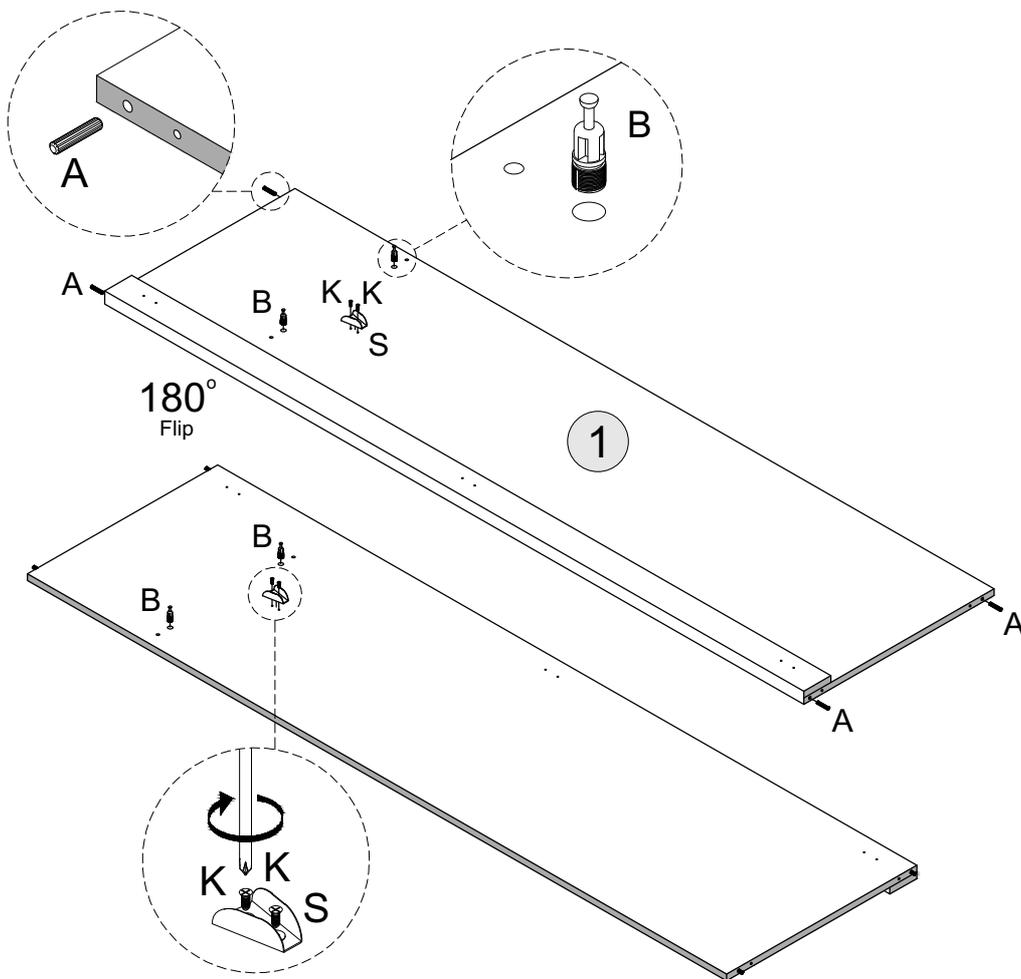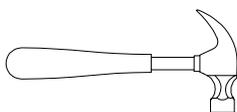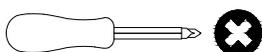

STEP 2

PARTS REQUIRED

2 - SHELF PANEL - LEFT x1



3 - SHELF PANEL - RIGHT x1

HARDWARE REQUIRED

A  08

B  08

TOOLS REQUIRED

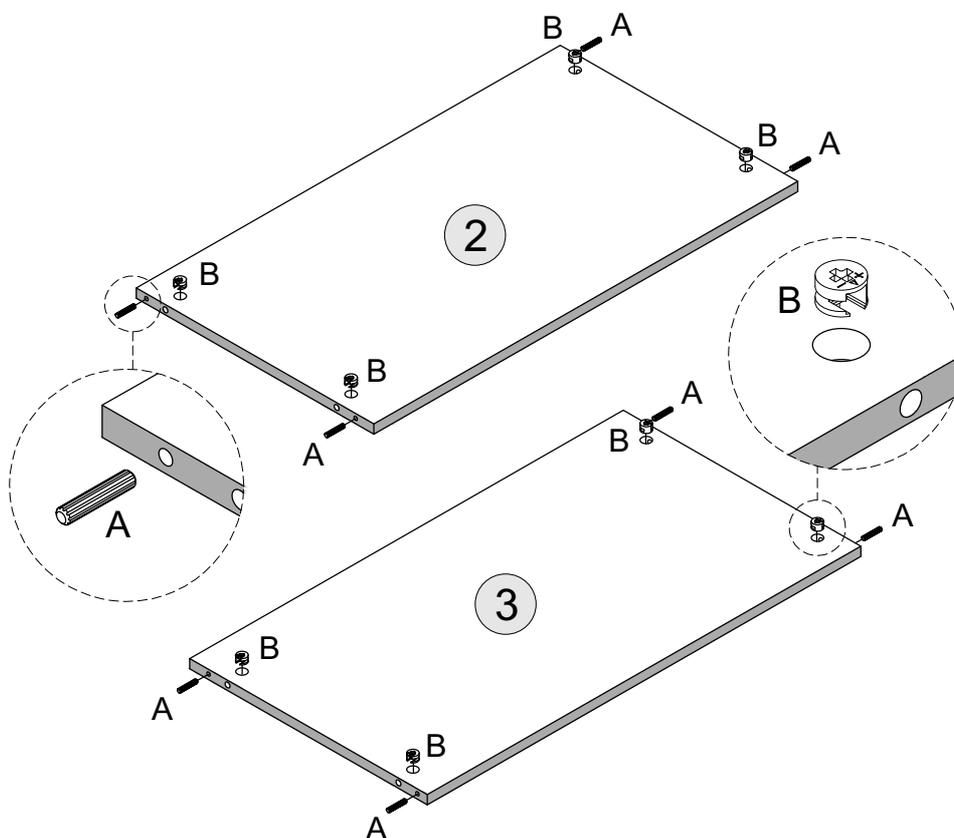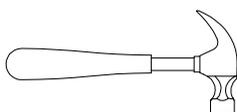

STEP 3

PARTS REQUIRED

4 - SIDE PANEL - LEFT x1

5 - SIDE PANEL - RIGHT x1

HARDWARE REQUIRED




A  08

B  04

K  04

S  02

TOOLS REQUIRED

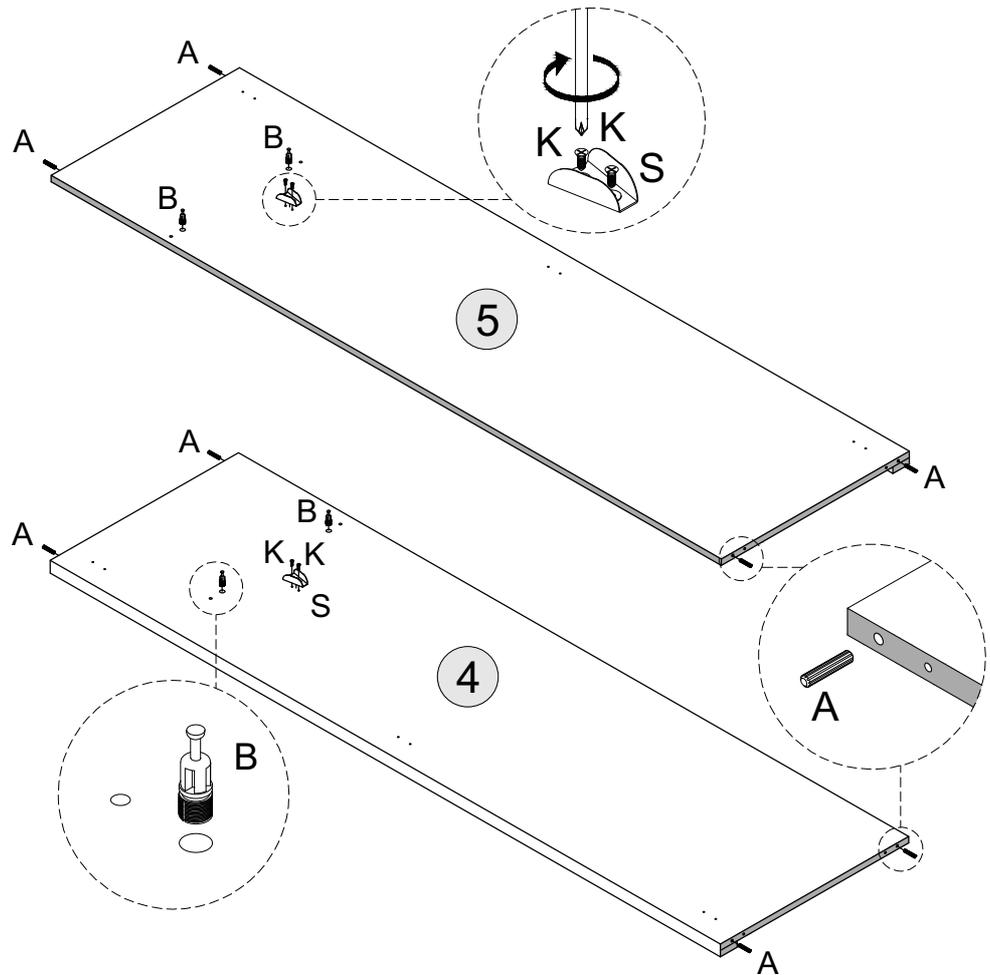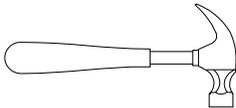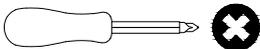

STEP 4

PARTS REQUIRED

6 - BOTTOM PANEL x1




7 - TOP PANEL x1

HARDWARE REQUIRED

D  04

P  04

TOOLS REQUIRED

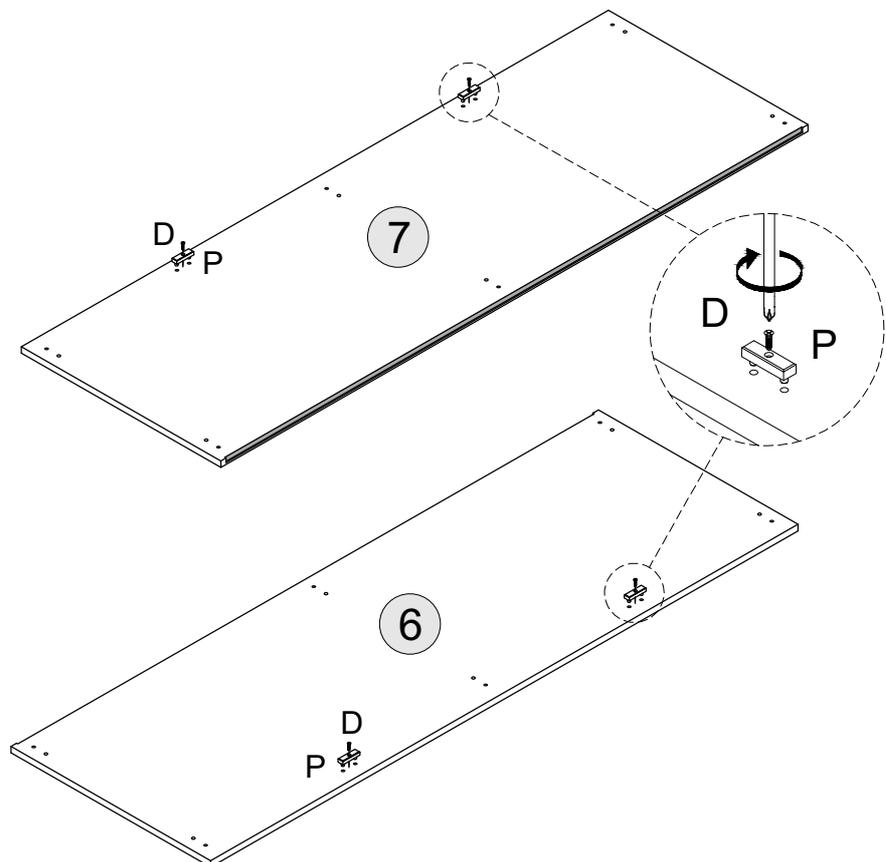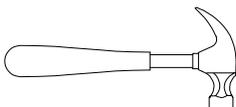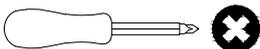


STEP 5

PARTS REQUIRED

- 1 - CENTRE PANEL x1
- 2 - SHELF PANEL - LEFT x1
- 3 - SHELF PANEL - RIGHT x1
- 4 - SIDE PANEL - LEFT x1
- 5 - SIDE PANEL - RIGHT x1

HARDWARE REQUIRED


TOOLS REQUIRED

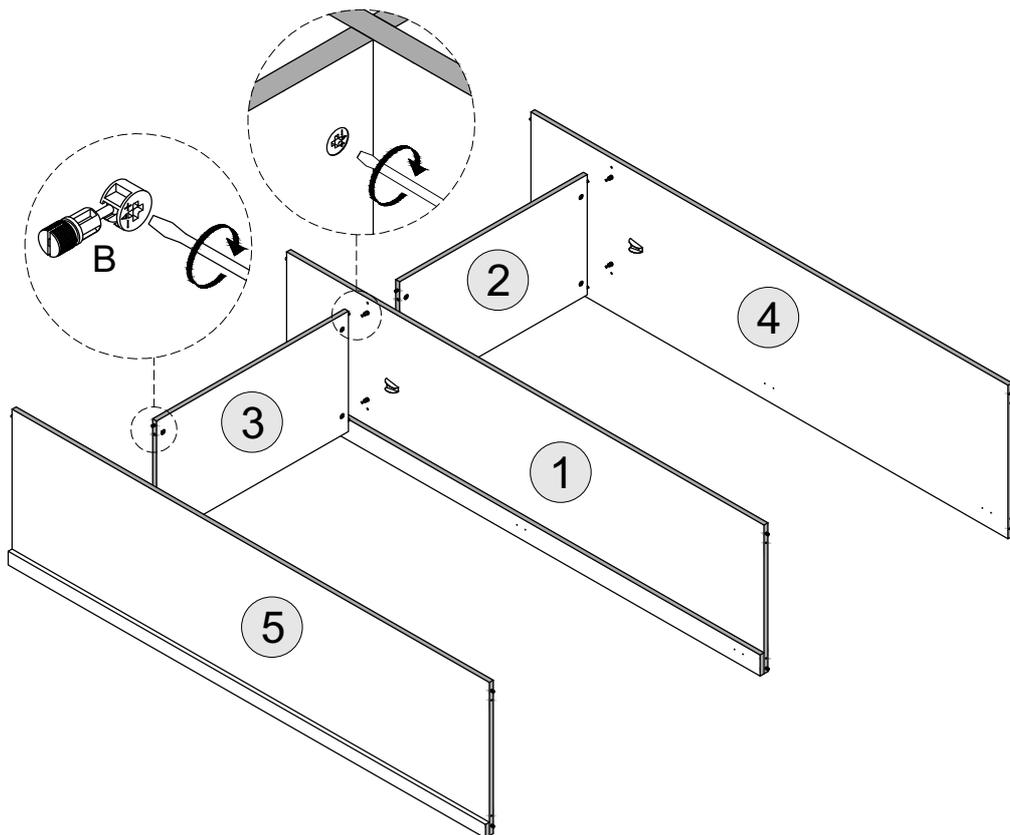

STEP 6

PARTS REQUIRED


- 6 - BOTTOM PANEL x1

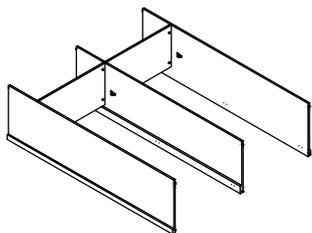

HARDWARE REQUIRED

- C 06


TOOLS REQUIRED

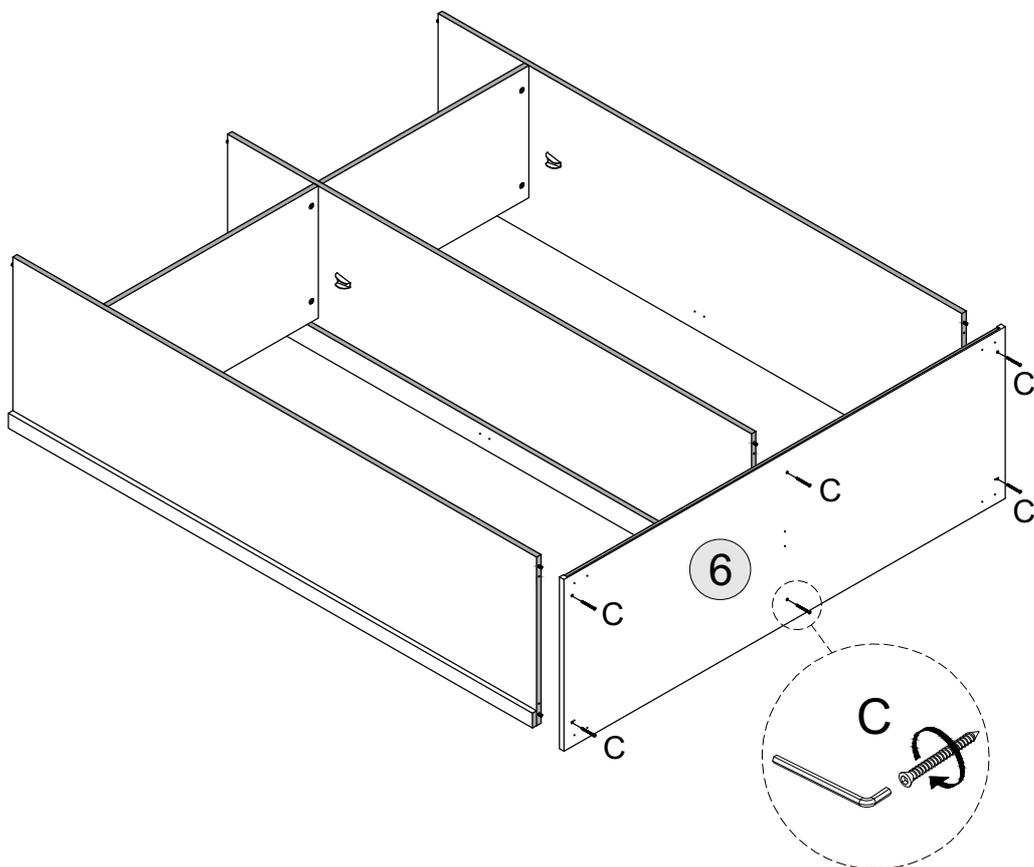

STEP 7

PARTS REQUIRED

7 - TOP PANEL x1

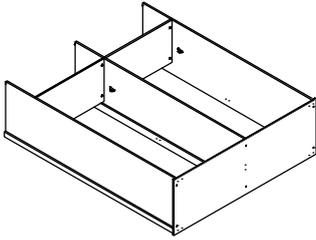

HARDWARE REQUIRED



F  12

C  06

L  02

M  03

TOOLS REQUIRED

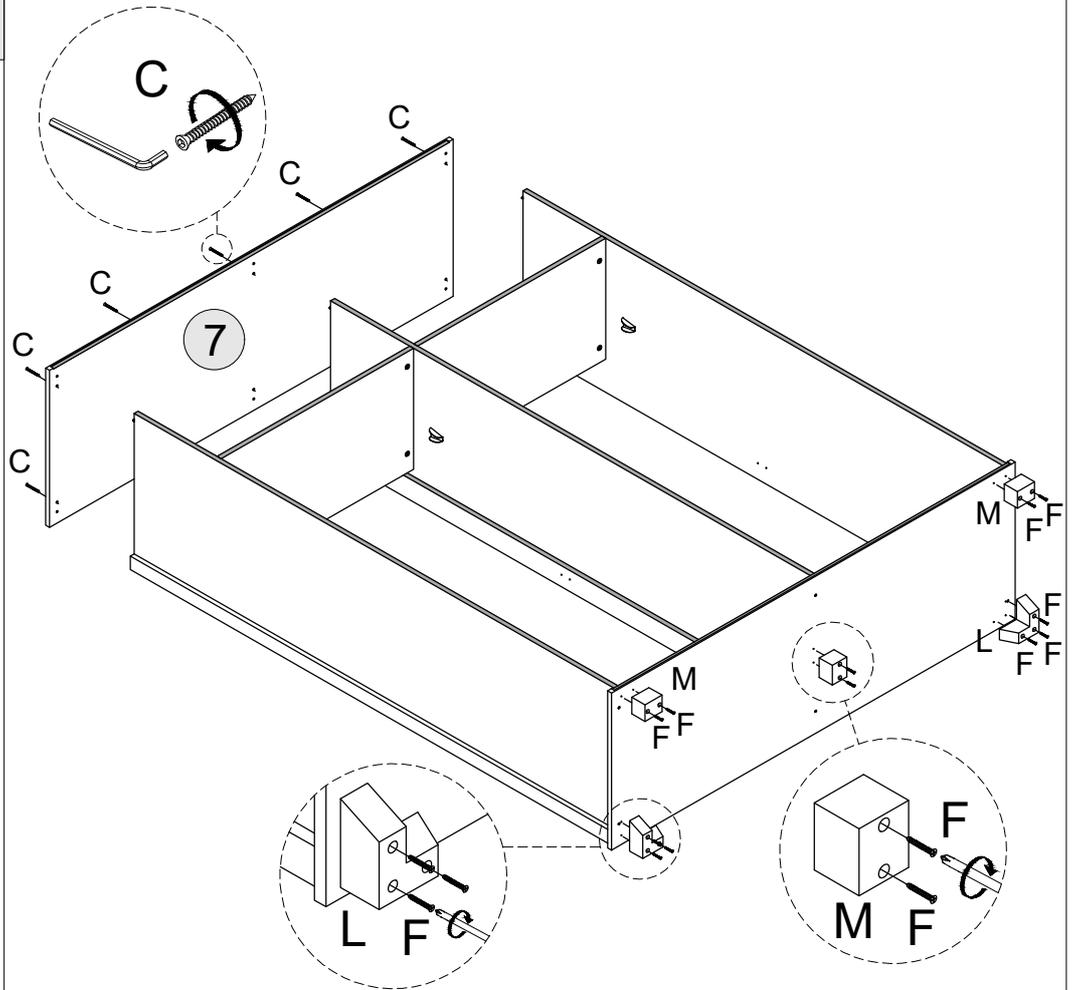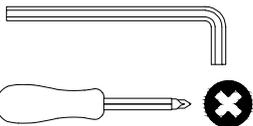


STEP 8

PARTS REQUIRED

8 - BACK PANEL I x2

9 - BACK PANEL II x2


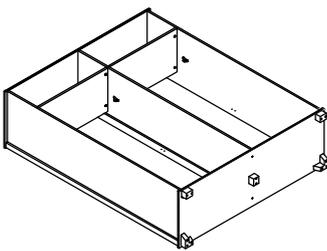


HARDWARE REQUIRED

E  58

R  03

TOOLS REQUIRED

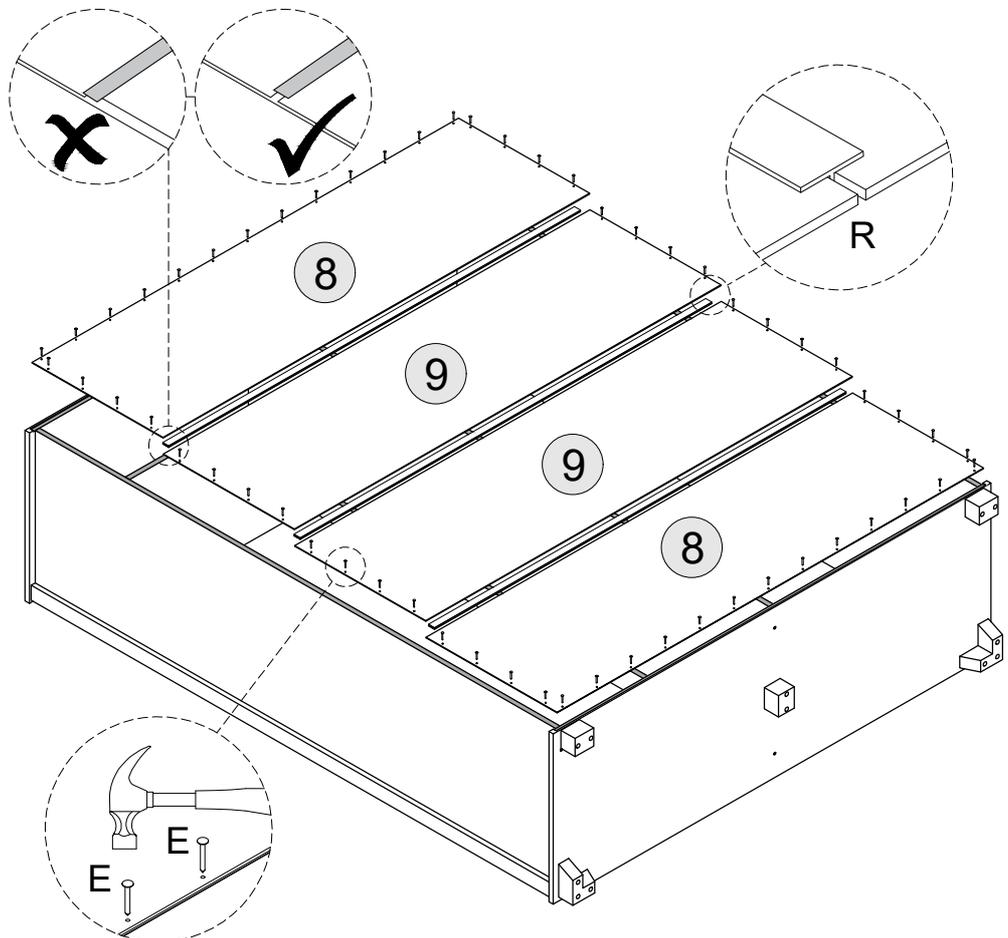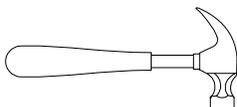

STEP 9

PARTS REQUIRED

10 - DOOR - LEFT & RIGHT x2

11 - DOOR - CENTRE x2



HARDWARE REQUIRED

D  24

N  06

O  06

TOOLS REQUIRED

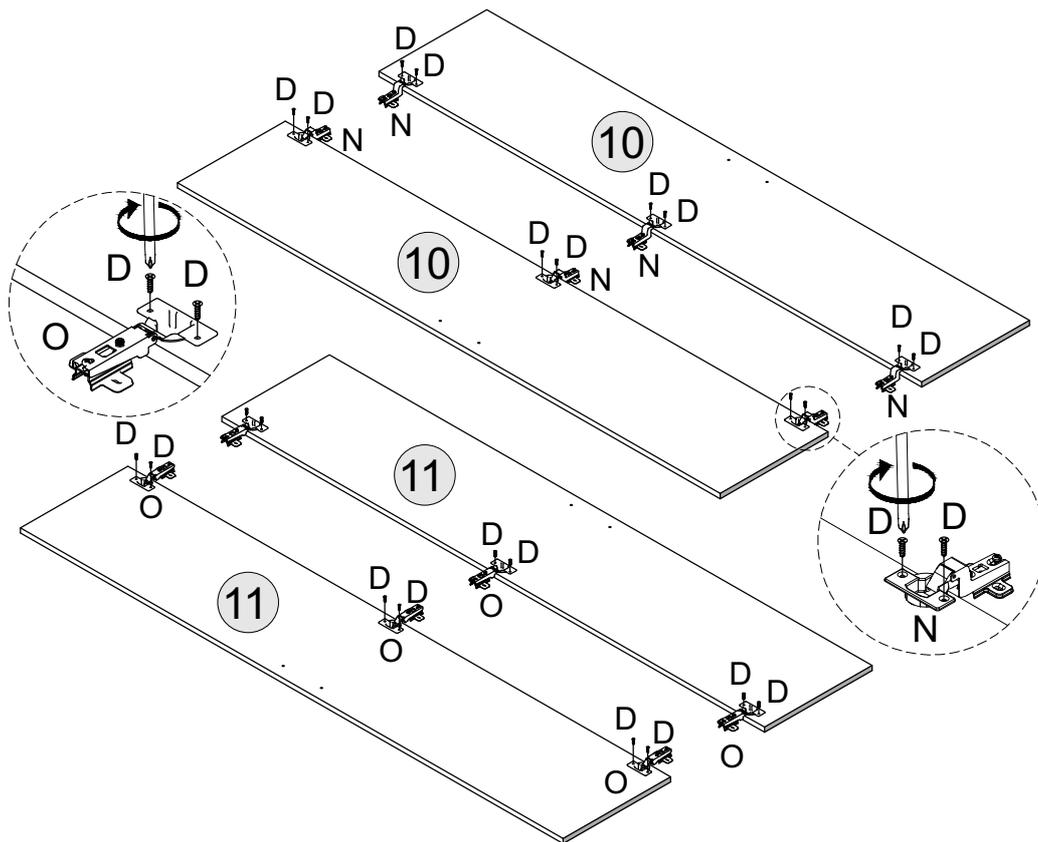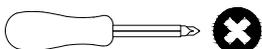


STEP 10

PARTS REQUIRED

10 - DOOR - LEFT & RIGHT x1

11 - DOOR - CENTRE x1

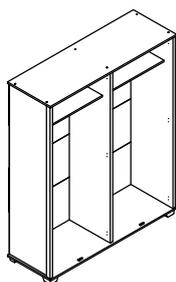

HARDWARE REQUIRED



H  12

G  02

J  04

Q  02


TOOLS REQUIRED

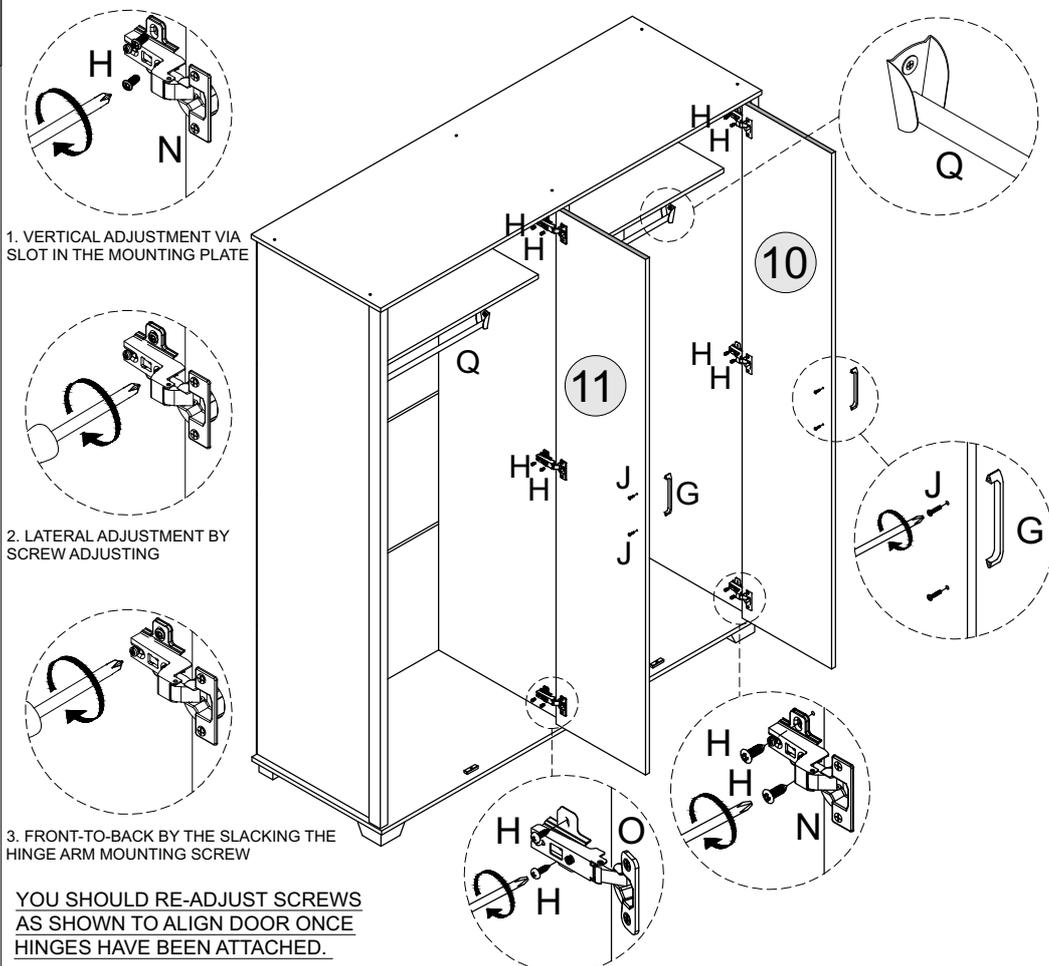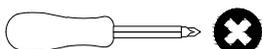

STEP 11

PARTS REQUIRED



10 - DOOR - LEFT & RIGHT	x1
11 - DOOR - CENTRE	x1

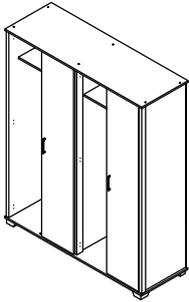

HARDWARE REQUIRED

H		12
G		02
J		04


TOOLS REQUIRED

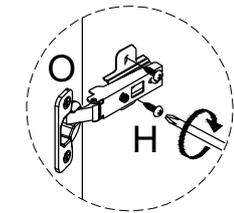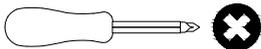

1. VERTICAL ADJUSTMENT VIA SLOT IN THE MOUNTING PLATE




2. LATERAL ADJUSTMENT BY SCREW ADJUSTING

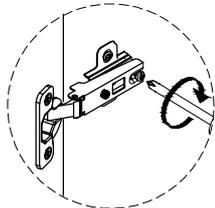

3. FRONT-TO-BACK BY THE SLACKING THE HINGE ARM MOUNTING SCREW

YOU SHOULD RE-ADJUST SCREWS AS SHOWN TO ALIGN DOOR ONCE HINGES HAVE BEEN ATTACHED.

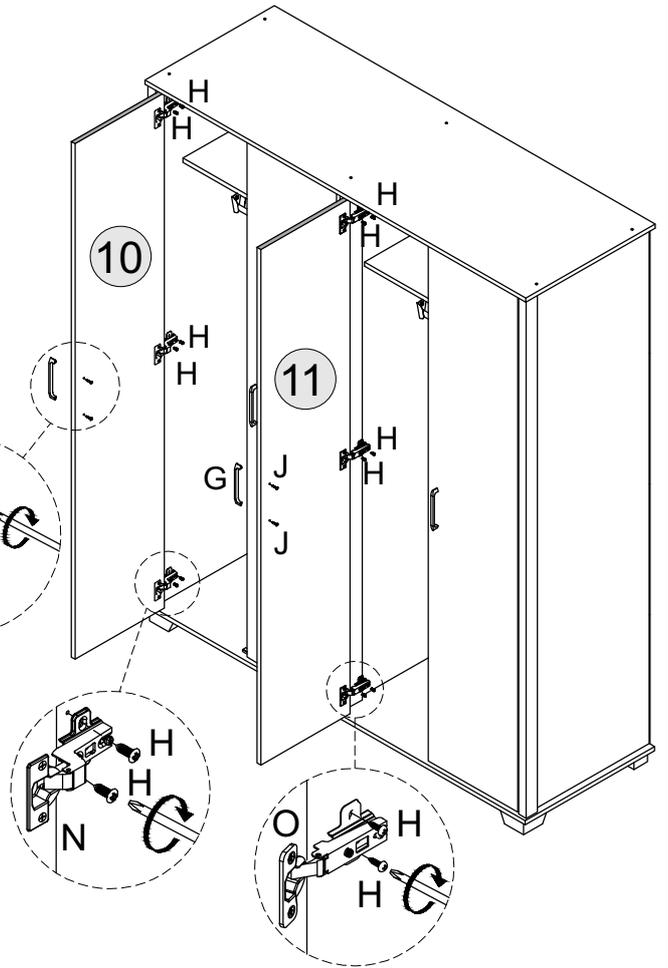

STEP 12


PART REQUIRED



HARDWARE REQUIRED

T		02
U		02

TOOLS REQUIRED

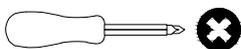

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. Please make sure you use fixings suitable for the walls in your home.

