
GREY FABRIC AMALFI 1 SEATER SOFA ASSEMBLY INSTRUCTIONS

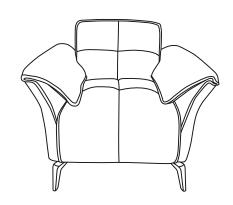







FOR DOMESTIC USE ONLY IMPORTANT PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFEASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.

ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.


DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE.

DO NOT OVERTIGHTEN FIXINGS.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET) <u>DO NOT USE POLISH</u>, <u>DETERGENT OR CHEMICAL CLEANERS</u>.

THIS PRODUCT MAY STAIN OR MARK IFALLOWED TO COME INTO CONTACT WITH WET OR DAMP OBJECTS.

THE SURFACE OF THIS ITEM IS NOTHEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

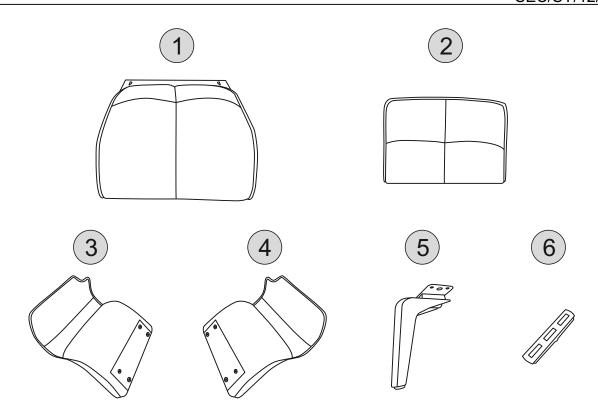

PARTS LIST

Part Number	Part Code	Part Description	Quantity	<u>Carton</u>
1	S300-308-074-XA1-01	Sofa	1	1/1
2	S300-308-074-XA1-02	Back	1	1/1
3	S300-308-074-XA1-03	Left armrest	1	1/1
4	S300-308-074-XA1-04	Right armrest	1	1/1
5	S300-308-074-XA1-05	Feet	4	1/1
6	S300-308-074-XA1-06	Insert clamp	2	1/1

HARDWARE LIST

No.	Part Name		Qty
Α	Bolt	(a)))))))))))	08
В	Washers	0	08
С	Allen Key		01
D	Screw		16

PLEASE CHECK THAT YOU HAVE ALL THE PARTS LISTED BEFORE YOU START ASSEMBLING.IF YOU DO FIND THAT SOMETHING IS MISSING. DO NOT CONTINUE ASSEMBLY. PLEASE CONTACT YOUR SUPPLIER IMMEDIATELY.

STEP 1


PARTS REQUIRED

1 - SOFA BED x1

3 - LEFT ARMREST x1


4 - RIGHT ARMREST x1

HARDWARE REQUIRED




TOOLS REQUIRED



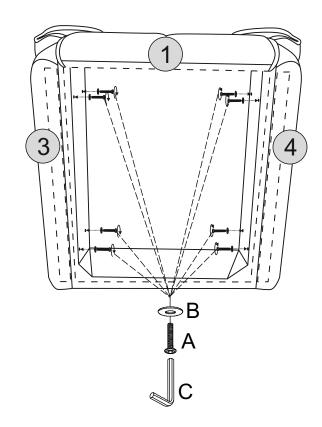


STEP 2


PARTS REQUIRED




HARDWARE REQUIRED



TOOLS REQUIRED



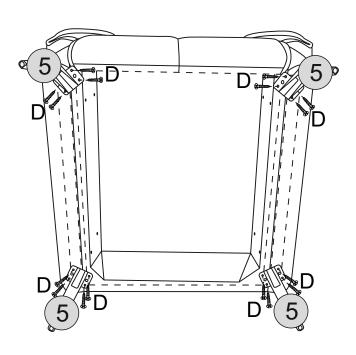

STEP 3

PARTS REQUIRED

2 - BACK


x1

x1

6 - INSERT CLAMP


HARDWARE REQUIRED

TOOLS REQUIRED

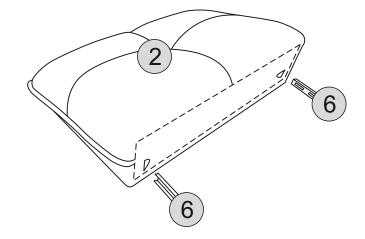

STEP 4

PARTS REQUIRED

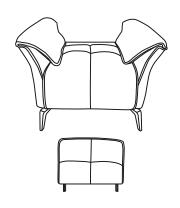

HARDWARE REQUIRED

TOOLS REQUIRED

