


BALFOUR DINING TABLE ASSEMBLY INSTRUCTIONS

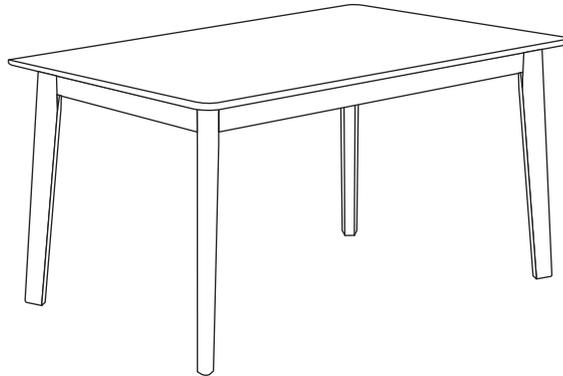

IMPORTANT **FOR DOMESTIC USE ONLY** **PLEASE READ BEFORE YOU CONTINUE FURTHER**

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.

ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.


DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE.

DO NOT OVERTIGHTEN FIXINGS.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET). DO NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.

THE SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

PLEASE CHECK THAT YOU HAVE ALL THE PARTS LISTED BEFORE YOU START ASSEMBLING. IF YOU DO FIND THAT SOMETHING IS MISSING, DO NOT CONTINUE ASSEMBLY. PLEASE CONTACT YOUR SUPPLIER IMMEDIATELY.

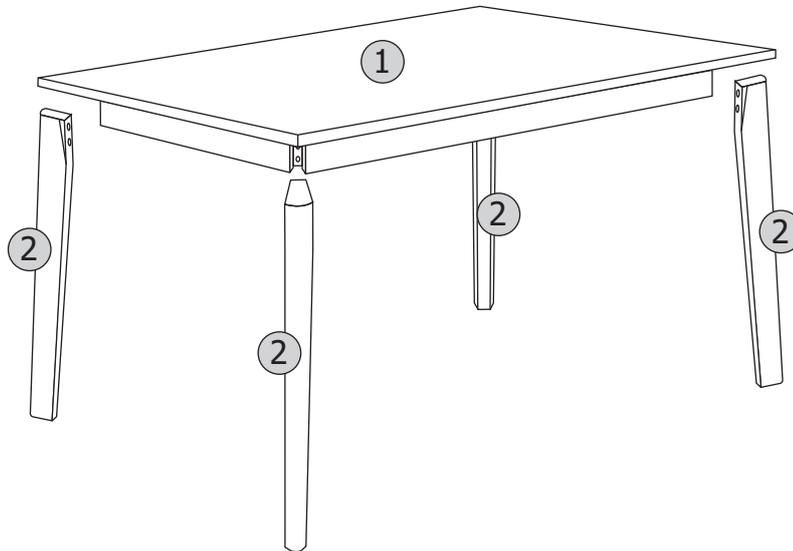

PART LIST

<u>Part Number</u>	<u>Part Code</u>	<u>Part Description</u>	<u>Quantity</u>	<u>Carton</u>
1	S400-401-296-PU1-01T	Table Top	1	1/1
2	S400-401-296-PU1-02T	Table Legs	4	1/1

HARDWARE LIST

No.	Part Name		Qty	Carton
A	M6 x 60mm JCBC		8	1
B	Spring Washer M6 x 13mm		8	1
C	Flat Washer M6 x 18mm		8	1
D	Allen Key M4 x 65mm		1	1

STEP 1

PARTS REQUIRED

1 - TABLE TOP x1

2 - TABLE LEGS x4

HARDWARE REQUIRED

A  08



B  08

C  08


TOOLS REQUIRED



REPEAT THIS ASSEMBLY FOR EACH LEG

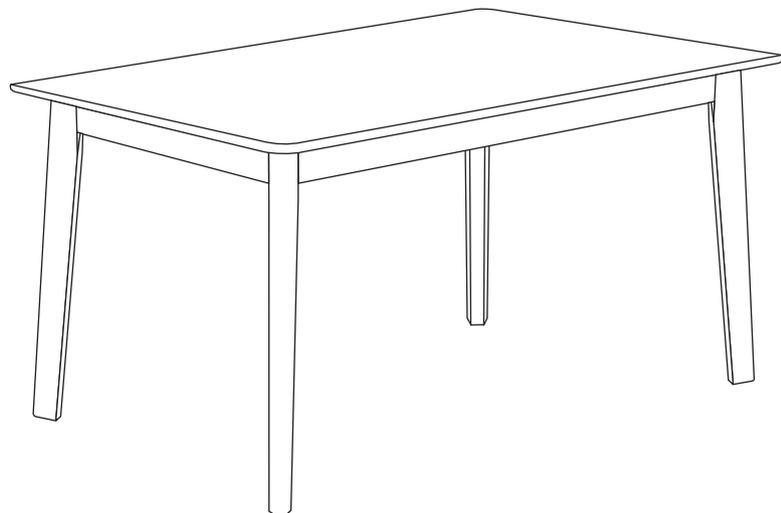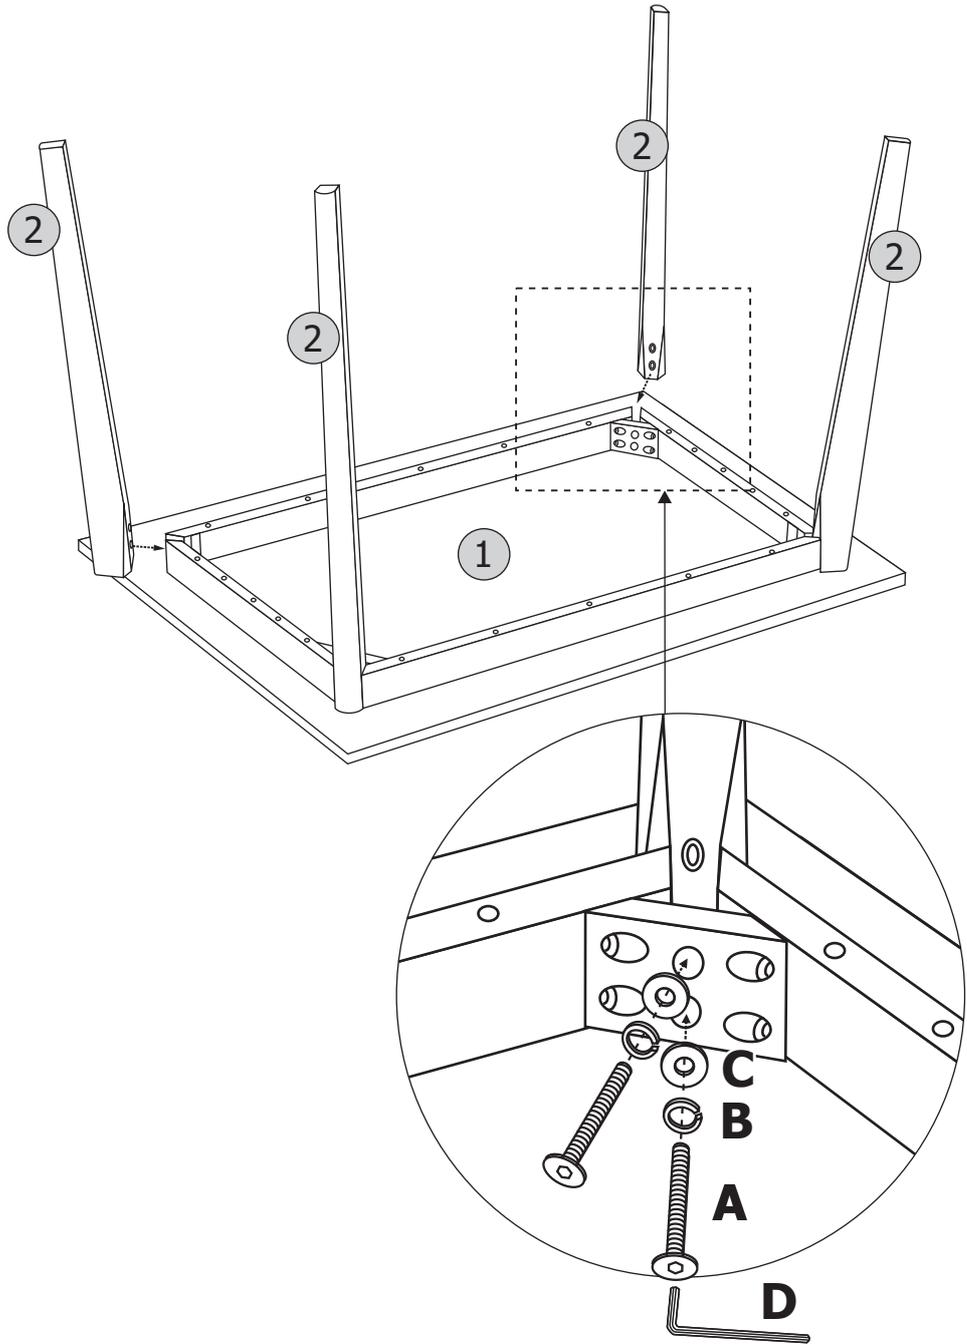

BALFOUR DINING CHAIR ASSEMBLY INSTRUCTIONS

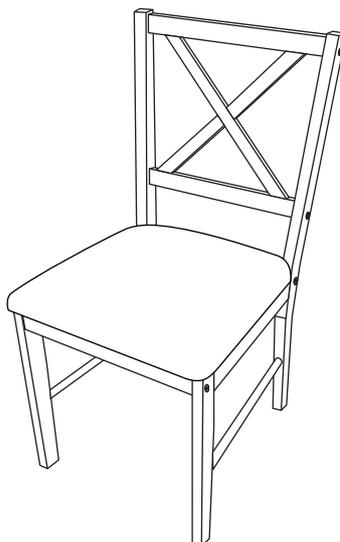

IMPORTANT

FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.

ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.


DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE. DO NOT OVERTIGHTEN FIXINGS.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET). DO NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.

THE SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.


PLEASE CHECK THAT YOU HAVE ALL THE PARTS LISTED BEFORE YOU START ASSEMBLING. IF YOU DO FIND THAT SOMETHING IS MISSING, DO NOT CONTINUE ASSEMBLY. PLEASE CONTACT YOUR SUPPLIER IMMEDIATELY.

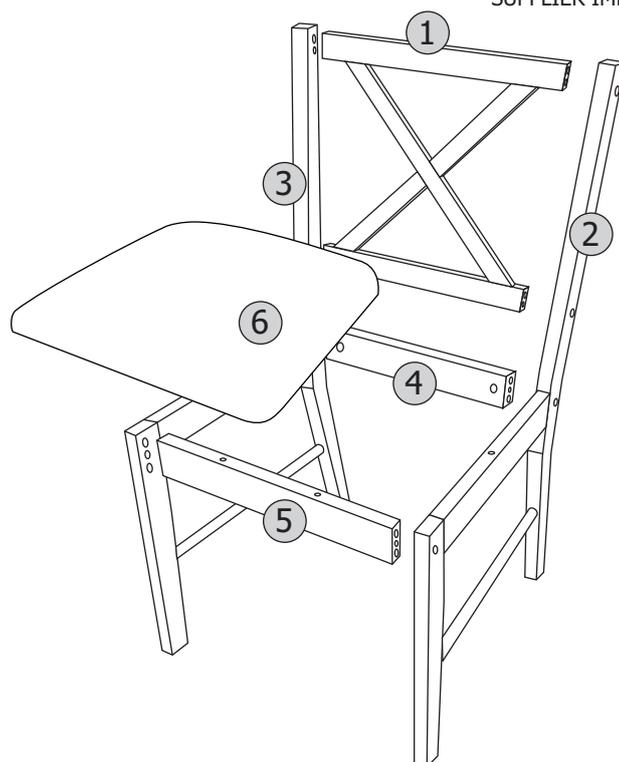

PART LIST

<u>Part Number</u>	<u>Part Code</u>	<u>Part Description</u>	<u>Quantity</u>	<u>Carton</u>
1	S400-401-296-PU1-01C	Chair Back	4	1/1
2	S400-401-296-PU1-02C	Leg Frame (Right)	4	1/1
3	S400-401-296-PU1-03C	Leg Frame (Left)	4	1/1
4	S400-401-296-PU1-04C	Back Stretcher	4	1/1
5	S400-401-296-PU1-05C	Front Stretcher	4	1/1
6	S400-401-296-PU1-06C	Cushion Seat	4	1/1

HARDWARE LIST

<u>No.</u>	<u>Part Name</u>		<u>Qty</u>	<u>Carton</u>
A	Barrel Nut		32	1
B	M6 x 60mm JCBC		32	1
C	Spring Washer M6 x 13mm		32	1
D	Flat Washer M6 x 13mm		32	1
E	M4 x 32mm CSK Screw		16	1
F	Wood Dowel 8 x 30mm		48	1
G	Allen Key M4 x 65mm		1	1
H	Plastic Screwdriver		1	1

STEP 1

PARTS REQUIRED

1 - CHAIR BACK x1





4 - BACK STRETCHER x1

5 - FRONT STRETCHER x1

HARDWARE REQUIRED

F  12

TOOLS REQUIRED

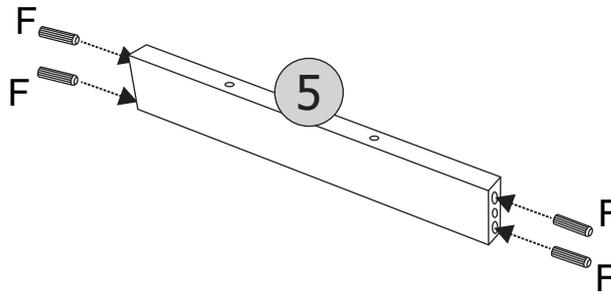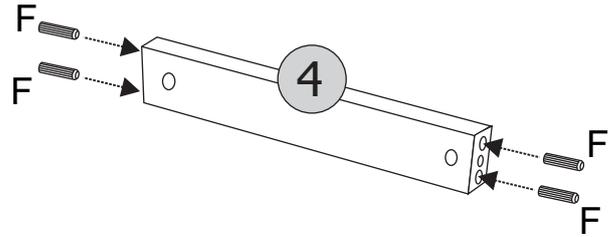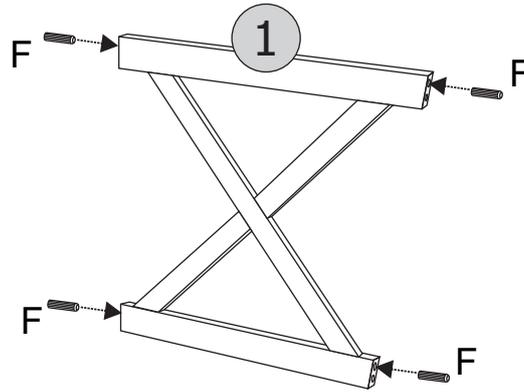

STEP 2

PARTS REQUIRED

1 - CHAIR BACK x1

2 - LEG FRAME (RIGHT) x1

3 - LEG FRAME (LEFT) x1

4 - BACK STRETCHER x1

HARDWARE REQUIRED



A  06

B  06

C  06

D  06

TOOLS REQUIRED

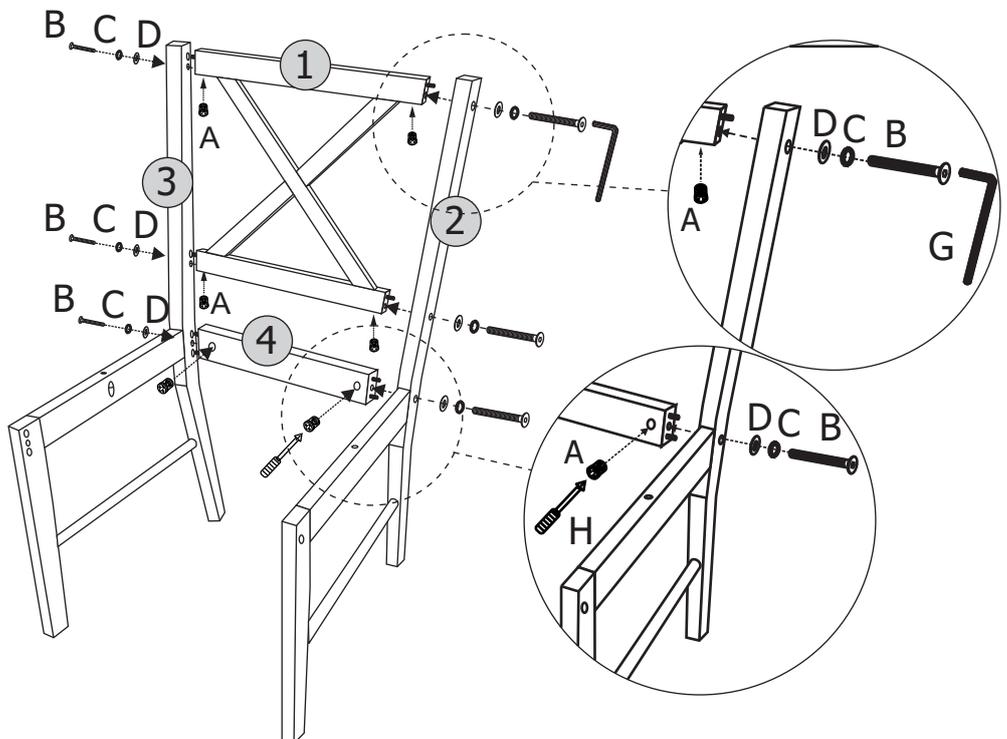


Important

Please do not fully tighten the screws before **STEP 3**

STEP 3

PARTS REQUIRED


5 - FRONT STRETCHER x1

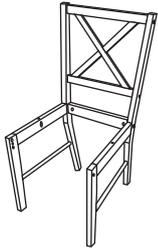



HARDWARE REQUIRED

- A  02
- B  02
- C  02
- D  02

TOOLS REQUIRED

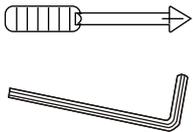


Important
Please now fully tighten all bolts.

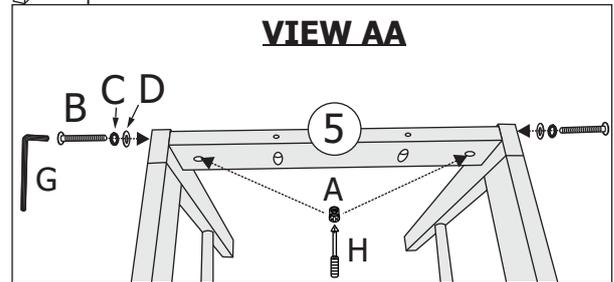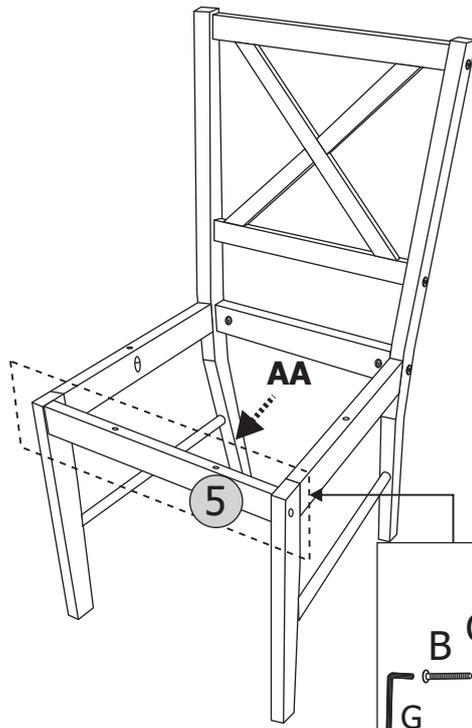

STEP 4

PARTS REQUIRED


6 - CUSHION SEAT x1

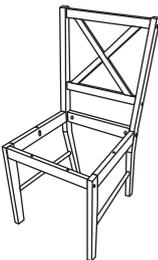

HARDWARE REQUIRED

E  04

TOOLS REQUIRED



Bottom View

