


GARRUCHA DELUXE SHOE CABINET

Thank you for purchasing the **SHOE CABINET**. Please read the instructions carefully to ensure safe operation of the product.

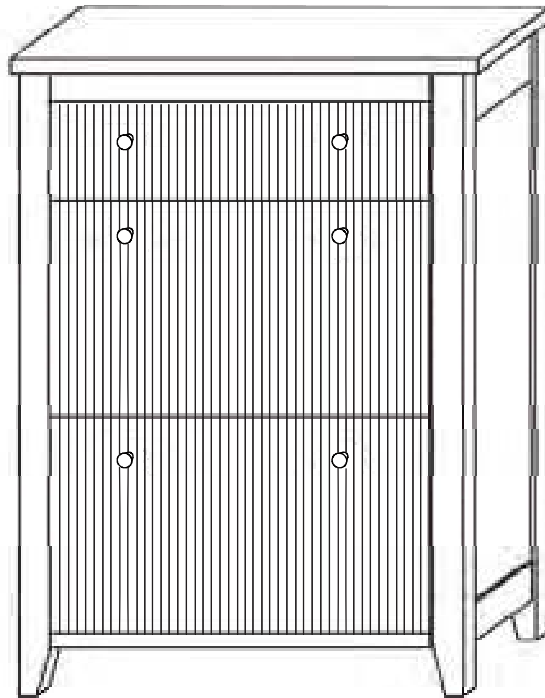


Size:W80XD25XH108cm

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

Tools Required

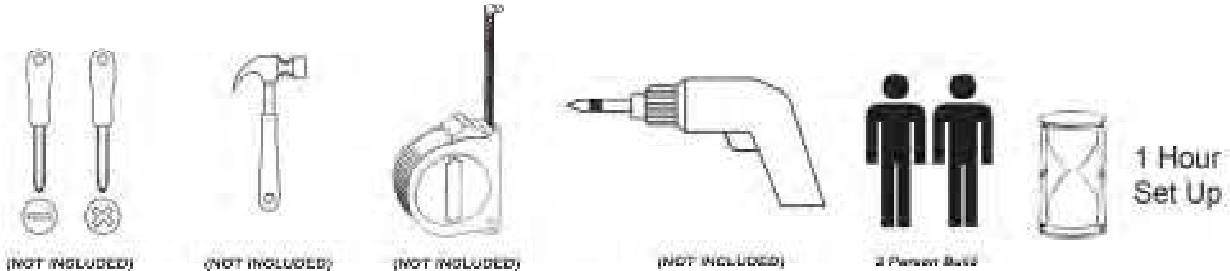

GARRUCHA DELUXE SHOE CABINET

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

- This product is designed to hold 20Kg in total, spread evenly over the whole unit. Do not exceed this weight.
- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled and secured as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly.
- This product should only be used on firm, level ground.
- Keep small parts out of reach of children.
- Make sure the legs remain in contact with the ground.
- Tools are not included.

WARNINGS


- DO NOT use power tools to construct this product.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing, damaged or worn.
- DO NOT sit or stand on the product.
- It is essential that this unit is fixed to a wall with the fixings provided.
- We recommend the use of the wall fixing provided for safety reasons. N.B. if in doubt pls consult a qualified tradesperson. **Warning:** Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.

CARE INFORMATION

- Never use scourers, abrasives or chemical cleaners
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product





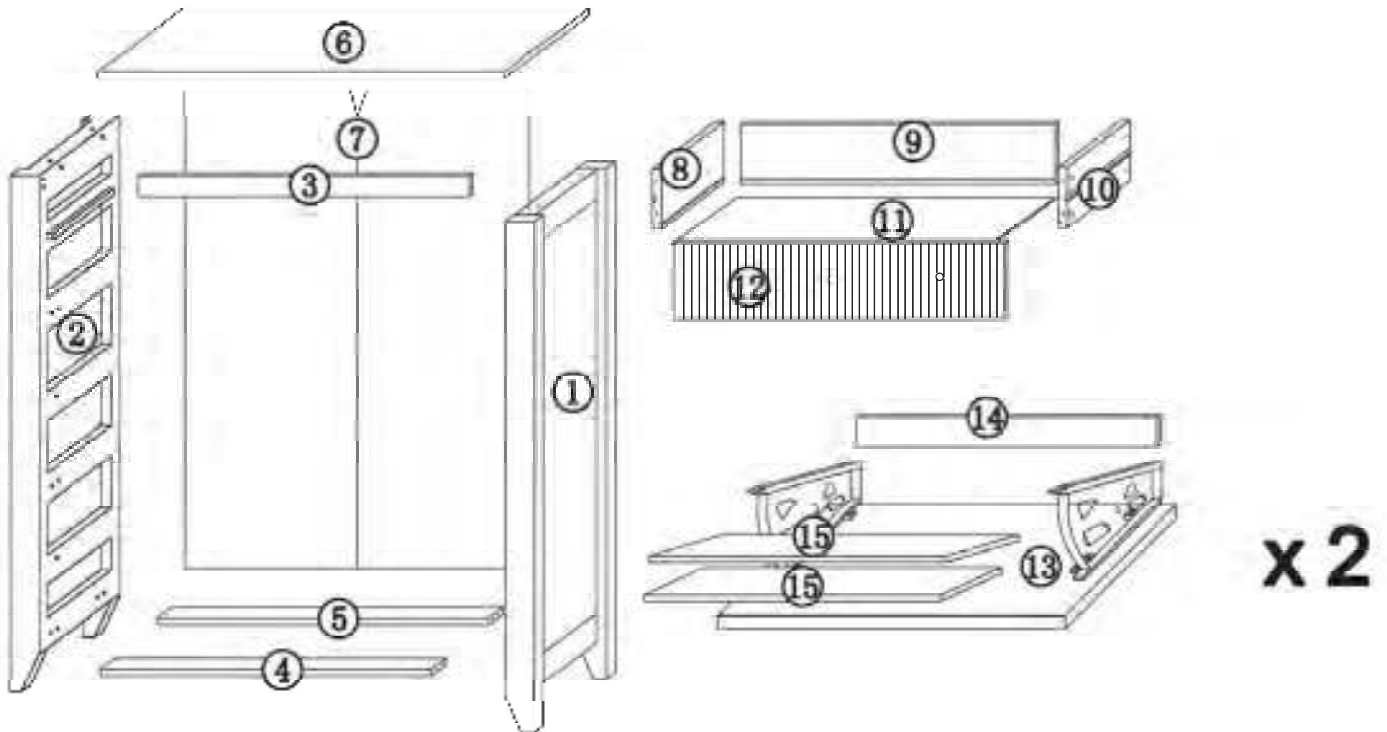










GARRUCHA DELUXE SHOE CABINET

Please check the pack contents before assembling the product. If any components are missing, please contact your retailer. The fittings pack contains small items that should be kept away from small children.



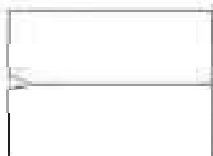






GARRUCHA DELUXE SHOE CABINET

PARTS









<p>1</p> 	<p>2</p> 	<p>3</p> 
<p>Description:RIGHT SIDE PANEL QTY:1 PC Dimension:1055X240X50MM</p>	<p>Description:LEFT SIDE PANEL QTY:1 PC Dimension:1055X240X50MM</p>	<p>Description:TOP CROSS BAR(BACK) QTY:1 PC Dimension:640X50X15MM</p>
<p>4</p> 	<p>5</p> 	<p>6</p> 
<p>Description:MIDDLE CROSS BAR(BACK) QTY:1 PC Dimension:640X50X15MM</p>	<p>Description:BOTTOM PANEL QTY:1 PC Dimension:640X50X15MM</p>	<p>Description:TOP PANEL QTY:1 PC Dimension:800X250X25MM</p>
<p>7</p> 	<p>8</p> 	<p>9</p> 
<p>Description:BACK PANEL QTY:1 PC Dimension:975X657X3MM</p>	<p>Description:DRAWER LEFT HAND SIDE PANEL QTY:1 PC Dimension:190X115X12MM</p>	<p>Description:DRAWER BACK QTY:1 PC Dimension:610X115X12MM</p>
<p>10</p> 	<p>11</p> 	<p>12</p> 
<p>Description:DRAWER RIGHT HAND SIDE PANEL QTY:1 PC Dimension:190X115X12MM</p>	<p>Description:DRAWER BOTTOM QTY:1 PC Dimension:620X186X3MM</p>	<p>Description:DRAWER FRONT QTY:1 PC Dimension: 635X151X15MM</p>
<p>13</p> 	<p>14</p> 	<p>15</p> 
<p>Description:DOOR PANEL QTY:2 PCS Dimension: 635X364X15MM</p>	<p>Description:CROSS BAR QTY:2 PCS Dimension:627X85X12MM</p>	<p>Description:SHELF QTY:4 PCS Dimension:627X14X12MM</p>

GARRUCHA DELUXE SHOE CABINET

Fixings (to scale)

Ref	Dimensions	Qty	
A	CAM BOLT (6X35MM)	16	
B	CAM LOCK (15X10MM)	16	
C	SCREW (3X12MM)	22	
D	DOWEL (6X30MM)	6	
E	SCREW (4X30MM)	16	
F	SCREW (3.5X12MM)	12	
G	SCREW (4X16MM)	4	




Fixing(not to scale)

H	WALL FIXING	1	
I	DOOR STOPPER	4	
J	OUTER GROMMET	4	
K	LEFT PLASTIC BRACKET	2	
L	RIGHT PLASTIC BRACKET	2	
M	INNER GROMMET	4	
N	HANDLE	6	
O	DRAWER STOPPER	2	

CAUTION: There are many small components used in the construction of this product. Please keep these components away from young children whilst assembling this product. If you keep the fittings in a bowl during assembly you will be less likely to lose them!


GARRUCHA DELUXE SHOE CABINET

General Hints and Tips Don't screw too deep

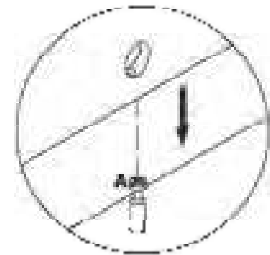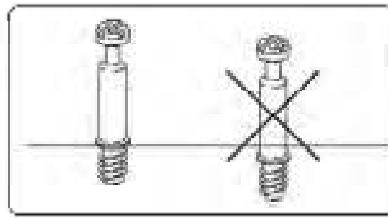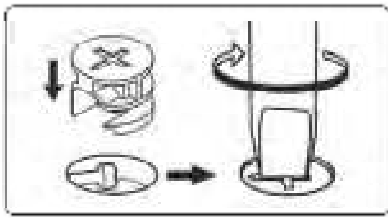

Layout Parts on Soft Surface

Layout all part on a soft surface i.e. Rug, carpet or packaging carton

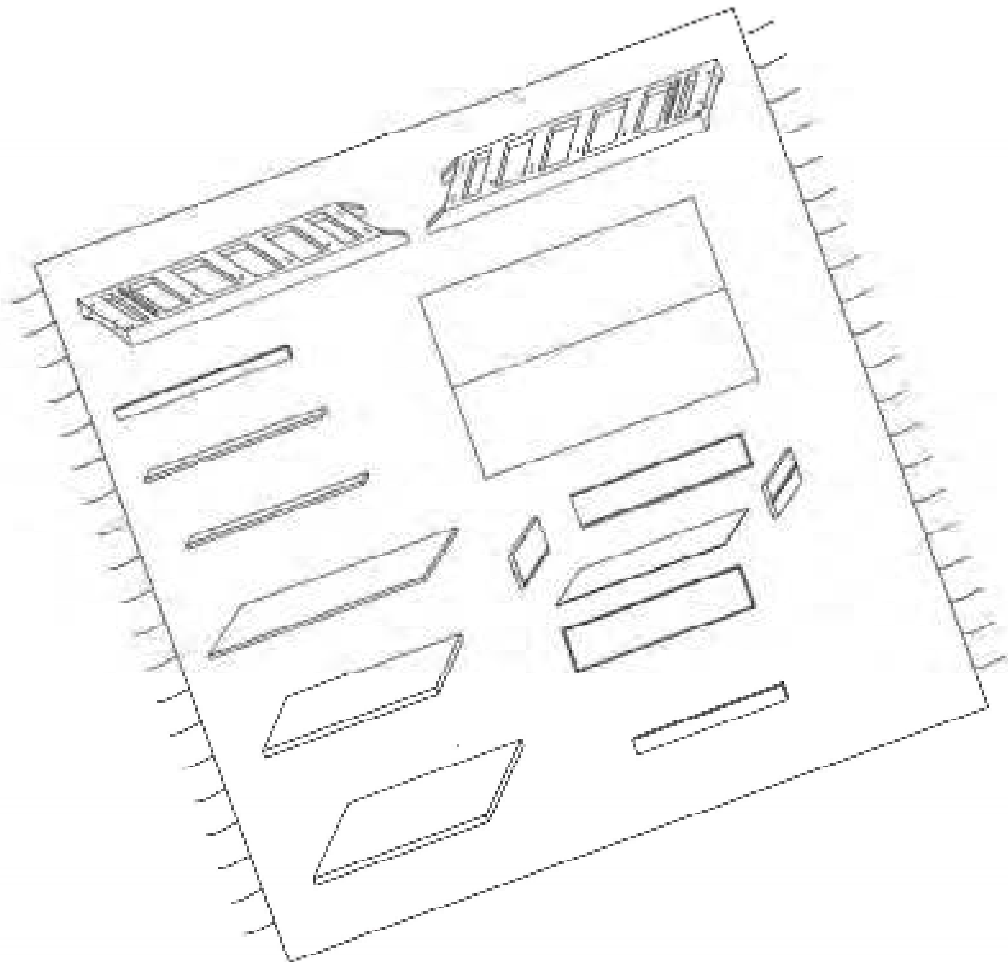

GARRUCHA DELUXE SHOE CABINET

STEP 1	PARTS REQUIRED
	<p>1: RIGHT SIDE PANEL X1 2: LEFT SIDE PANEL X1</p> <p>A: CAM BOLT X 6 I: DOOR STOPPER X 4 J: OUTER GROMMET X 4</p>



STEP 2	PARTS REQUIRED
	<p>13: DOOR PANEL X 2 14: CROSS BAR X 2 15: SHELF X 2</p> <p>F: SCREWS X 12 E: SCREWS X 8 K: LEFT PLASTIC BRACKET X 2 L: RIGHT PLASTIC BRACKET X 2 N: HANDLE X 4</p>

GARRUCHA DELUXE SHOE CABINET


STEP 3	PARTS REQUIRED
<p>Ensure the cam lock is lined up with the cam bolt when fixing.</p>	<p>2: LEFT SIDE PANEL X1 3: TOP CROSS BAR (BACK) X1 4: MIDDLE CROSS BAR (BACK) X1 5: BOTTOM PANEL X1</p> <p>B: CAM LOCK X3 D: DOWEL X6</p>


STEP 4	PARTS REQUIRED
<p>Ensure the cam lock is lined up with the cam bolt when fixing.</p>	<p>1: RIGHT SIDE PANEL X1</p> <p>B: CAM LOCK X 3</p>

GARRUCHA DELUXE SHOE CABINET

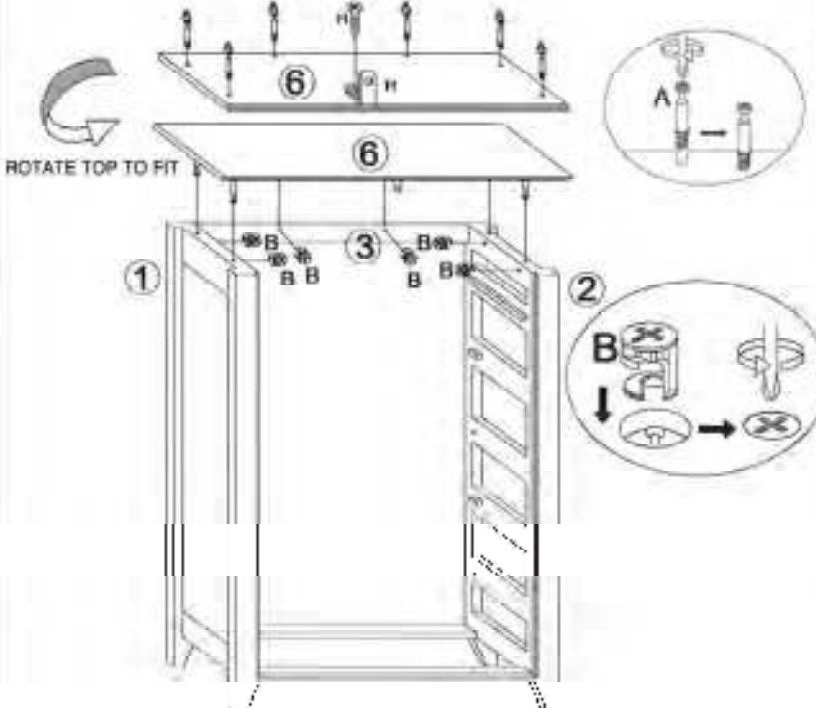
STEP 5	PARTS REQUIRED
 <p>ROTATE TOP TO FIT</p> <p>6: TOP PANEL X1 A: CAM BOLT X 6 B: CAM LOCK X 6 H: WALL FIXING X1</p> <p>Ensure the cam lock is lined up with the cam bolt when fixing.</p>	
STEP 6	PARTS REQUIRED
 <p>7: BACK PANEL X1 C: SCREW X 22</p>	



GARRUCHA DELUXE SHOE CABINET

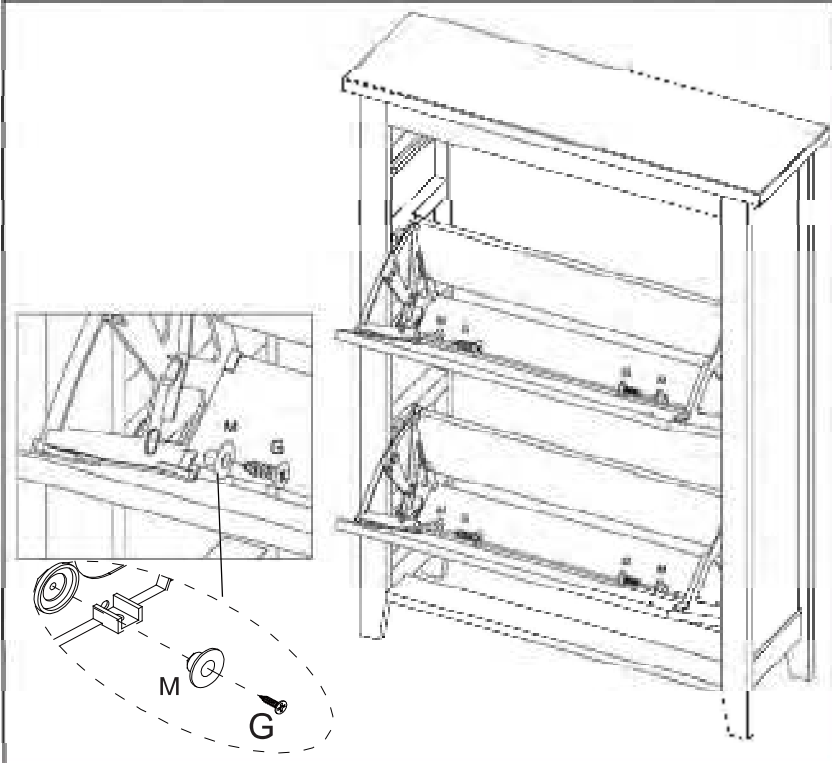STEP 7	PARTS REQUIRED
	G: SCREWS X 4 M: INNER GROMMET X 4

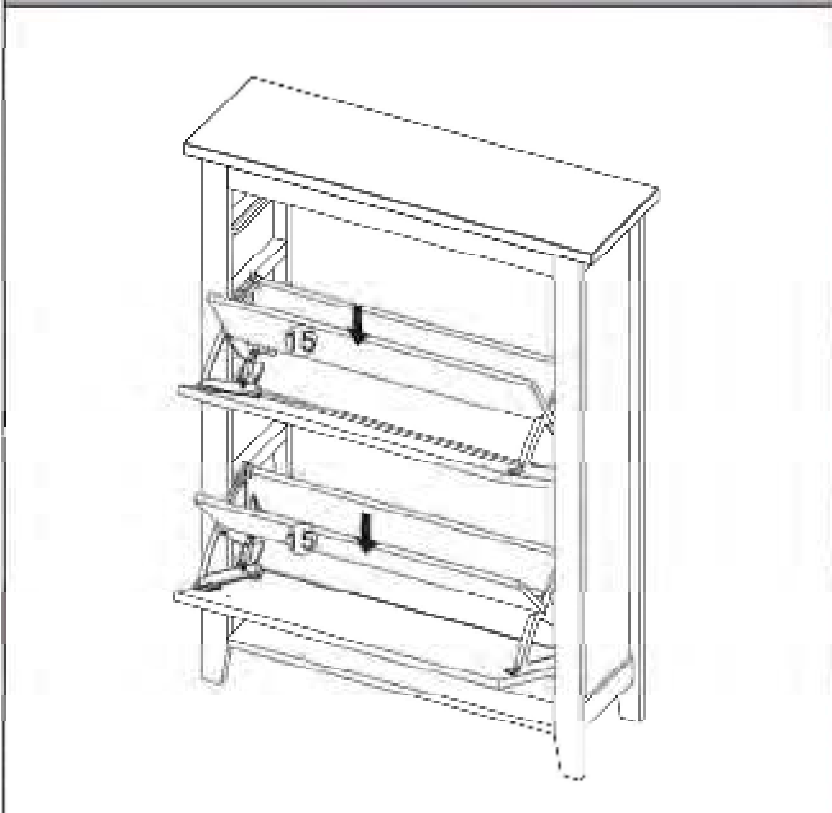
STEP 8	PARTS REQUIRED
	15: SHELF X 2


GARRUCHA DELUXE SHOE CABINET

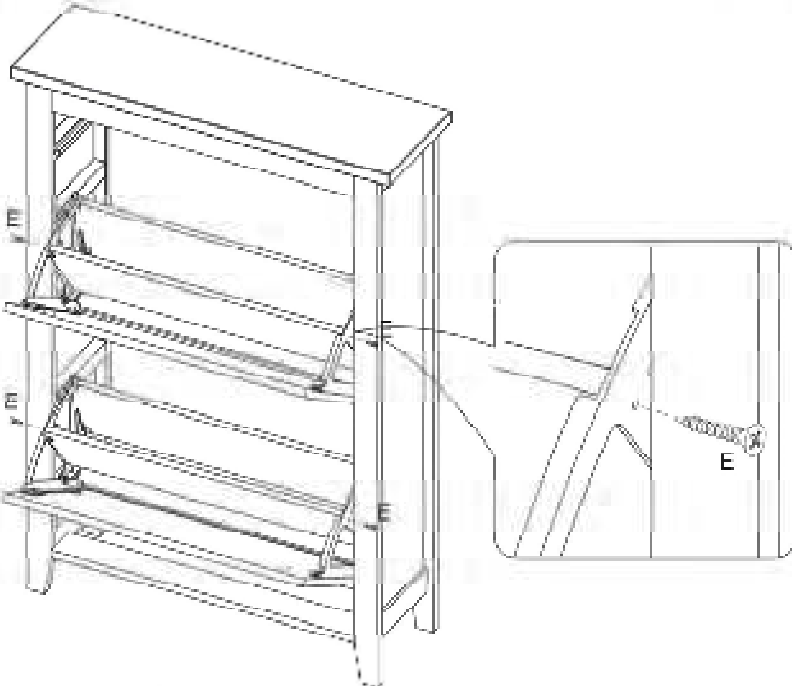STEP 9	PARTS REQUIRED
	E:SCREWS X 4

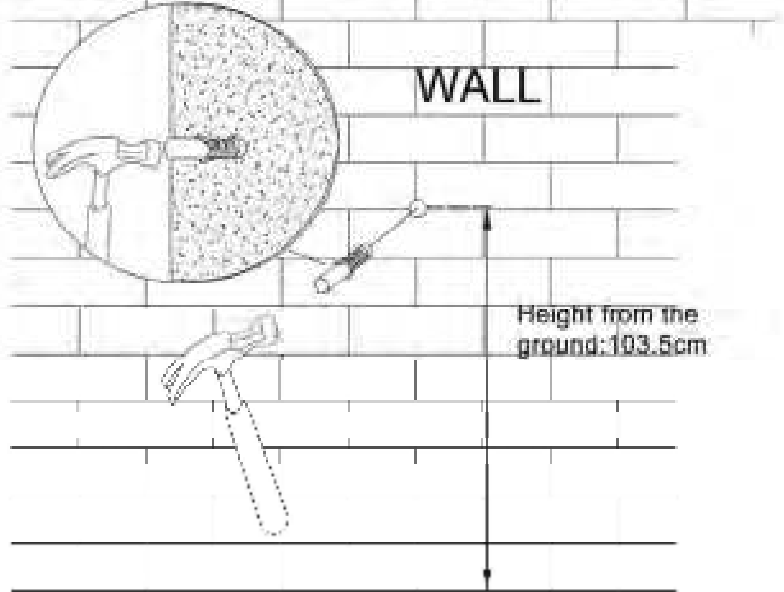
STEP 10	PARTS REQUIRED
 <p data-bbox="673 1249 803 1291">WALL</p> <p data-bbox="771 1480 966 1543">Height from the ground: 103.5cm</p> <p data-bbox="414 1795 917 1858"> Warning: Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.</p>	H:WALL FIXING X 1

GARRUCHA DELUXE SHOE CABINET

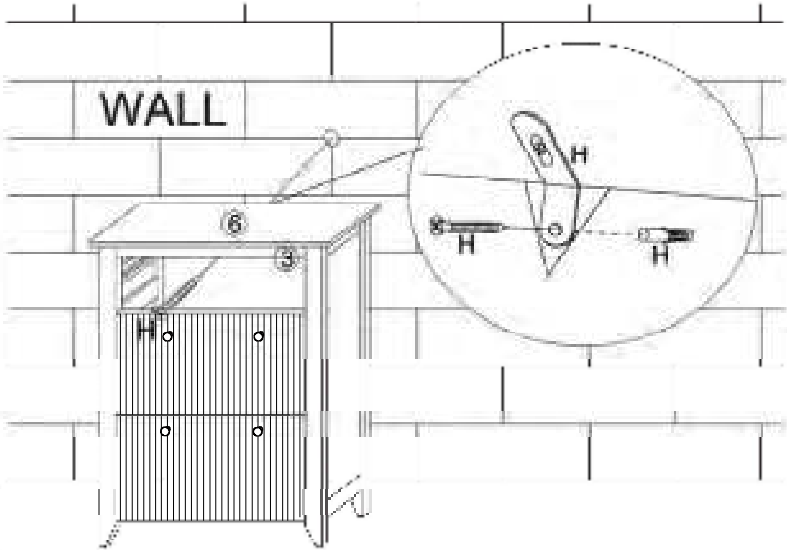STEP 11	PARTS REQUIRED
	<p>H:WALL FIXING X 1</p>

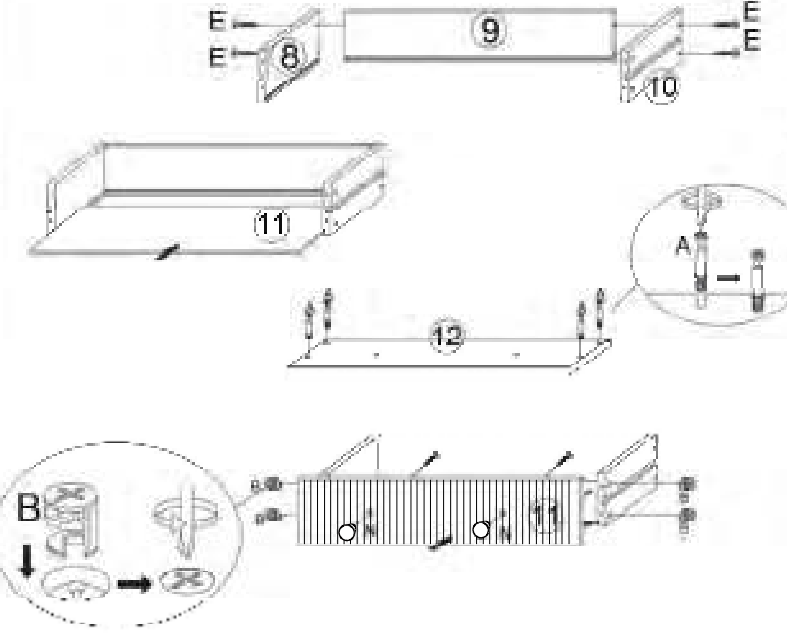STEP 12	PARTS REQUIRED
 <p>Ensure the cam lock is lined up with the cam bolt when fixing.</p>	<p>8: DRAWER LEFT SIDE PANEL X 1 9: DRAWER BACK X 1 10: DRAWER RIGHT SIDE PANEL X 1 11: DRAWER BOTTOM X 1 12: DRAWER FRONT X 1</p> <p>A: CAM BOLT X 4 B: CAM LOCK X 4 E: SCREWS X 4 N: HANDLE X 2</p>

GARRUCHA DELUXE SHOE CABINET

STEP 13	PARTS REQUIRED
 <p>The diagram shows a side view of a shoe cabinet with a drawer partially pulled out. The drawer is a long, narrow rectangular box with a front panel featuring four circular knobs arranged in a 2x2 grid. The cabinet's interior is lined with vertical slats. The drawer is being inserted into a slot at the top of the cabinet. Two small circular components, identified as drawer stoppers, are shown being inserted into the top of the drawer to prevent it from sliding out.</p>	<p>D: DRAWER STOPPER X 2</p>


GARRUCHA DELUXE SHOE CABINET

Complete Assembly

Your **SHOE CABINET** is now completely assembled.

Periodically check to ensure that the components are in their proper position, free from damage.

Also, make sure the connectors are tight and secure.

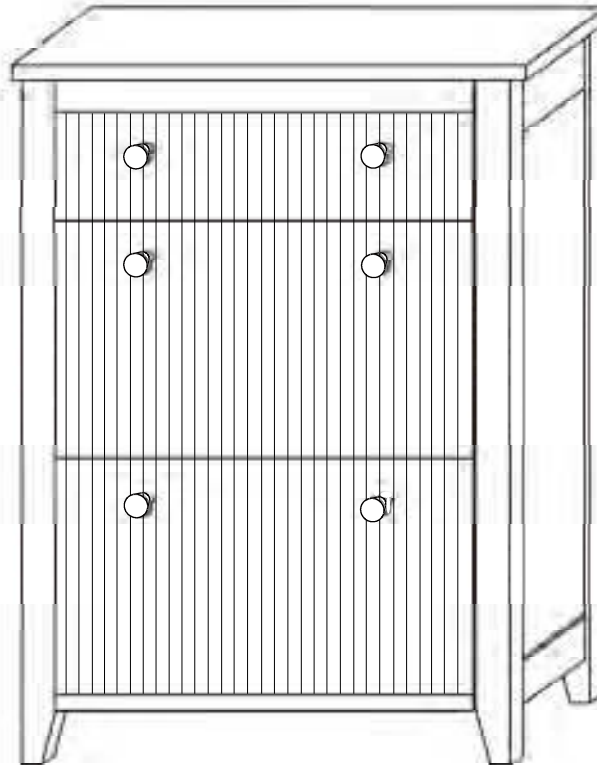

Keep instructions for future reference

Supplied by
GFW The Furniture
Warehouse
Waterside Distribution Centre
Waterside Business Park
Johnson Road
Eccleshill
Lancashire
BB3 3RT

