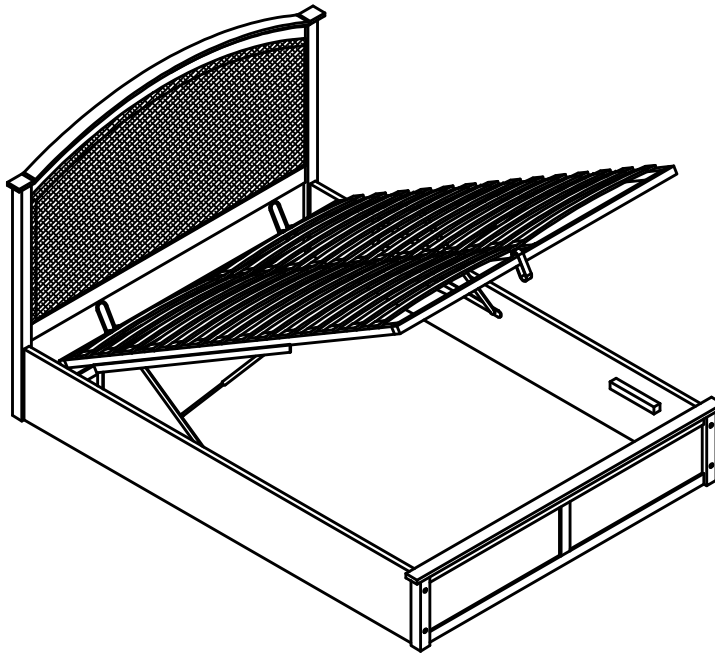


# MADRID OTTOMAN BED 135CM ASSEMBLY INSTRUCTIONS

Thank you for purchasing the MADRID OTTOMAN BED 135CM. Please read the instructions carefully to ensure safe operation of the product.



Size: 4'6FT L 2042 X W 1500 X H 1140  
Colour : LIMED OAK

---


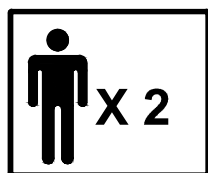

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

---

## Tools Required



1 Hour  
Set Up

# MADRID OTTOMAN BED 135CM ASSEMBLY INSTRUCTIONS

## IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

### INFORMATION

- This product is intended for a maximum person's weight of 130kg per side. Do not exceed this weight.
- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled and secured as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly.
- This product should only be used on firm, level ground.
- Please dismantle for transportation.
- Tools not included.

### WARNING

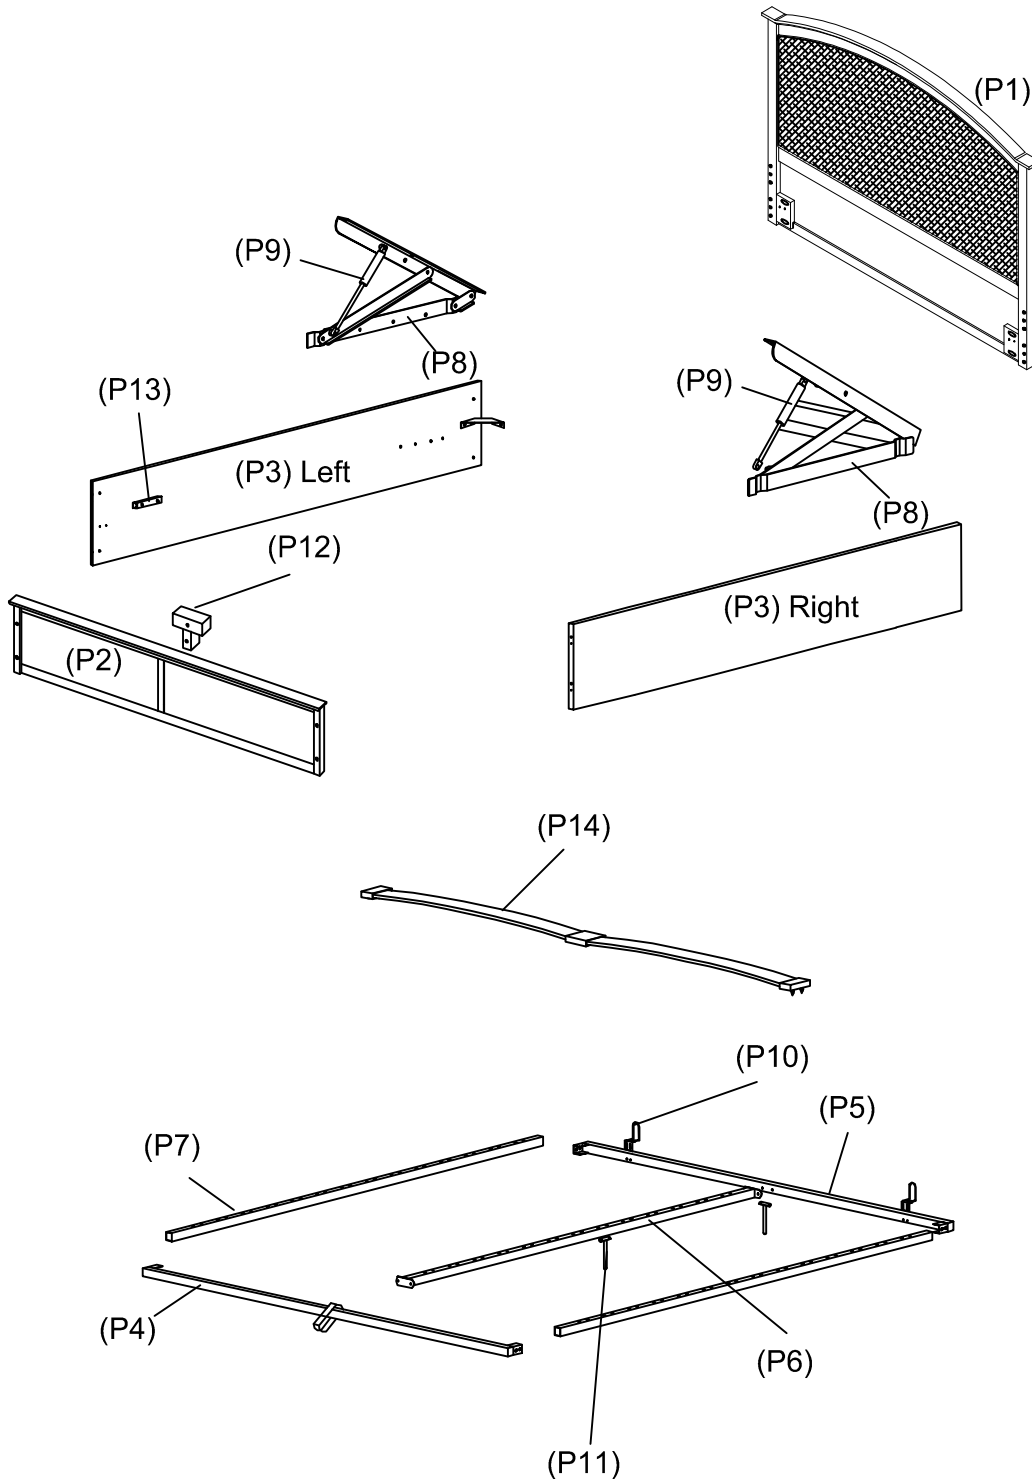
- Keep small parts out of reach of children.
- Make sure the legs remain in contact with the ground.
- DO NOT use power tools to construct this product.
- DO NOT tighten screws until fully assembled.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing, damaged or worn.
- DO NOT stand on the product.
- This bed uses a pressured mechanism, always use caution when operating.
- DO NOT remain on the bed whilst the lifting mechanism is in use.
- Only use the storage compartment when the frame is fully raised in the up position.
- Please pay particular attention when children or animals are present to ensure that no accidental entrapment occurs whilst operating this product.
- Keep hand and fingers clear of the mechanism when opening and closing the bed for use.
- Incorrect installation could lead to injury, take care following instruction.
- Take care when adjusting positions to avoid trapping of body parts.

### CARE INFORMATION

- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.

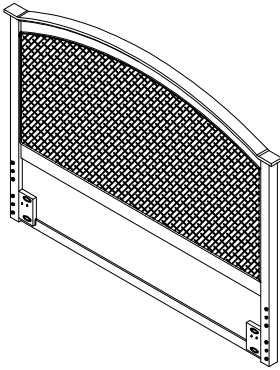
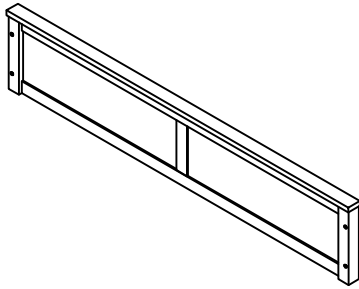
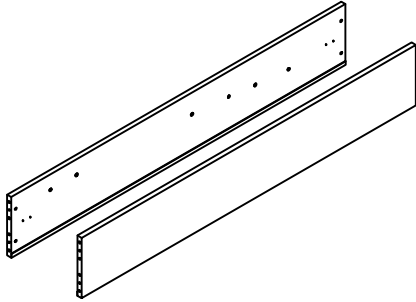
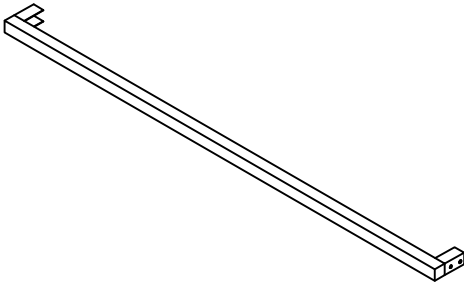
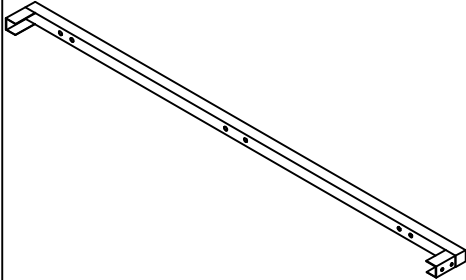
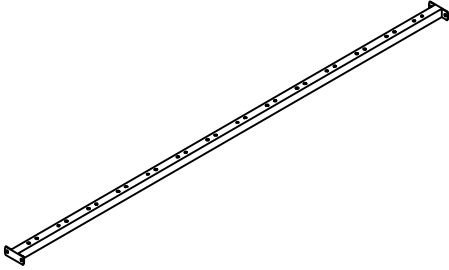
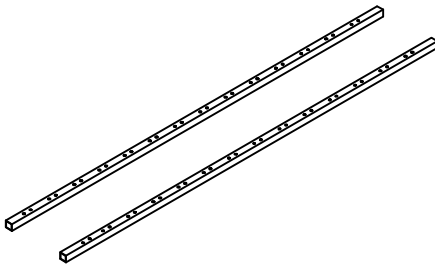
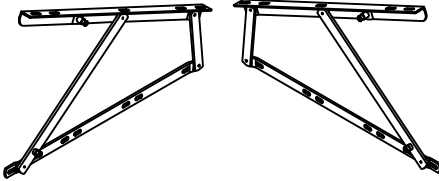
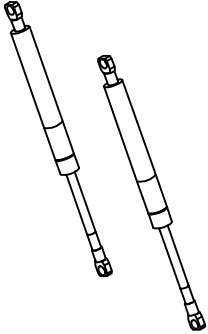
# MADRID OTTOMAN BED 135CM ASSEMBLY INSTRUCTIONS

Please check the pack contents before assembling the product. If any components are missing, please contact your retailer. The fittings pack contains small items that should be kept away from small children.



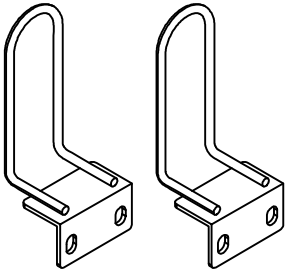
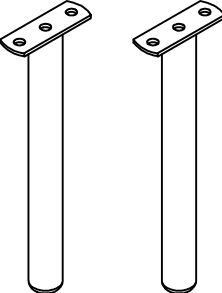
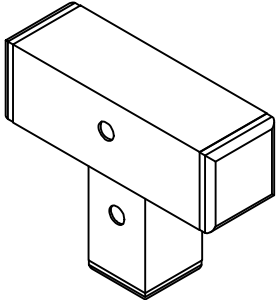
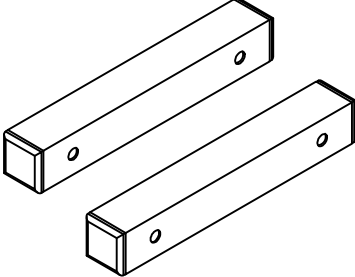
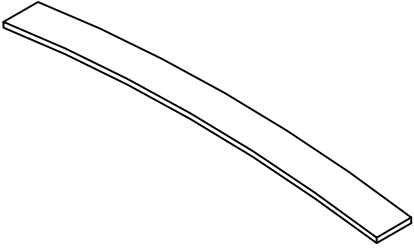
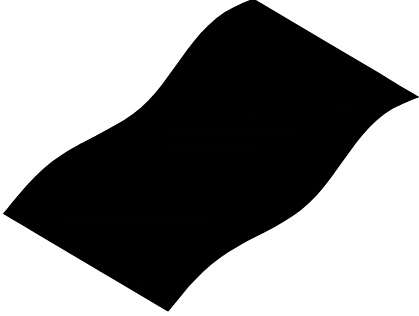
# MADRID OTTOMAN BED 135CM ASSEMBLY INSTRUCTIONS

Parts

<p><b>P1</b></p> 	<p><b>P2</b></p> 	<p><b>P3</b></p> 
<p>HEADBOARD 1PC Carton No: 1</p>	<p>FOOTBOARD 1PC Carton No: 2</p>	<p>SIDE RAIL LEFT AND RIGHT 2PCS Carton No: 2</p>
<p><b>P4</b></p> 	<p><b>P5</b></p> 	<p><b>P6</b></p> 
<p>FRONT TUBE 1PC Carton No: 3</p>	<p>BACK TUBE 1PC Carton No: 3</p>	<p>CENTRE TUBE 1PC Carton No: 3</p>
<p><b>P7</b></p> 	<p><b>P8</b></p>  <p style="text-align: center;"><b>LEFT      RIGHT</b></p>	<p><b>P9</b></p> 
<p>SIDE TUBE 2PCS Carton No: 3</p>	<p>HINGE 2PCS Carton No: 3</p>	<p>PISTON 2PCS Carton No: 3</p>

# MADRID OTTOMAN BED 135CM ASSEMBLY INSTRUCTIONS

## Parts

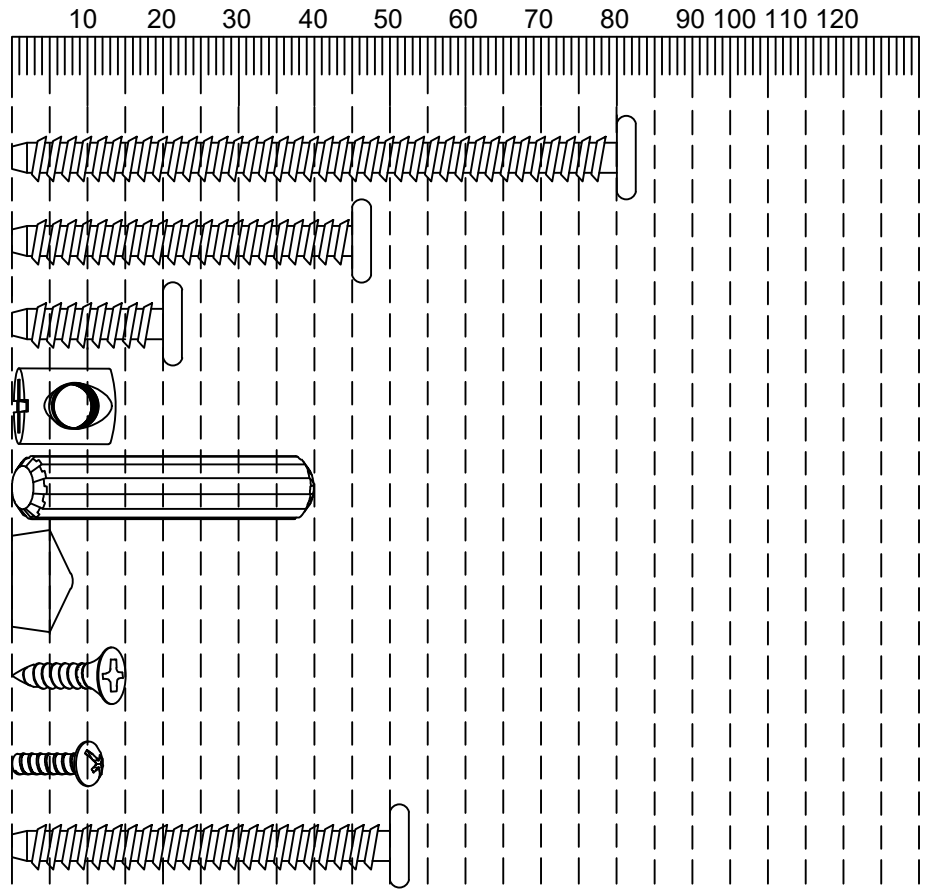
<p><b>P10</b></p> 	<p><b>P11</b></p> 	<p><b>P12</b></p> 
<p>MATTRESS STOPPER 2PCS Carton No: 2</p>	<p>SUPPORT LEG 2PCS Carton No: 2</p>	<p>HOLDING BLOCK 1PC Carton No: 2</p>
<p><b>P13</b></p> 	<p><b>P14</b></p> 	<p><b>P15</b></p> 
<p>HOLDING TUBE 2PCS Carton No: 3</p>	<p>WOODEN SLAT 28PCS Carton No: 3</p>	<p>NON-WOVEN FABRIC 1PC Carton No: 2</p>

# MADRID OTTOMAN BED 135CM

## ASSEMBLY INSTRUCTIONS

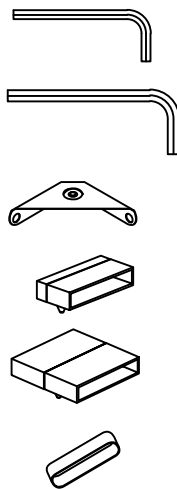
Fixings (to scale)

Ref	Dimensions	Qty
H1	JCBC SCREW M6 X 80MM	8
H2	JCBC SCREW M8 X 45MM	4
H3	JCBC SCREW M8 X 20MM	34
H4	BARREL NUT M6 X 13MM	8
H5	DOWEL M8 X 40MM	16
H11	WOOD BUTTON 8MM	8
H12	Screw M4 X 15MM	16
H13	JCBC SCREW M6 X 12MM	
H14	JCBC SCREW M6 X 50MM	2



(Not to scale)

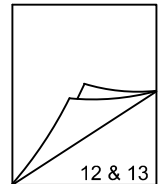
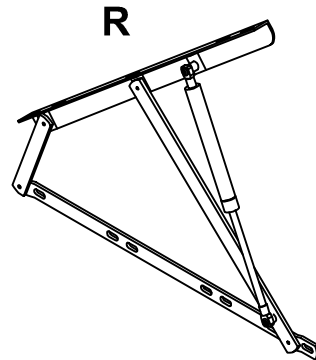
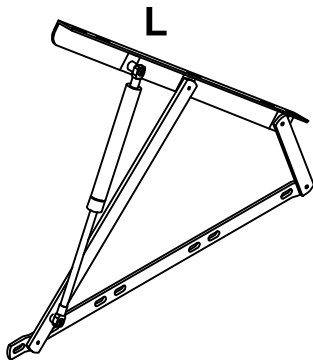
Ref	Dimensions	Qty
H6	M4 ALLEN KEY	1
H7	M5 ALLEN KEY	1
H8	CORNER BRACKET	4
H9	PLASTIC END CAP	28
H10	PLASTIC CENTRE CAP	14
H15	BELT	1



**CAUTION:** There are many small components used in the construction of this product. Please keep these components away from young children whilst assembling this product.

**If you keep the fittings in a bowl during assembly you will be less likely to lose them**

# MADRID OTTOMAN BED 135CM ASSEMBLY INSTRUCTIONS

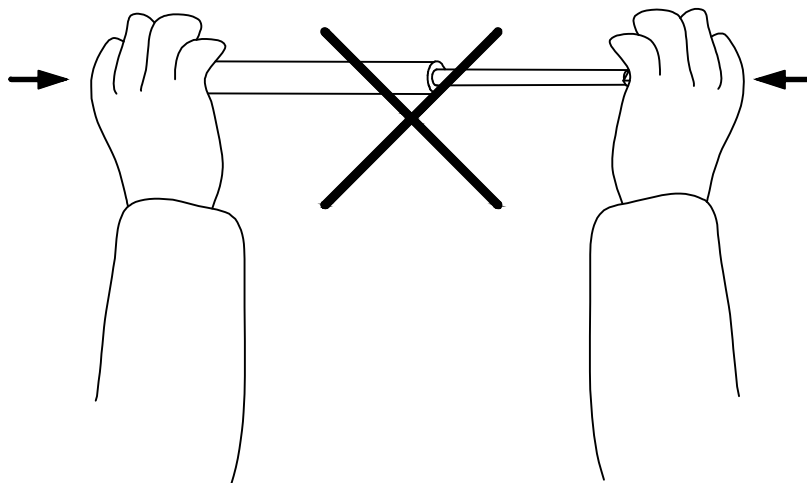


Turn to page 12 & 13 for fitting the hinges

The pistons used in the construction of this product are extremely strong and cannot be operated by hand when not fitted to the ottoman hinges. All pistons are tested in the factory for correct pressure and operation before use.

**Initially it might appear that the pistons are very stiff when opening and closing the ottoman frame, THIS IS NORMAL.**

After operating the ottoman a few times, the movement of the pistons and the opening and closing of the ottoman will become easier.



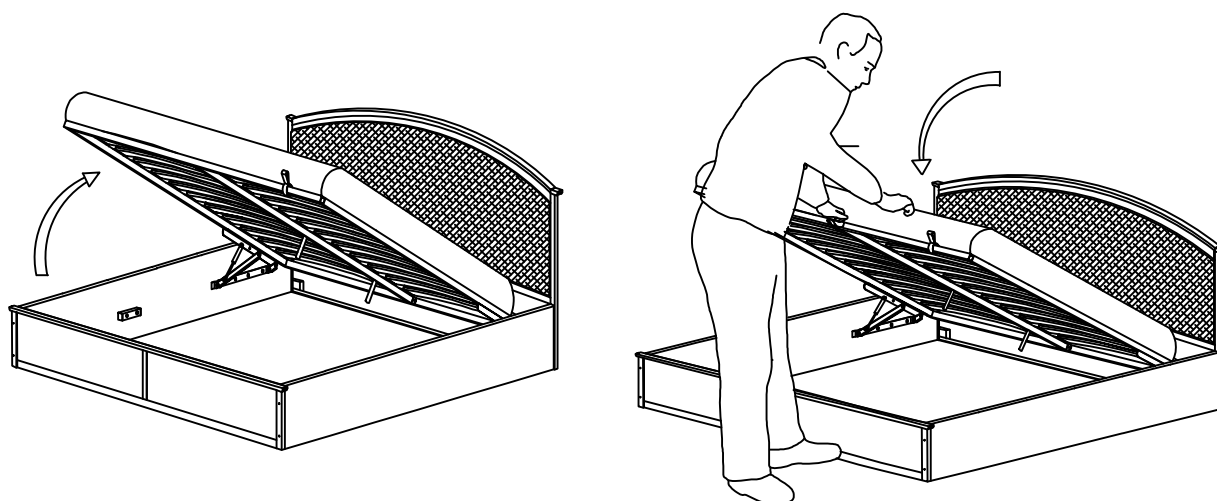
# MADRID OTTOMAN BED 135CM

## ASSEMBLY INSTRUCTIONS

### Hints and Tips

To operate the ottoman, always use 2 hands at arm's length and only where illustration on this product. You must ensure the mattress is on the bed frame before lifting the mechanism. Failure to do so may **result in injury**.

To ensure your safety please do not stand too close in case the frame bounces up. The weight of the mattress loaded on the frame will keep the frame in a lower position until it is pulled upwards by the user.



Do not attempt to move the bed whilst the frame is in the upright position

If removing the mattress, make sure the frame is secured so it does not flip open. When lifting the bed frame, remove pillows and covers.

**PLEASE NOTE** - It takes a lot of force to make the initial movement of the ottoman - **THIS IS A DESIGN FEATURE OF THE PRODUCT SO THAT IT DOES NOT FALL SHUT** - and the nearer to being closed the ottoman is, the easier it is to move. When the ottoman is almost shut, it will close completely under its own weight.

When lowering the slat unit for the first time, take care to make sure it does not rub unevenly on the inside face of the Side Rail. If it does, the bed has been assembled slightly out of square. This can be rectified by moving the Footboard of the bed slightly to the left or right whilst leaving the headboard of the bed frame stationary.

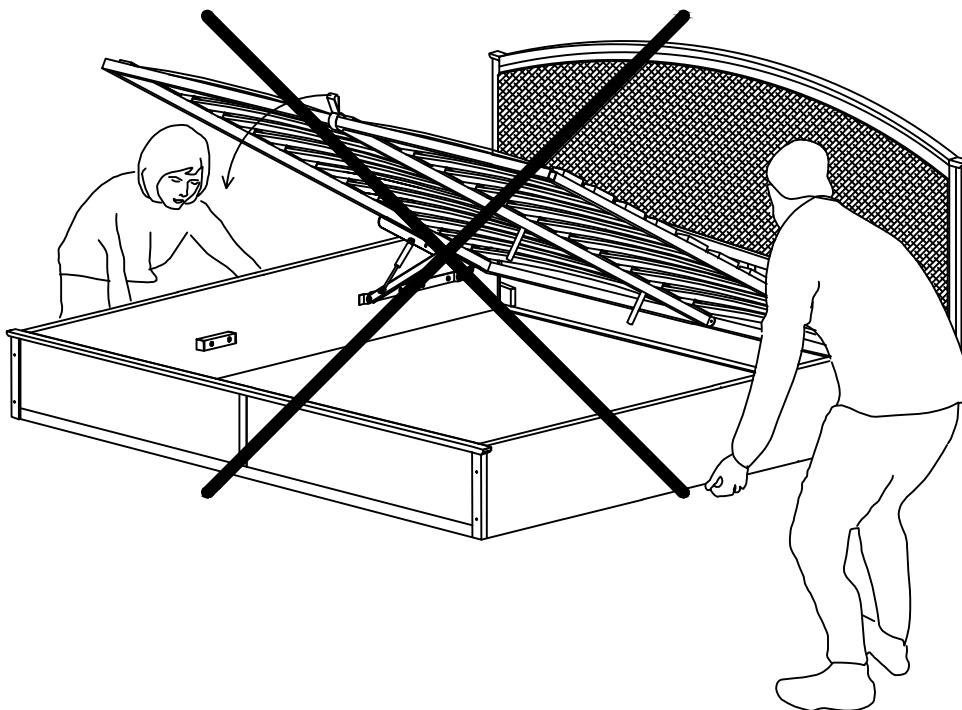
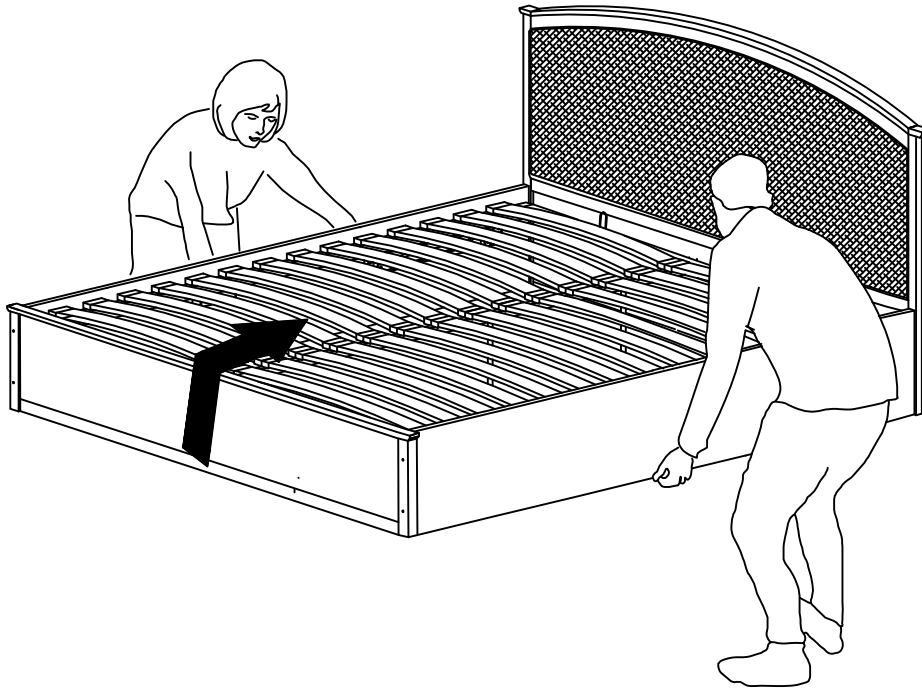
### **Tip for difficulty with compression:**

If you are experiencing difficulty with the initial compression try fitting one piston at a time (following the Assembly Instructions) then press down on the side of the frame with the piston fitted - this acts like a big lever (The weight of the mattress can be used to supplement the load exerted). Effectively you are doubling the amount of force applied, because you have halved the resistance offered by the pistons. It can take slightly more effort than you might feel comfortable applying to the bed frame at first.



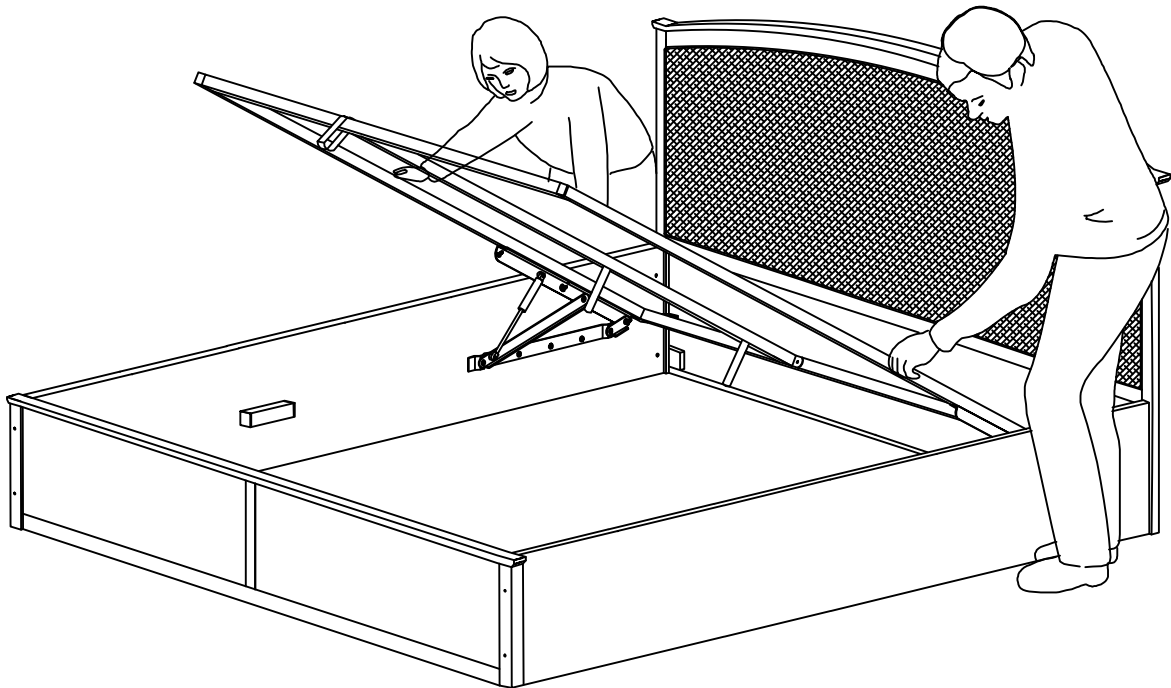
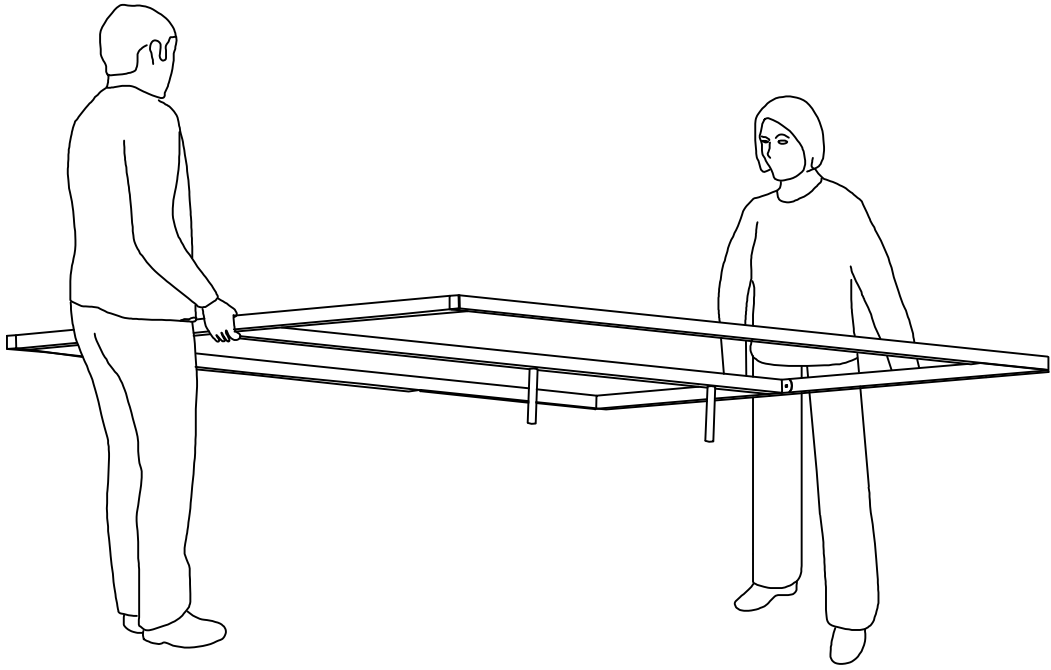
# MADRID OTTOMAN BED 135CM ASSEMBLY INSTRUCTIONS

Do not attempt to move the bed whilst the frame is in the upright position.



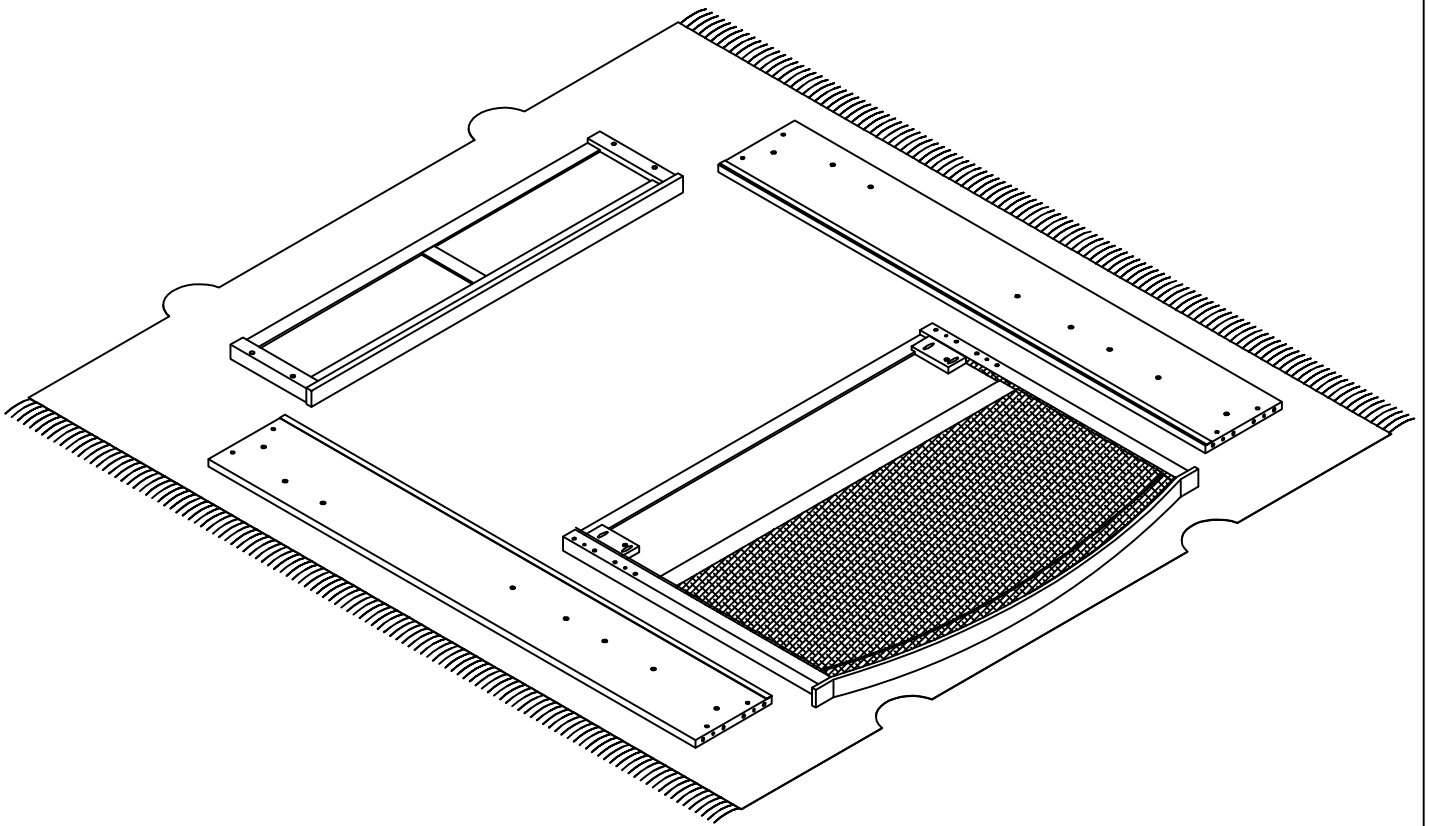
# MADRID OTTOMAN BED 135CM ASSEMBLY INSTRUCTIONS

2 people are required to fit the frame safety.



# MADRID OTTOMAN BED 135CM ASSEMBLY INSTRUCTIONS

Lay out all 4 sides on a soft surface i.e. Rug, Carpet or Packaging Carton

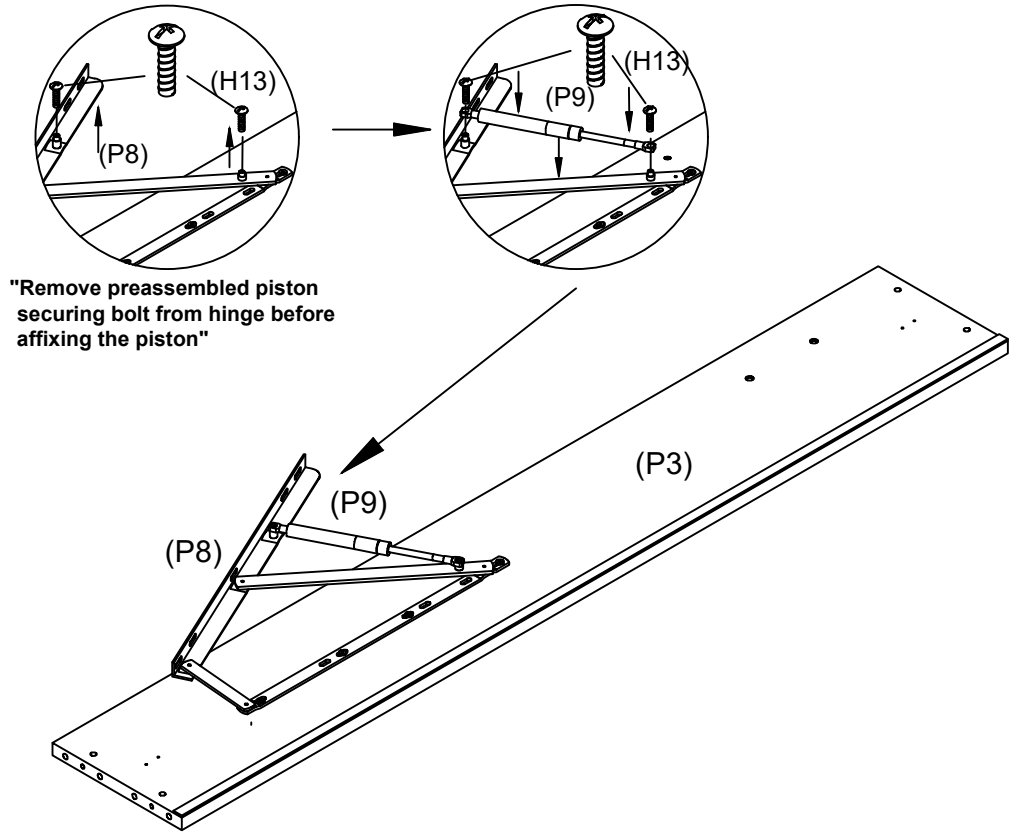


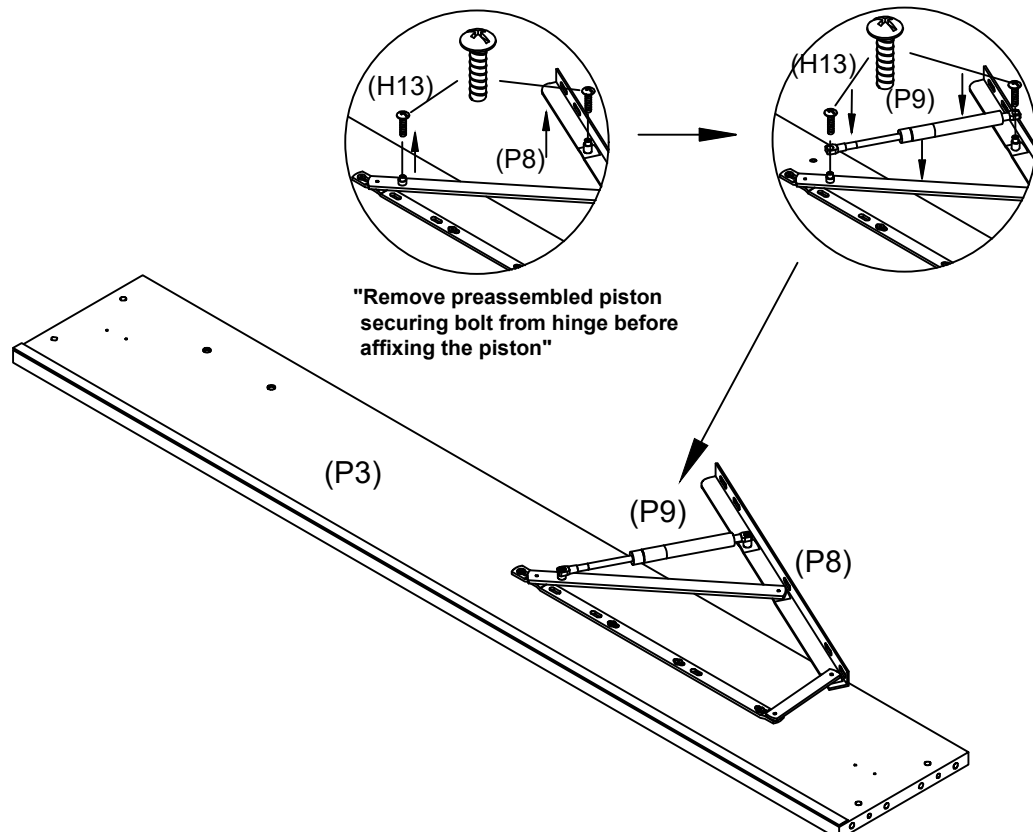
# MADRID OTTOMAN BED 135CM ASSEMBLY INSTRUCTIONS

STEP 1 (Right Side Rail)	Parts Required
	<p>(P3) Side Rail - 1pc</p> <p>(P8) Hinge - 1pc</p> <p>(H3) JCBC Screw M8x20mm - 4pc</p> <p>(H7) M5 Allen Key - 1pc</p>

STEP 2 (Left Side Rail)	Parts Required
	<p>(P3) Side Rail - 1pc</p> <p>(P8) Hinge - 1pc</p> <p>(H3) JCBC Screw M8x20mm - 4pc</p> <p>(H7) M5 Allen Key - 1pc</p>

# MADRID OTTOMAN BED 135CM ASSEMBLY INSTRUCTIONS

<b>STEP 3 (Right Side Rail)</b>	<b>Parts Required</b>
 <p style="margin-left: 20px;">"Remove preassembled piston securing bolt from hinge before affixing the piston"</p>	<p>(P3) Side Rail - 1pc</p> <p>(P8) Hinge - 1pc</p> <p>(P9) Piston - 1pc</p> <p>(H13) JCBC Screw M6x12mm - 2pcs</p>

<b>STEP 4 (Left Side Rail)</b>	<b>Parts Required</b>
 <p style="margin-left: 20px;">"Remove preassembled piston securing bolt from hinge before affixing the piston"</p>	<p>(P3) Side Rail - 1pc</p> <p>(P8) Hinge - 1pc</p> <p>(P9) Piston - 1pc</p> <p>(H13) JCBC Screw M6x12mm - 2pcs</p>

# MADRID OTTOMAN BED 135CM ASSEMBLY INSTRUCTIONS

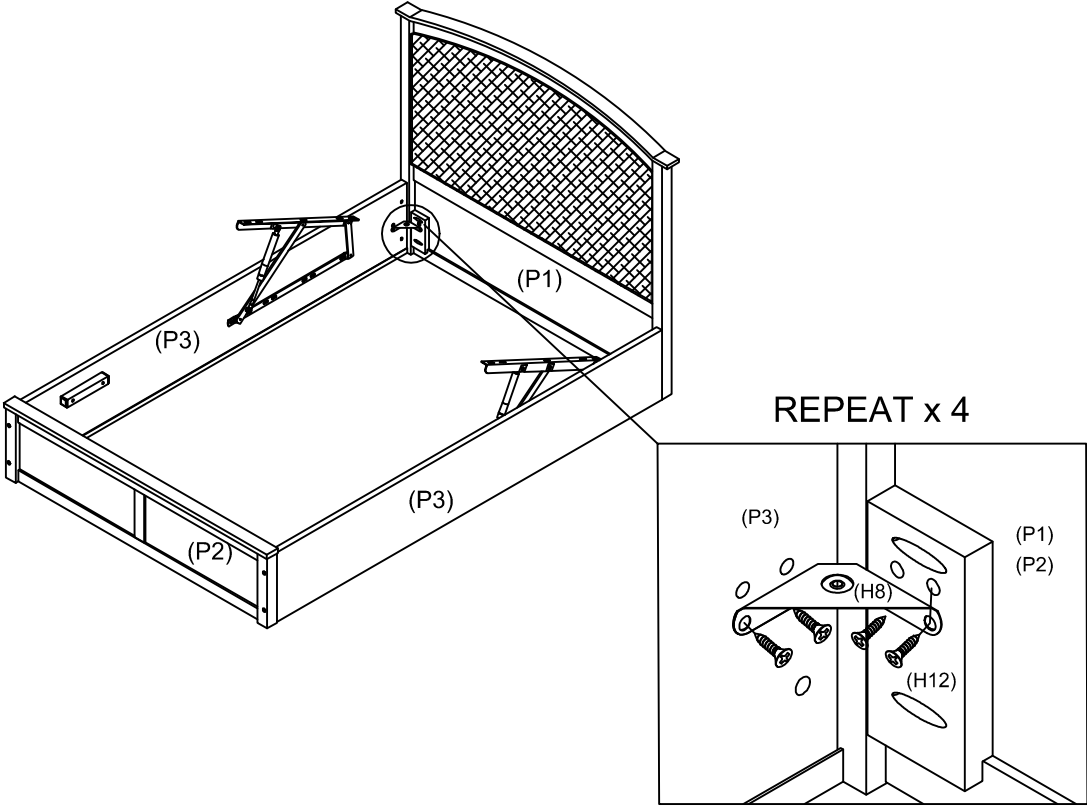
STEP 5 (Right Side Rail)	<b>Parts Required</b>
	<p>(P3) Side Rail - 1pc</p> <p>(P12) Holding Tube - 1pc</p> <p>(H2) JCBC Screw M8x45mm - 2pcs</p> <p>(H6) M5 Allen Key - 1pc</p>

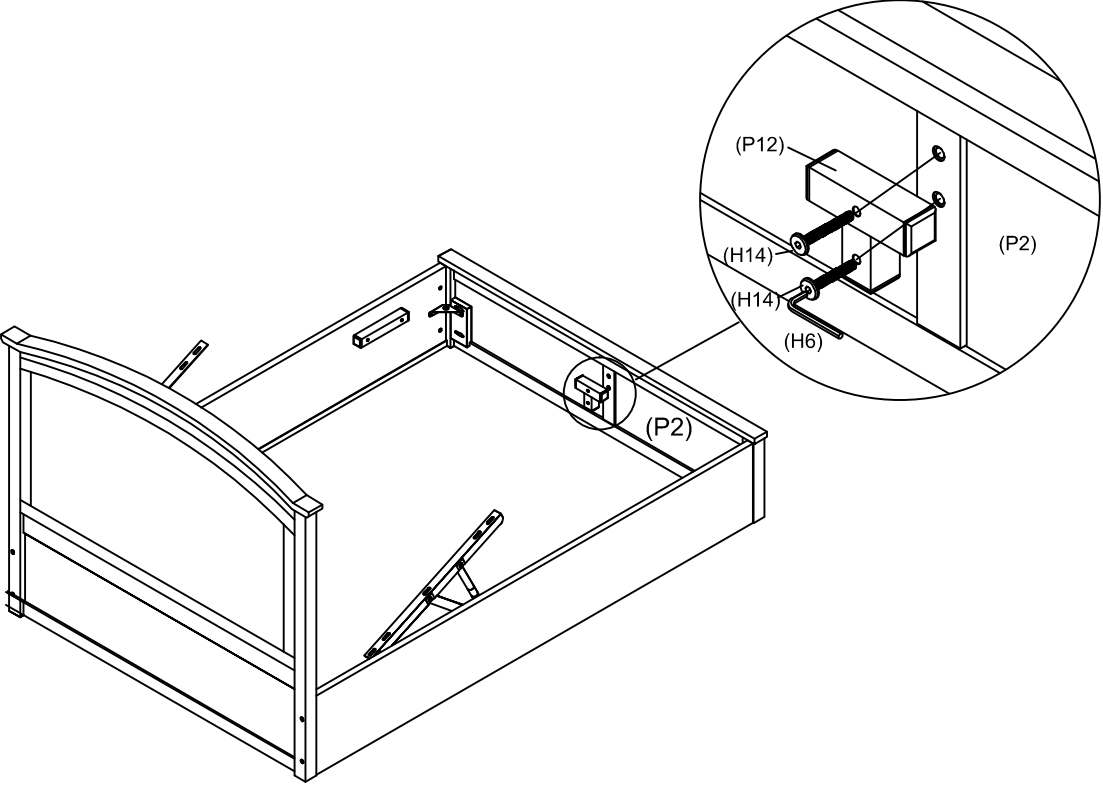
STEP 6 (Left Side Rail)	<b>Parts Required</b>
	<p>(P3) Side Rail - 1pc</p> <p>(P12) Holding Tube - 1pc</p> <p>(H2) JCBC Screw M8x45mm - 2pcs</p> <p>(H7) M5 Allen Key - 1pc</p>

# MADRID OTTOMAN BED 135CM ASSEMBLY INSTRUCTIONS

STEP 7	Parts Required
	<p>(P1) Headboard - 1pc</p> <p>(P2) Footboard - 1pc</p> <p>(P3) Side Rail - 2pcs</p> <p>(H1) JCBC Screw M6x80mm - 8pcs</p> <p>(H4) Barrel Nut M6x13mm - 8pcs</p> <p>(H5) Dowel M8x40mm - 16pcs</p> <p>(H6) M4 Allen Key - 1pc</p> <p>(H11) Wood Button 8mm - 8pcs</p>

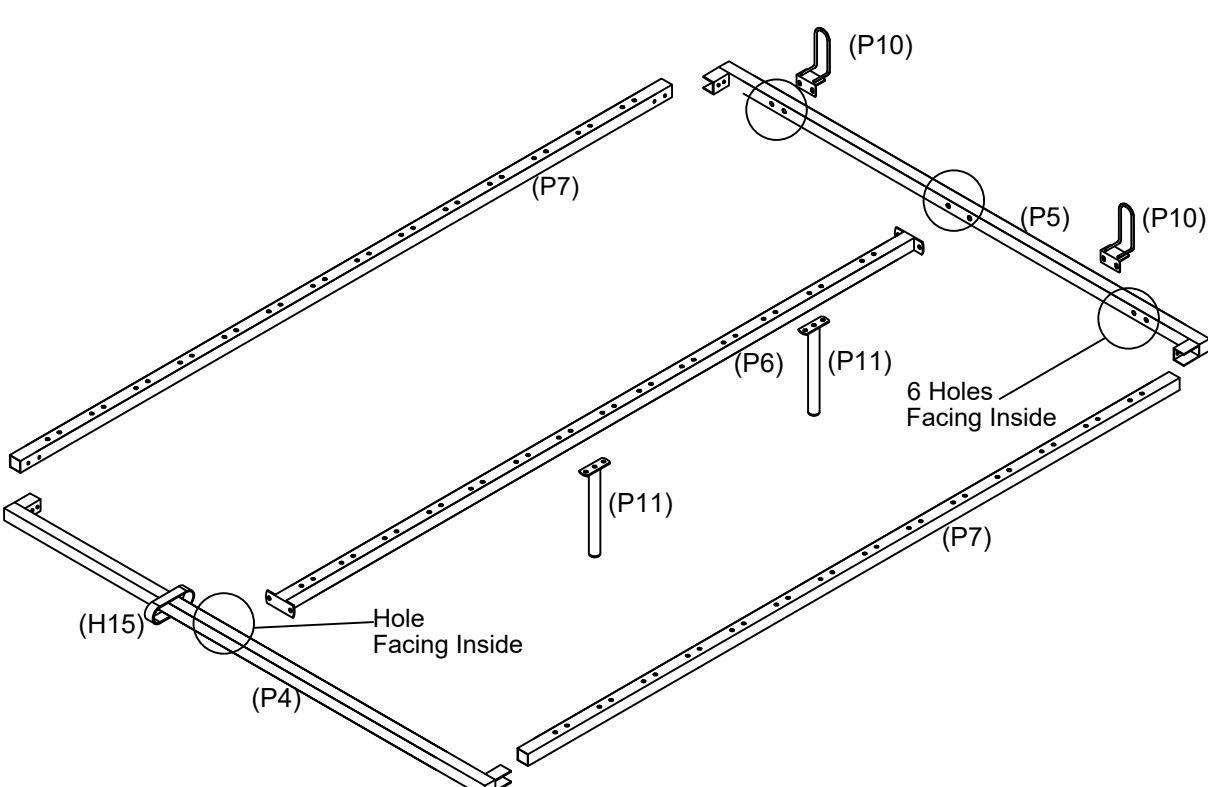
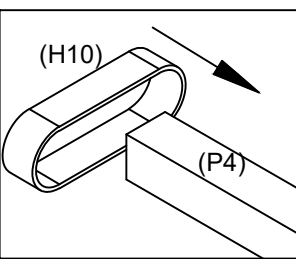
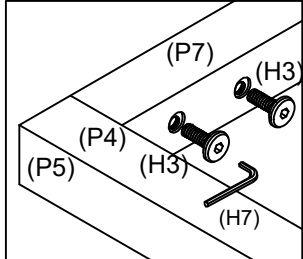
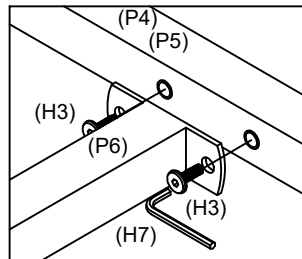
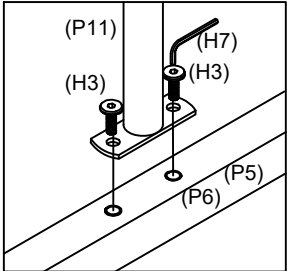
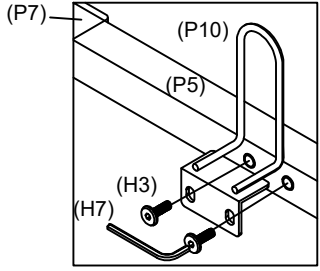
# MADRID OTTOMAN BED 135CM ASSEMBLY INSTRUCTIONS

STEP 8	Parts Required
	<p>(P1) Headboard - 1pc</p> <p>(P2) Footboard - 1pc</p> <p>(P3) Side Rail - 2pcs</p> <p>(H12) Screw M4x15mm - 16pcs</p> <p>(H8) Corner Bracket - 4pcs</p>

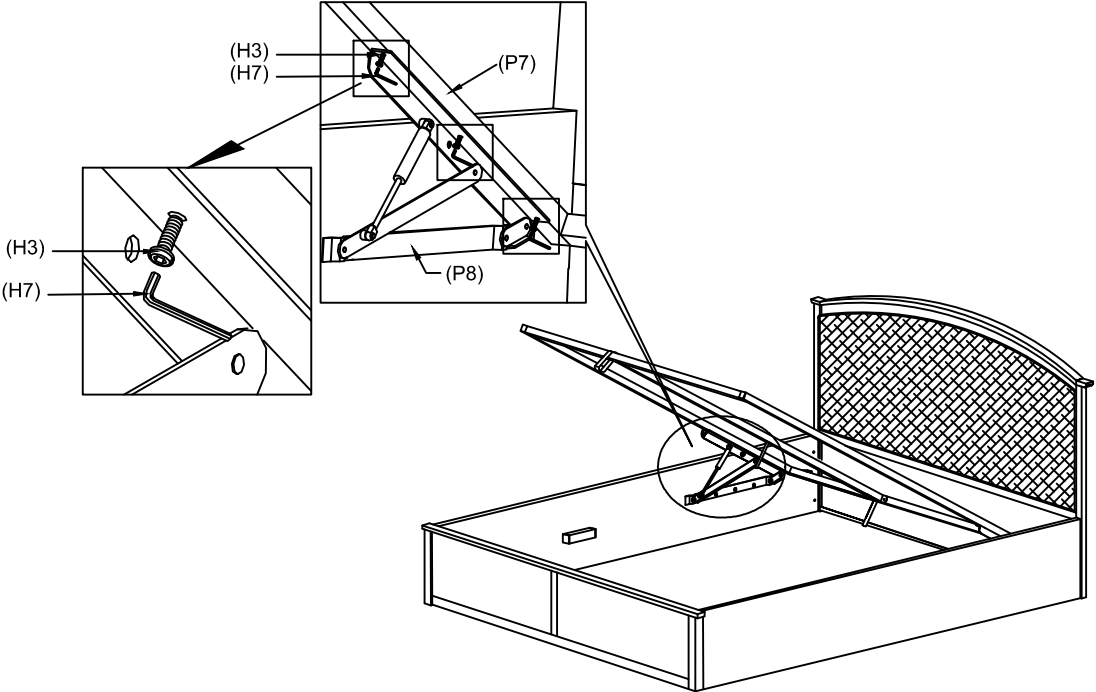
STEP 9	Parts Required
	<p>(P2) Footboard - 1pc</p> <p>(P12) Holding Block - 1pc</p> <p>(H14) JCBC Screw M6x50mm - 2pc</p> <p>(H6) M4 Allen Key - 1pc</p>

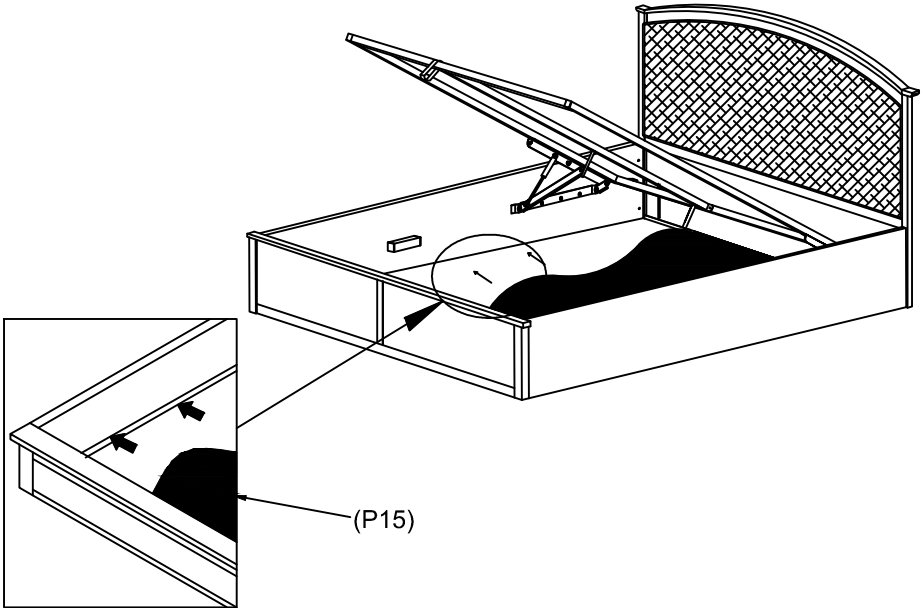


# MADRID OTTOMAN BED 135CM ASSEMBLY INSTRUCTIONS

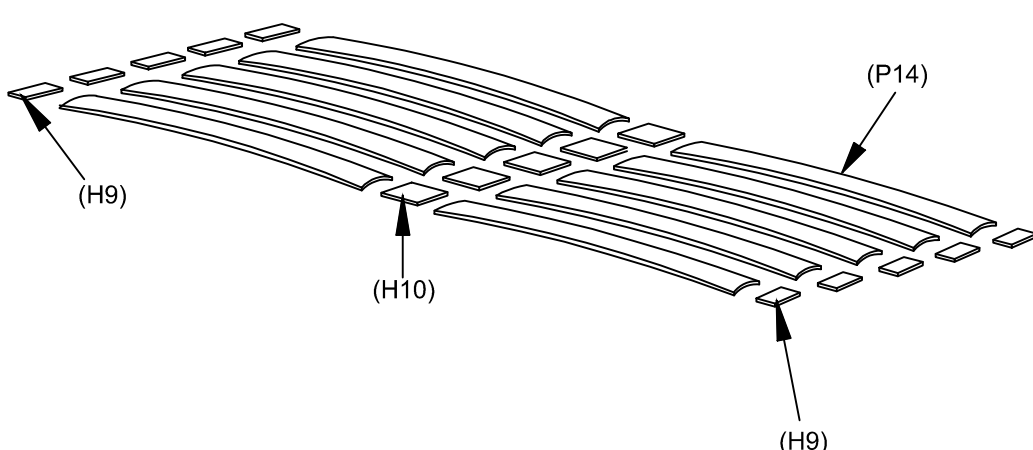
STEP 10	Parts Required
 <p style="margin-top: 20px;">STEP 1 Insert Belt (H12) into Front Tube (P4)</p>  <p style="margin-top: 10px;">STEP 2 Bottom View</p>  <p style="margin-top: 10px;">STEP 3 Bottom View</p>  <p style="margin-top: 10px;">STEP 4 Bottom View</p>  <p style="margin-top: 10px;">STEP 5 Top View</p> 	<p>(P4) Front Tube - 1pc</p> <p>(P5) Back Tube - 1pc</p> <p>(P6) Centre Tube - 1pc</p> <p>(P7) Side Tube - 2pcs</p> <p>(P10) Mattress Stopper - 2pcs</p> <p>(P11) Support Leg - 2pcs</p> <p>(H3) JCBC Screw M8x20mm - 20pcs</p> <p>(H7) M5 Allen Key - 1pc</p> <p>(H15) Belt - 1pc</p>

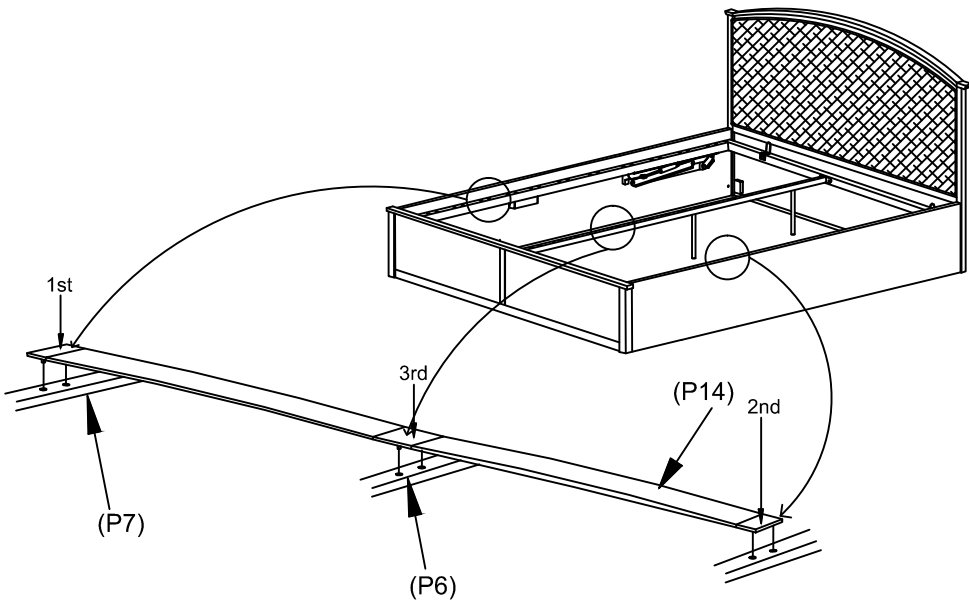
# MADRID OTTOMAN BED 135CM ASSEMBLY INSTRUCTIONS

STEP 11	Parts Required
 <p>The diagram illustrates the assembly of the bed's internal support structure. It shows a side view of the bed frame with the headboard and footboard. A circular callout highlights the hinge mechanism where the side tubes are attached. Labels (H3) and (H7) point to the hinge components, (P7) points to the side tube, and (P8) points to the hinge. An inset shows a close-up of a screw being inserted into a hole in the side tube.</p>	<p>(P7) Side Tube - 2pcs</p> <p>(P8) Hinge - 2pcs</p> <p>(H3) JCBC Screw <b>M8x20mm - 6pc</b></p> <p>(H7) M5 Allen key - 1pc</p>

STEP 12	Parts Required
 <p>The diagram shows the final step of the assembly, which is the installation of the non-woven fabric. The bed frame is shown with the headboard and footboard. A circular callout highlights the area where the fabric is being placed. Label (P15) points to the fabric. An inset shows a close-up of the fabric being placed into the frame.</p>	<p>(P15) Non-Woven Fabric - 1pc</p>

# MADRID OTTOMAN BED 135CM ASSEMBLY INSTRUCTIONS

<b>STEP 13</b>	<b>Parts Required</b>
	<p>(P14) Wooden Slat - 30pcs</p> <p>(H9) Plastic End Cap - 28pcs</p> <p>(H10) Plastic Centre Cap - 14pcs</p>

<b>STEP 14</b>	<b>Parts Required</b>
	<p>(P6) Centre Tube - 1pc</p> <p>(P7) Side Tube - 2pcs</p> <p>(P14) Wooden Slat - 30pcs</p> <p>(H9) Plastic End Cap - 28pcs</p> <p>(H10) Plastic Centre Cap - 14pcs</p>

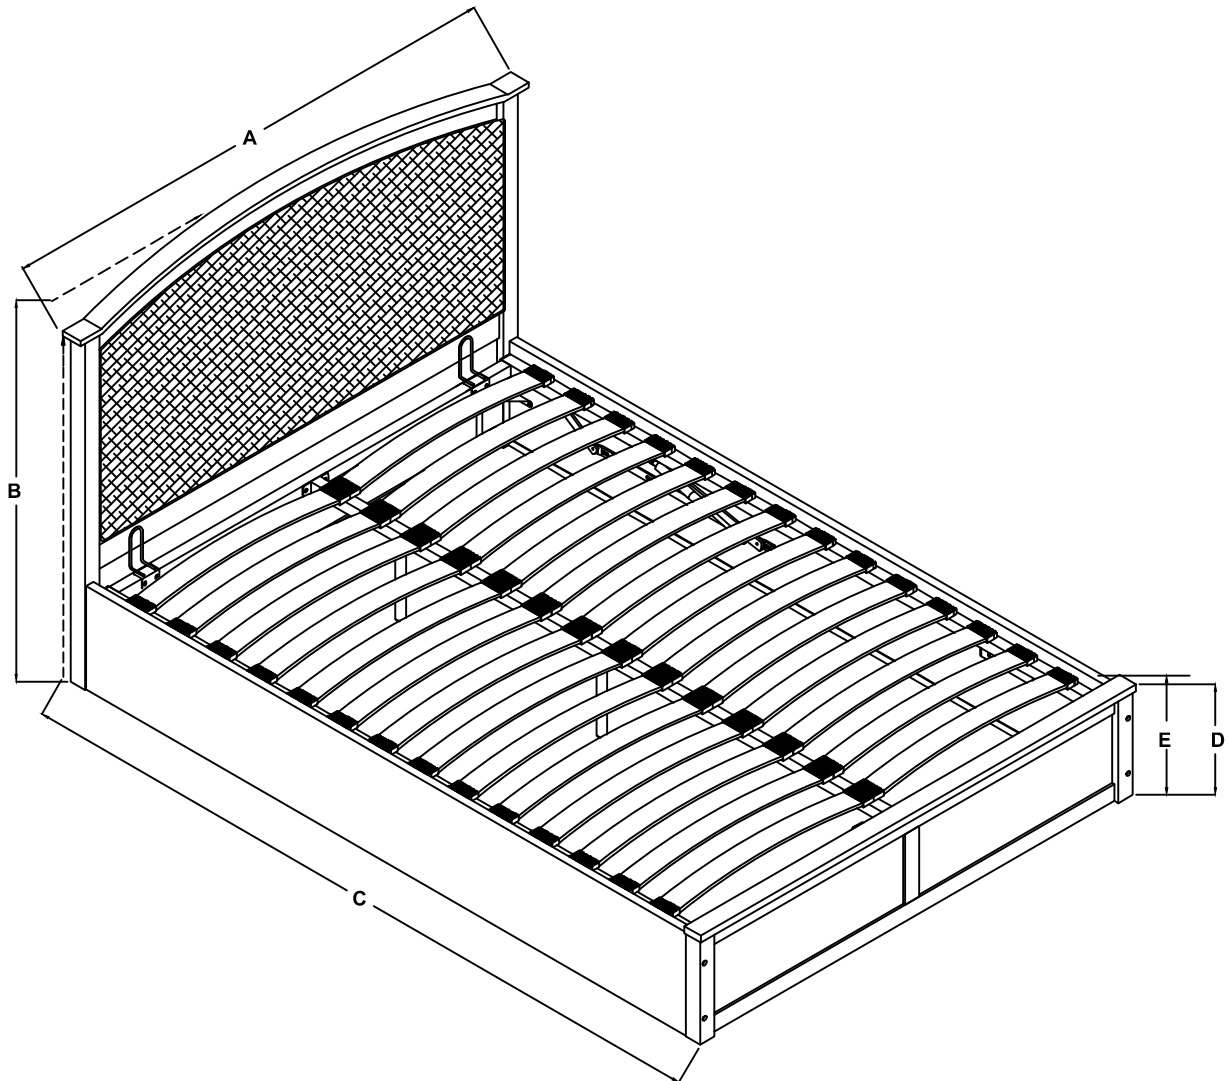
# MADRID OTTOMAN BED 135CM

## ASSEMBLY INSTRUCTIONS

### OVERALL DIMENSIONS COMMENTS:

Bed Dimensions Template:

- A - Bed Width - 1500mm
- B - Bed Height - 1140mm
- C - Bed Depth - 2042mm
- D - Footboard Height - 318mm
- E - Slat Height - 300mm  
(Floor to the top of the slat)

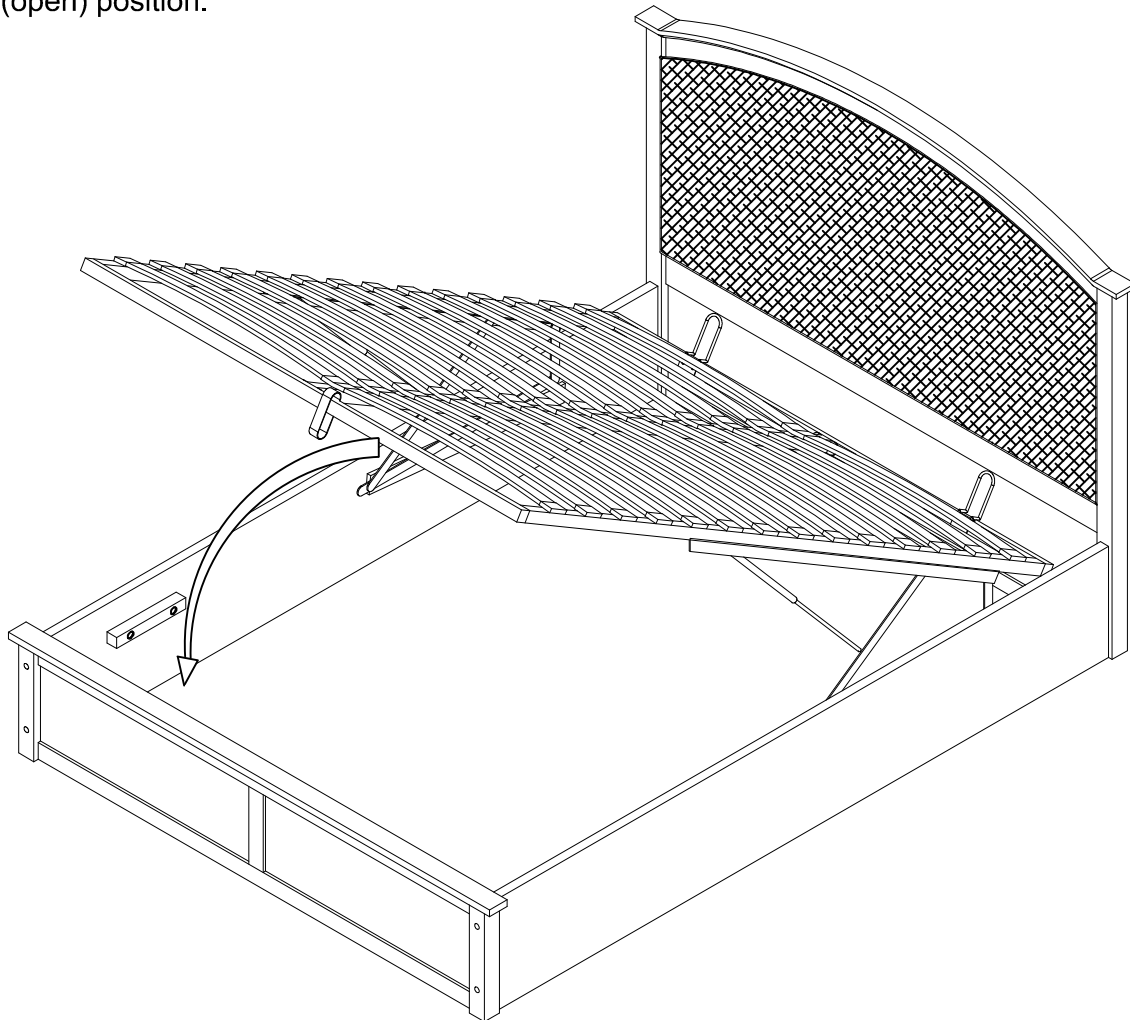


# MADRID OTTOMAN BED 135CM

## ASSEMBLY INSTRUCTIONS

### Complete Assembly

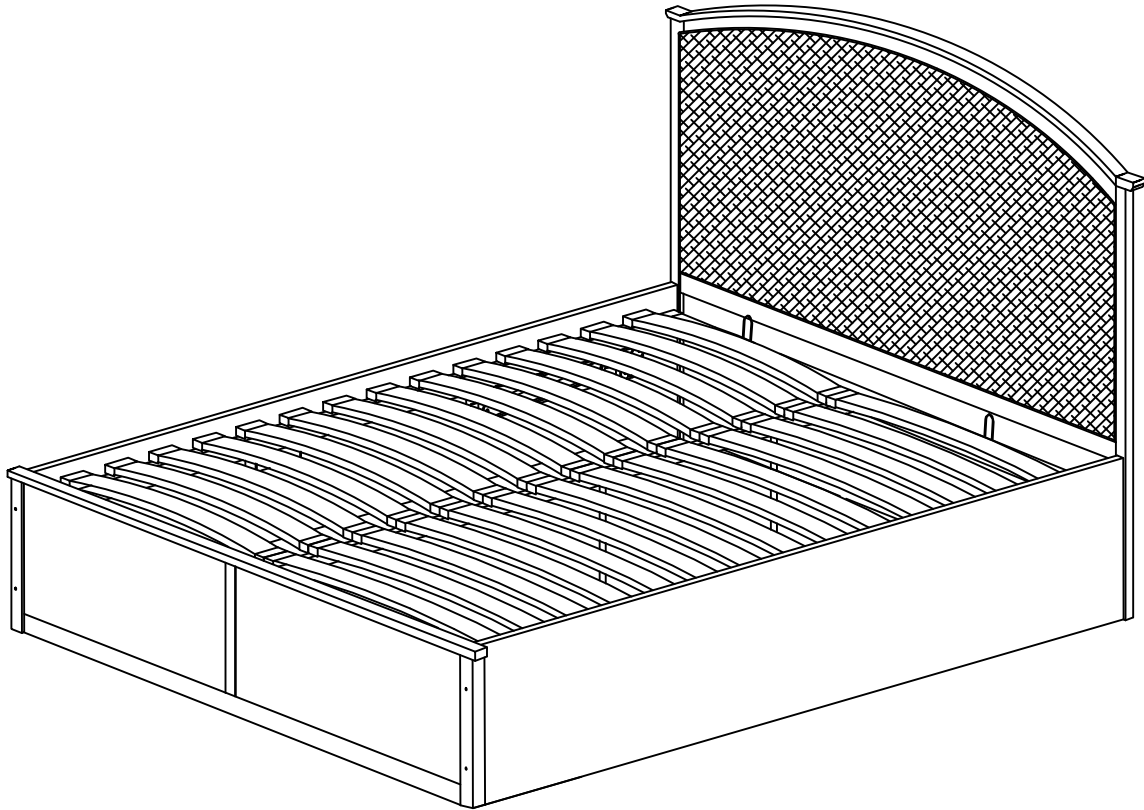
Your bed frame is now completely assembled but the ottoman will not operate correctly unless a mattress is placed on the slat frame and will not stay shut unless the mattress remains in position. To position the mattress on the slat frame, simply place the mattress on top of the slate frame whilst it is in the up (open) position.



Lift with the strap (H12) and close with the strap. The strap should always be accessible. Take care not to lean over the bed when lifting, if the mattress is thin and light, the frame may rise quickly. The speed of closing will also depend on the weight of the mattress so always keep fingers well clear of the metal frame.

**PLEASE NOTE - It take a lot of force to make the initial movement of the ottoman - THIS IS A DESIGN FEATURE OF THE PRODUCT SO THAT IT DOES NOT FALL SHUT - and the nearer to being closed the ottoman is, the easier it is to move. When the ottoman is almost shut, it will close completely under its own weight.**

# MADRID OTTOMAN BED 135CM ASSEMBLY INSTRUCTIONS



Periodically check to ensure that the components are in their proper position, free from damage. Also, make sure the end of connectors are tight and secure.

**Keep instructions for future reference**