


# CHARLES 4 DOOR 2 DRAWER WARDROBE

## ASSEMBLY INSTRUCTIONS

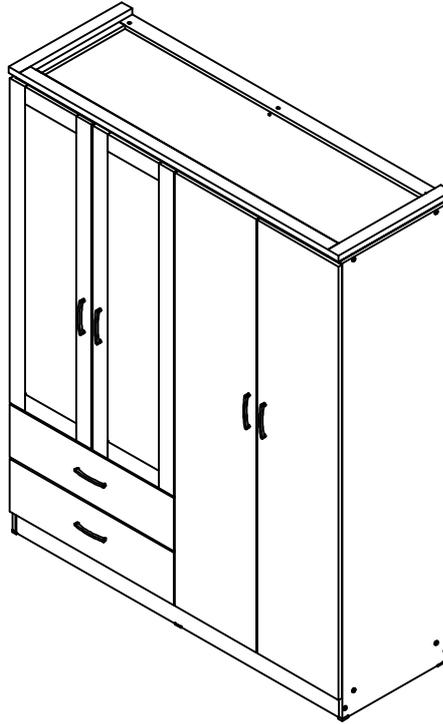

### IMPORTANT

#### FOR DOMESTIC USE ONLY

#### PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.


ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE. DO NOT OVERTIGHTEN FIXING.





FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET) DO NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.

THE SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

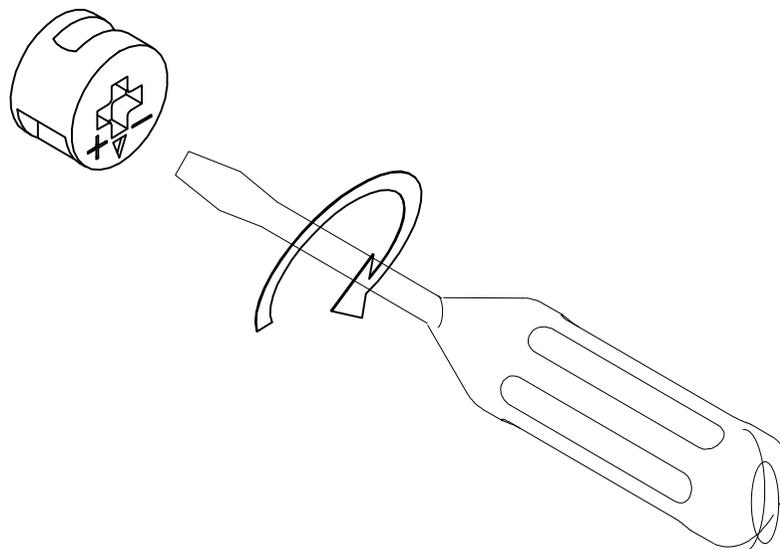

( SCREWDRIVER NOT PROVIDED )

USE A FLAT HEAD SCREWDRIVER TO TIGHTEN THE CAM NUTS. A QUARTER TURN CLOCKWISE IS ALL THAT IS NEEDED.

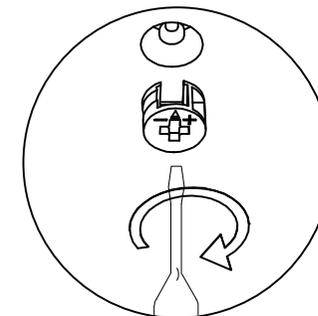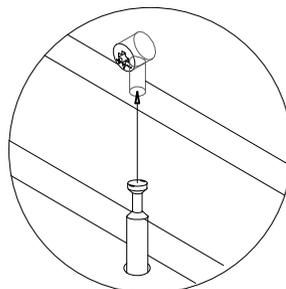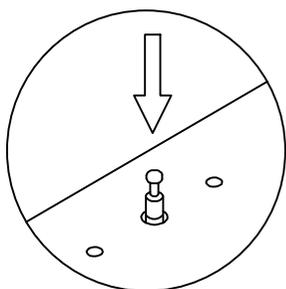


STEP 1 - PUSH CAM BOLT INTO INSERT

STEP 2 - ALIGN THE CAM BOLT WITH THE HOLE AND PUSH TOGETHER UNTIL FLUSH. ( MAKE SURE THE ARROW OF CAM LOCK IS POINTING TOWARD THE HOLE ON EDGE OF PANEL. )


STEP 3 - THE HEAD OF THE BOLT GOES INTO THE WIDE MOUTH OF THE CAM LOCK. YOU THEN TURN THE LOCK SO THE NARROW PART CLOSES OVER THE BOLT.

**! CAUTION :** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE. ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

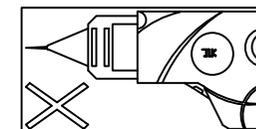

### PARTS LIST


PLEASE CHECK THAT YOU HAVE ALL THE PARTS LISTED BEFORE YOU START ASSEMBLING. IF YOU DO FIND THAT SOMETHING IS MISSING, DO NOT CONTINUE ASSEMBLY, PLEASE CONTACT YOUR SUPPLIER IMMEDIATELY.

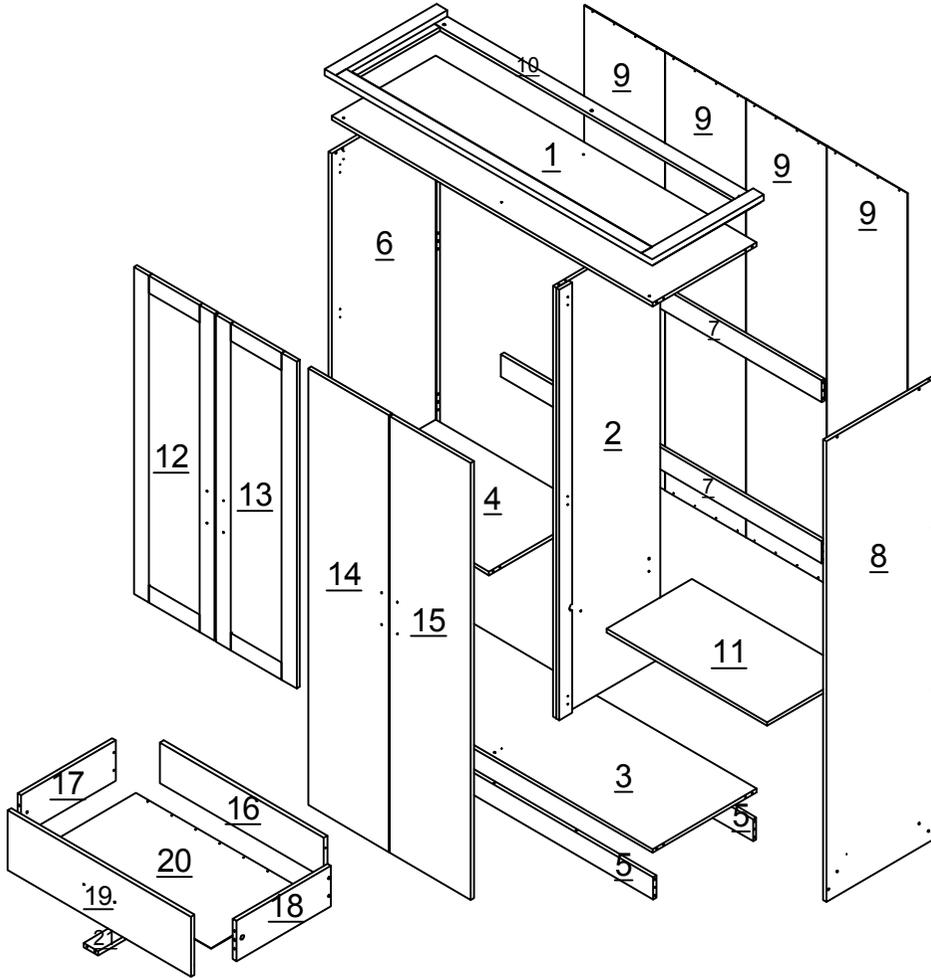




### PARTS LIST


1	TOP PANEL	1 PC
2	INNER PANEL	1 PC
3	BASE PANEL	1 PC
4	MIDDLE SHELF	1 PC
5	LOWER BASE CROSSBAR	2 PCS
6	LEFT SIDE PANEL	1 PC
7	BACK CROSSBAR	2 PCS
8	RIGHT SIDE PANEL	1 PC
9	BACK PANEL	4 PCS
10	TOP FRAME	1 PC
11	SHELF PANEL	1 PC
12	DOOR WITH MIRROR 1	1 PC
13	DOOR WITH MIRROR 2	1 PC
14	DOOR PANEL 1	1 PC
15	DOOR PANEL 2	1 PC
16	DRAWER BACK	2 PCS
17	DRAWER SIDE - LEFT	2 PCS
18	DRAWER SIDE - RIGHT	2 PCS
19	DRAWER FRONT	2 PCS
20	DRAWER BASE	2 PCS
21	DRAWER BOTTOM SUPPORT RAIL	2 PCS

**! CAUTION :** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE. ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

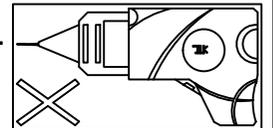


## HARDWARE LIST

A		DOWEL 6 X 30MM	52 PCS
B		BOLT M6 X 50MM	20 PCS
C		SCREW M3.5 X 16MM	42 PCS
D		TACK	46 PCS
E		SCREW M4 X 38MM	8 PCS
F		HANDLE	6 PCS
G		TAPPING SCREW 8 X 12MM	24 PCS
H		HANGING RAIL SUPPORT	4 PCS
I		HANGING RAIL (L & R)	2 PCS
J		PLASTIC H STRIP	3 PCS
K		SHELF SUPPORT	4 PCS
L		HINGES	12 PCS
M		DRAWER RUNNER A	4 PCS

N		DRAWER RUNNER B	4 PCS
O		HANDLE SCREW 4 X 30MM	12 PCS
P		SCREW 4 X 25MM	7 PCS
Q		SCREW M3.5 X 12MM	24 PCS
R		PVC LEG	4 PCS
S		PVC LEG	1 SET
T		ALLEN KEY	1 PC
U		SCREW M4 X 30MM	4 PCS
V		SCREW M4 X 50MM	4 PCS
W		CAM BOLT + CAM NUT	4 SETS
X		SCREW M4 X 16MM	2 PCS
Y		ANTI - TIP STRAP	2 PCS


**!** **CAUTION:** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE. ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

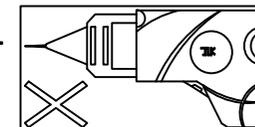

# STEP 1


## YOU WILL NEED:-

A		4 PCS
H		4 PCS
M		4 PCS
Q		24 PCS

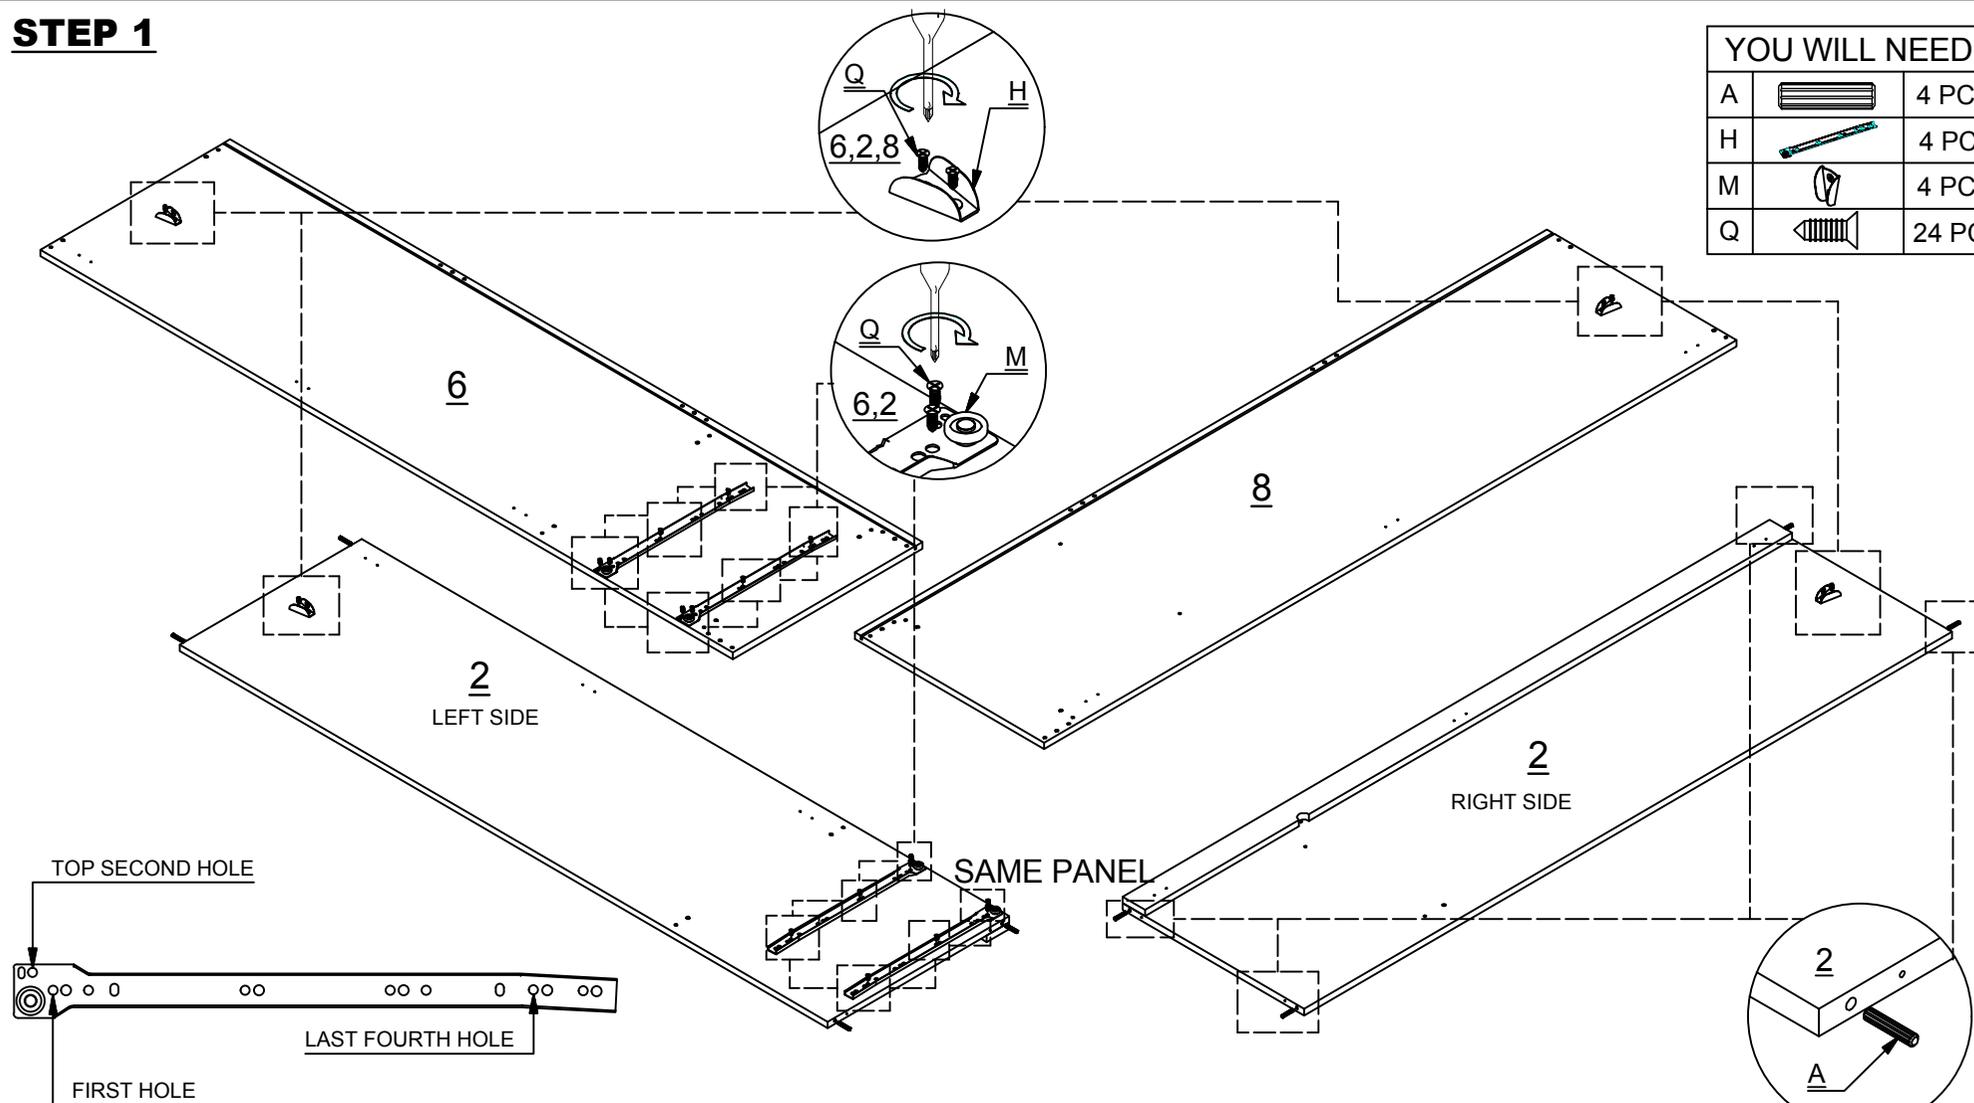

**SCREW MUST BE INSERTED IN THE FIRST HOLE ON THE DRAWER RUNNER**


**! CAUTION:** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

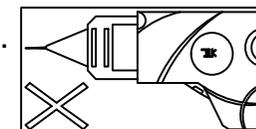

**STEP 2**

YOU WILL NEED:-


A		36 PCS
---	---	--------

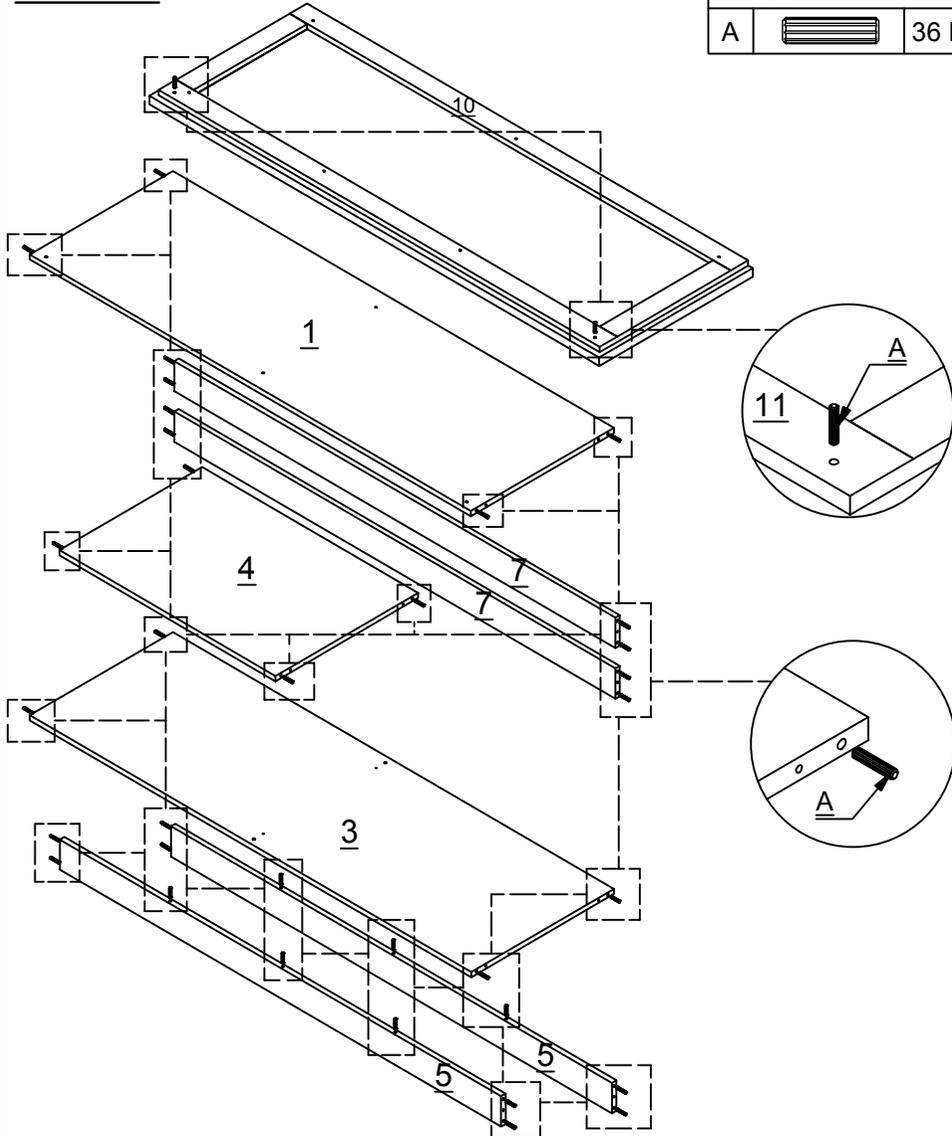


**STEP 3**

YOU WILL NEED:-

C		24 PCS
F		4 PCS
L		12 PCS
O		8 PCS

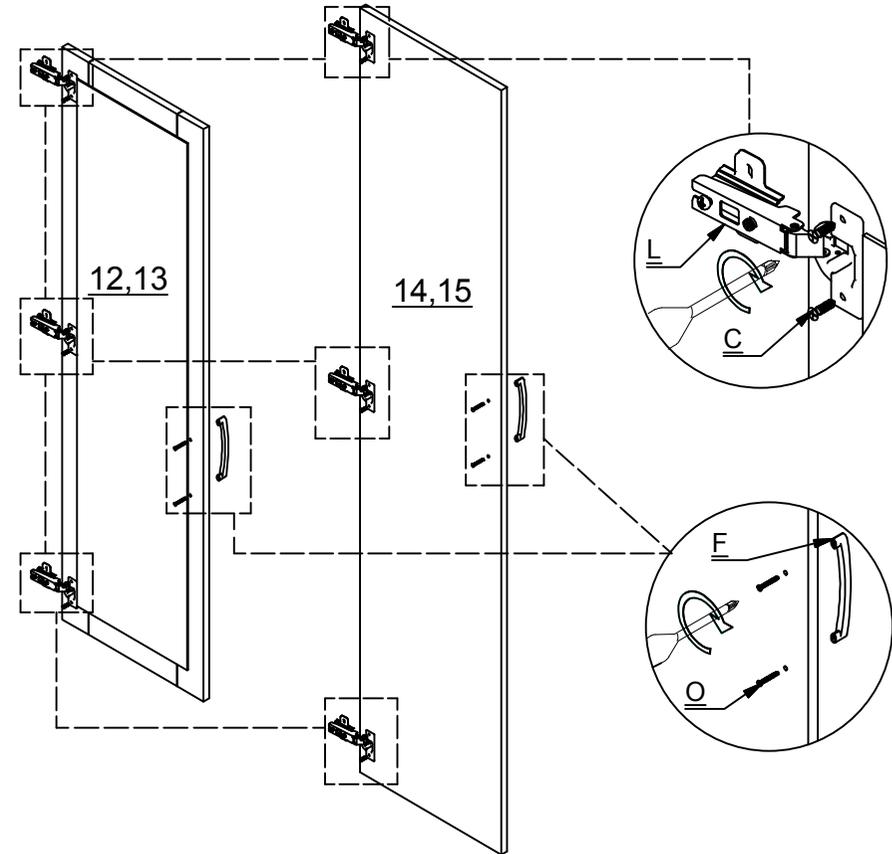


**! CAUTION:** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




**STEP 4** BACK SIDE VIEW

YOU WILL NEED:-		
V		4 PCS

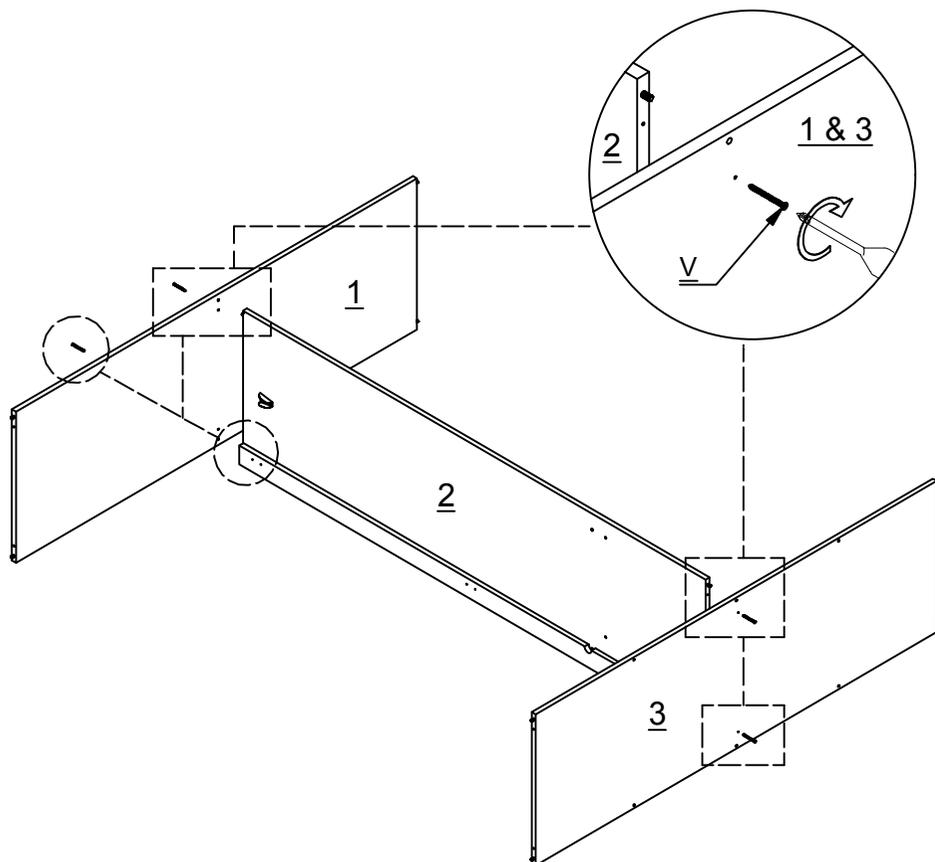


**STEP 5**

YOU WILL NEED:-		
B		2 PCS
T		1 PC

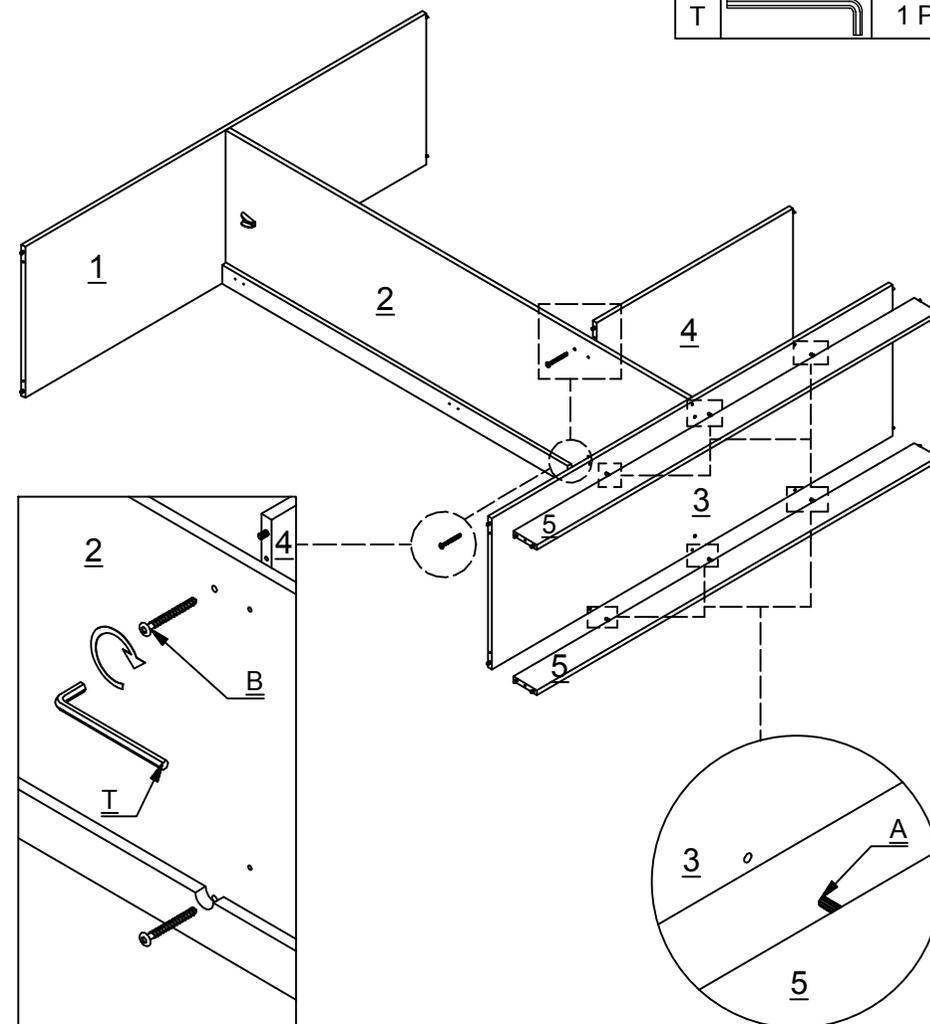





**! CAUTION:** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

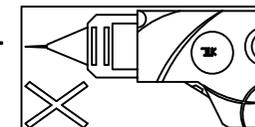

### STEP 6


YOU WILL NEED:-



B		10 PCS
T		1 PC

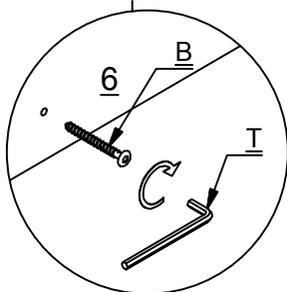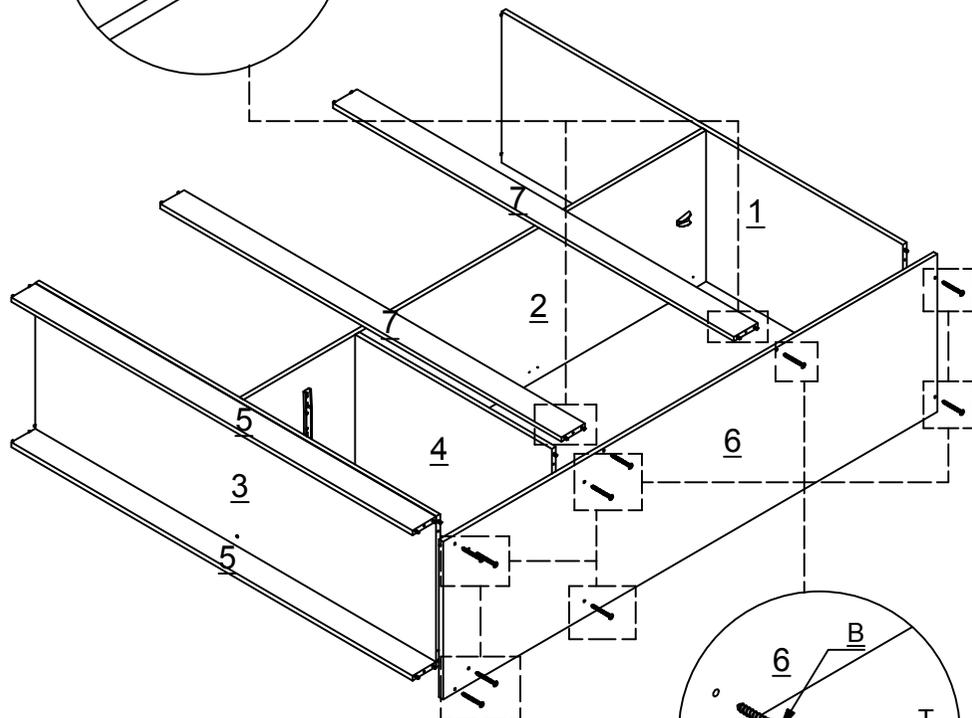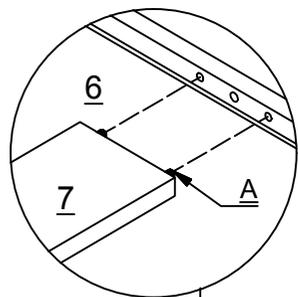


### STEP 7

YOU WILL NEED:-


B		8 PCS
T		1 PC

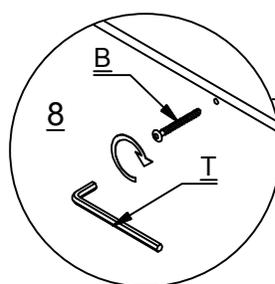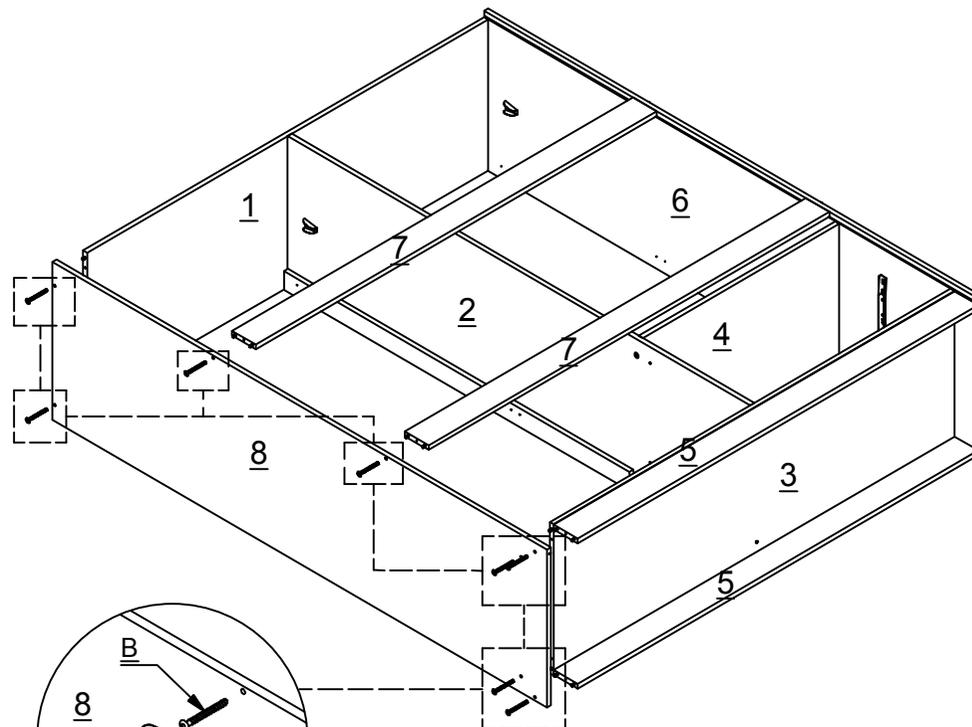

**!** **CAUTION:** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

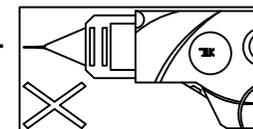


### STEP 8

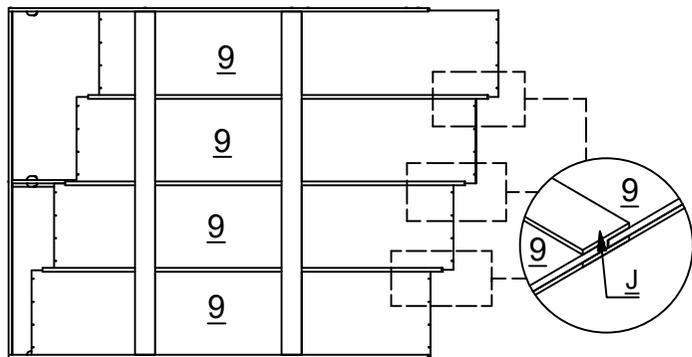


**YOU WILL NEED:-**

C		6 PCS
D		32 PCS
J		3 PCS
R		4 PCS
S		1 SET

PLEASE INSERT THE BACK PANEL IN THE UNIT

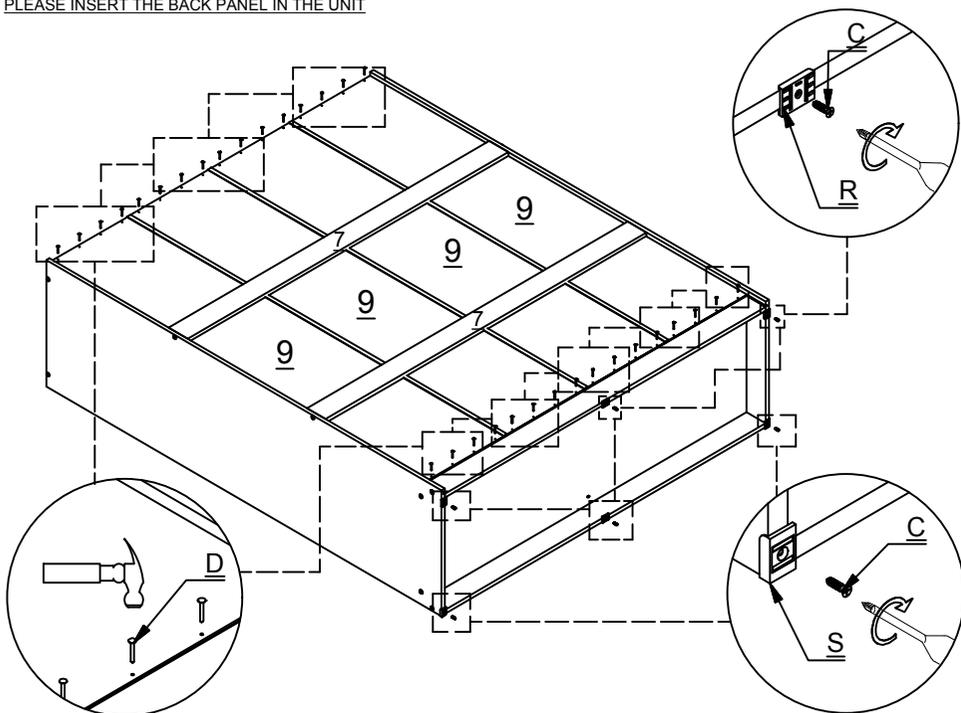


### STEP 9

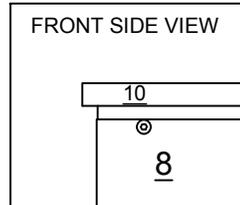

BEFORE FIXING THE TOP PANEL PLEASE ALIGN THE TOP PANEL WITH THE INNER TOP PANEL.


**YOU WILL NEED:-**

P		7 PCS
---	--	-------

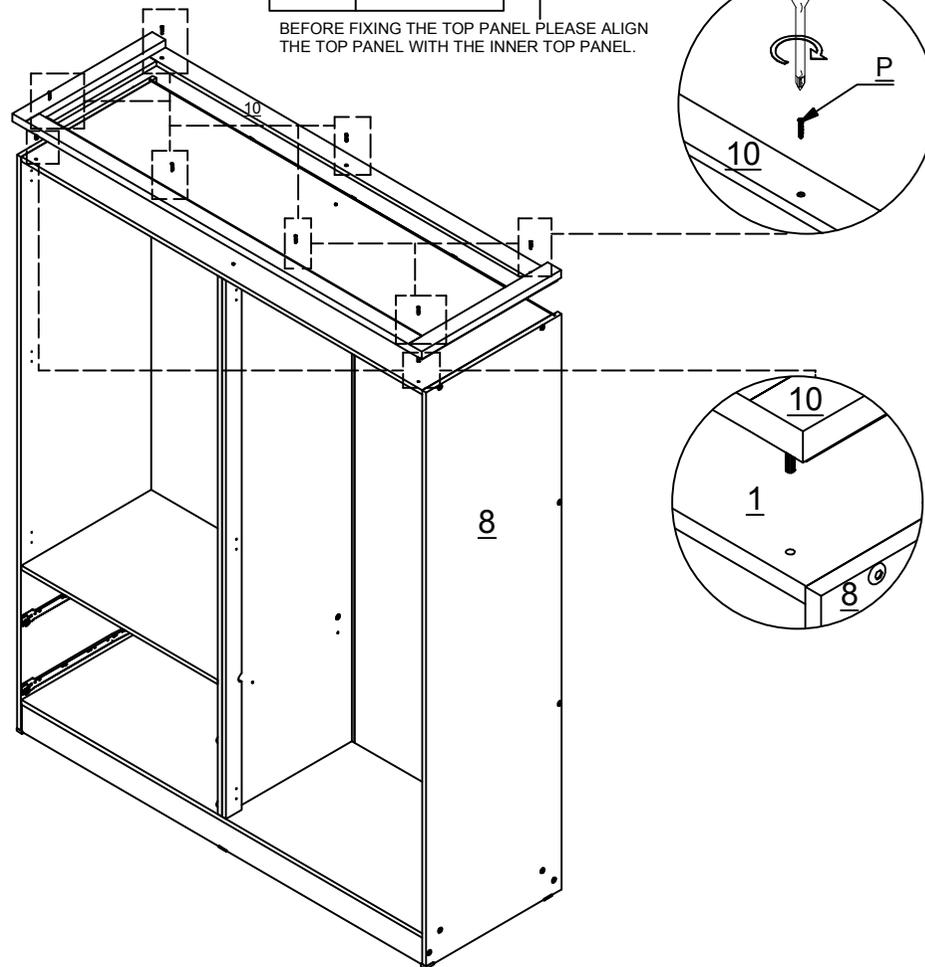


**!** **CAUTION:** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE. ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.


**STEP 10.1**

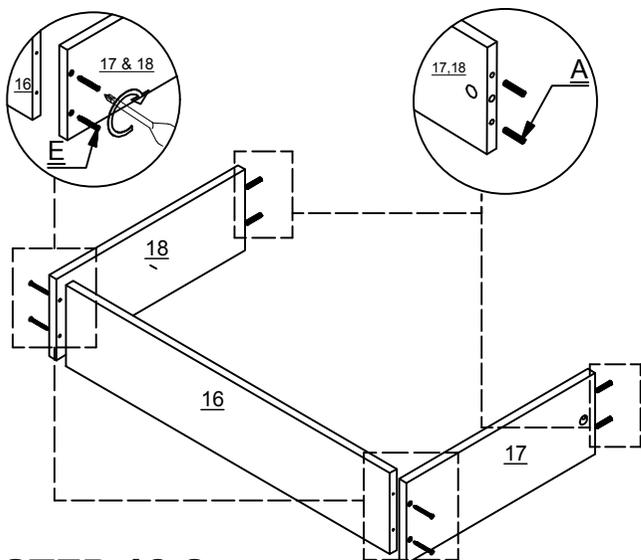

**STEP 10.2**

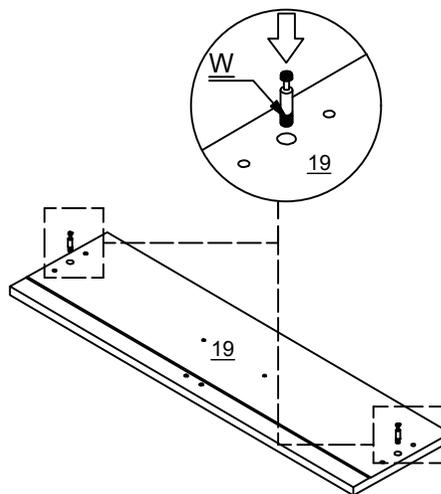


**BIG DRAWER X 2**

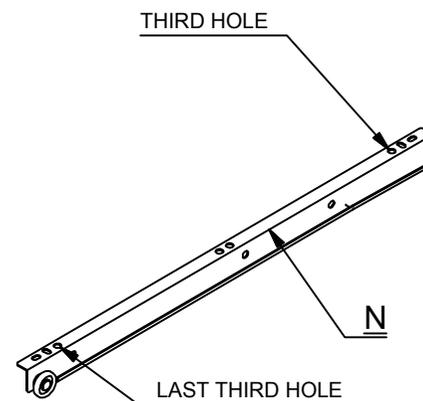


**YOU WILL NEED:-**

<b>A</b>		12 PCS
<b>C</b>		12 PCS
<b>D</b>		14 PCS
<b>E</b>		8 PCS
<b>F</b>		2 PCS
<b>N</b>		4 PCS
<b>O</b>		4 PCS
<b>U</b>		4 PCS
<b>W</b>		4 SETS


**STEP 10.3**

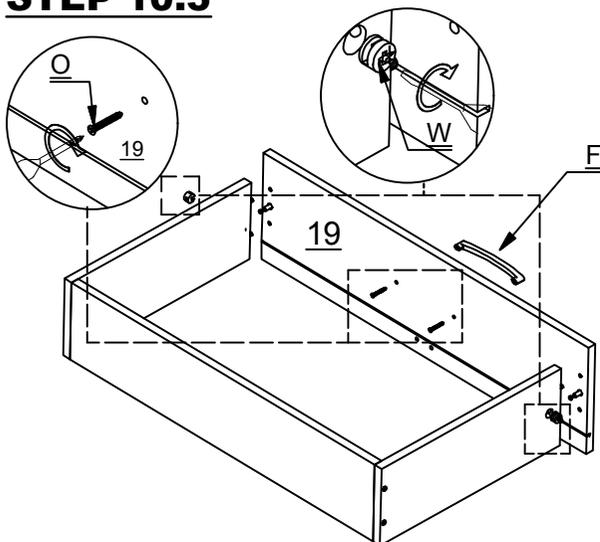


**STEP 10.4**

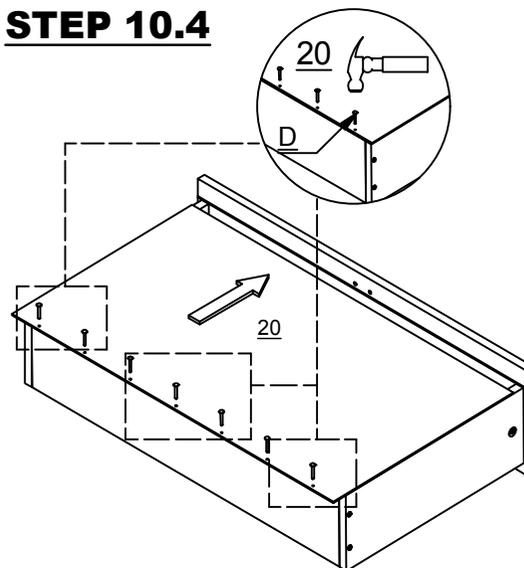


**STEP 10.5**



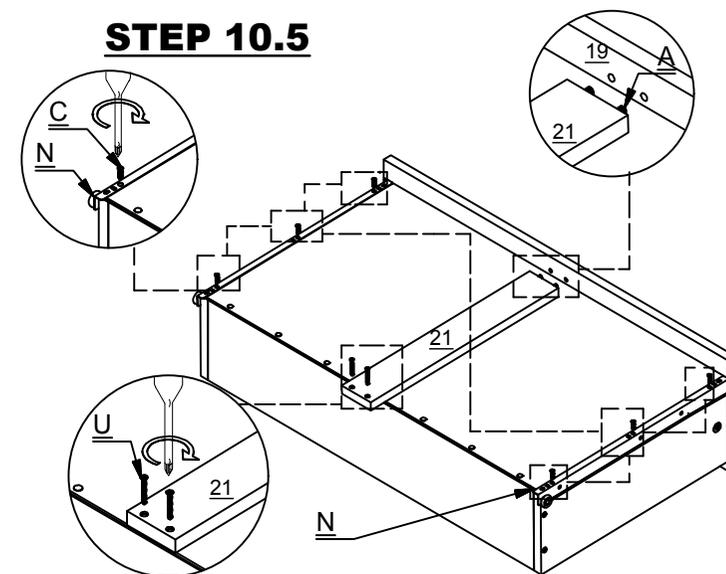


**!** **CAUTION:** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE. ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




**STEP 11**


YOU WILL NEED:-		
I		2 PCS
G		24 PCS

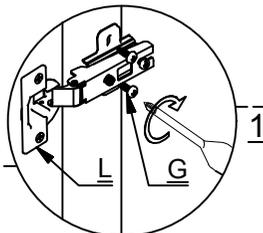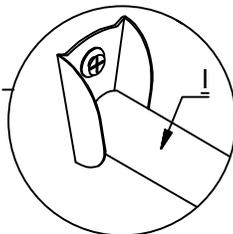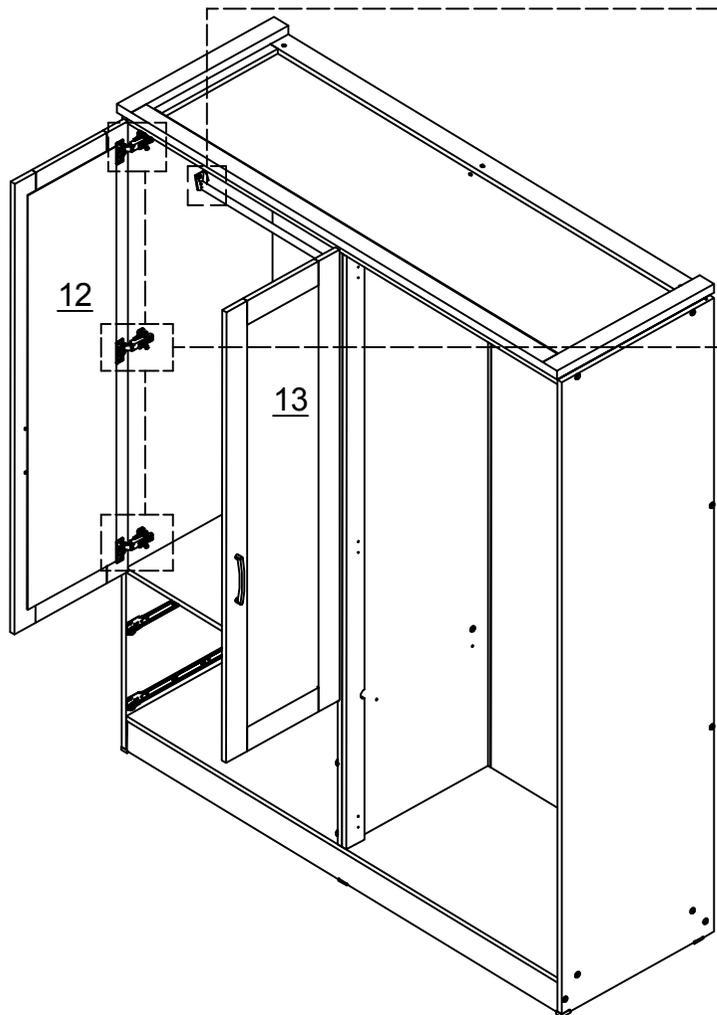

1. VERTICAL ADJUSTMENT VIA SLOT IN TH MOUNTING PLATE

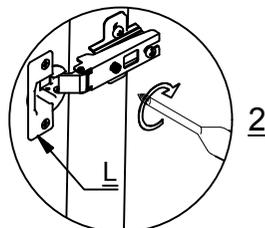


2. LATERAL ADJUSTMENT BY SCREW ADJUSTING

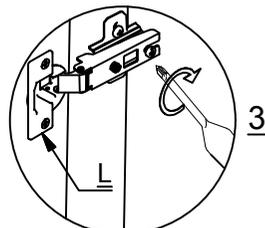


3. FRONT-TO-BACK BY THE HINGE ARM MOUNTING SCREW

YOU SHOULD RE-ADJUST SCREWS AS SHOWN ABOVE TO ALIGN DOOR ONCE HINGES HAVE BEEN ATTACHED


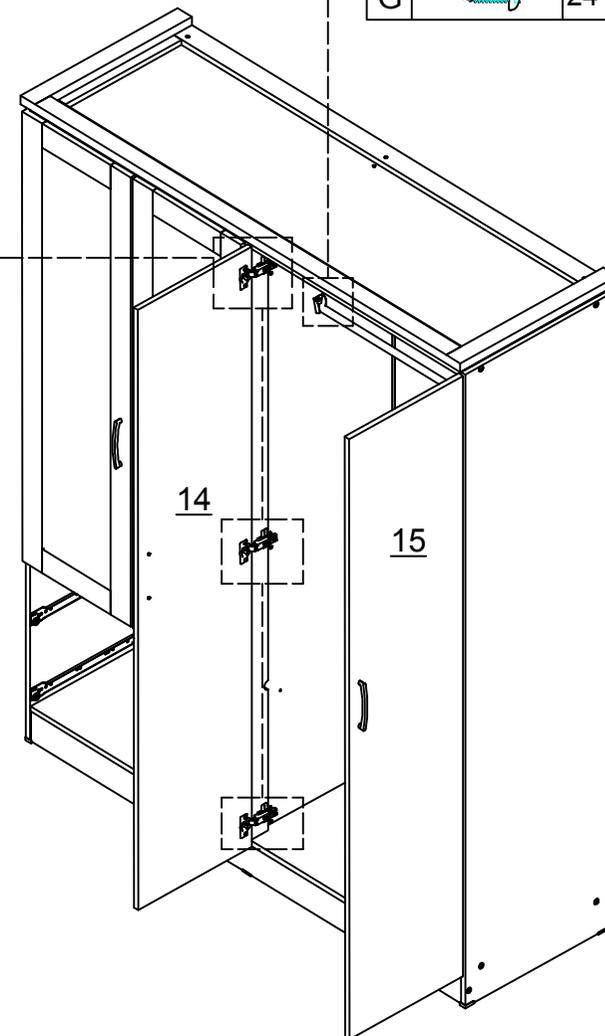


**!** **CAUTION:** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE. ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




**STEP 12**

YOU WILL NEED:-  
K  4 PCS

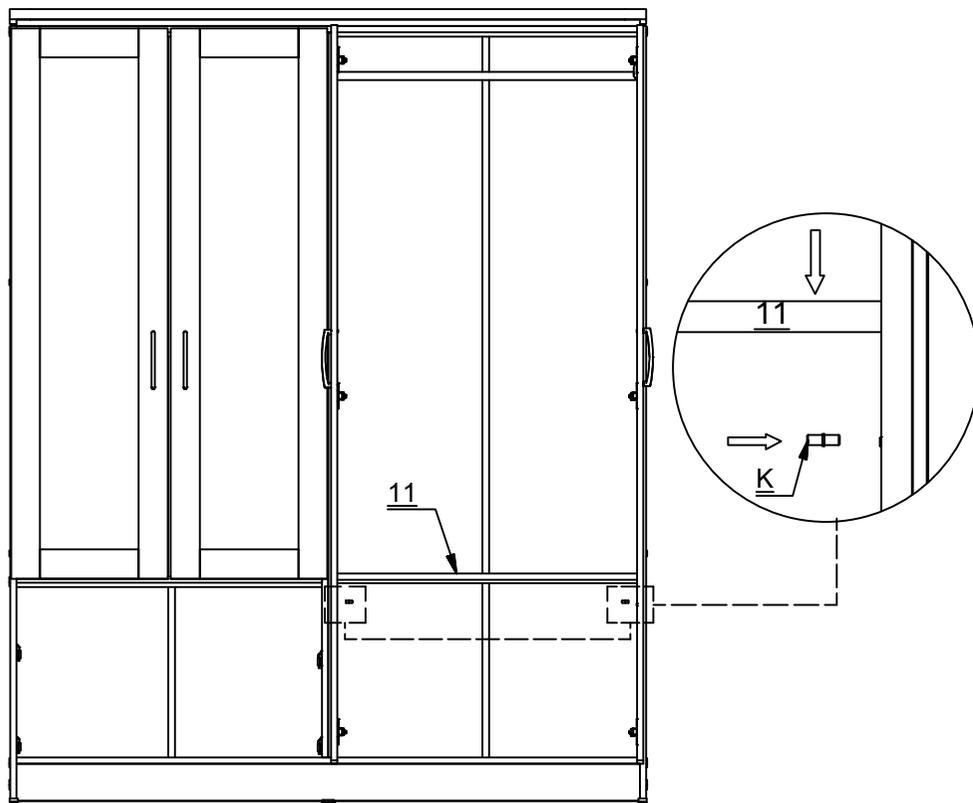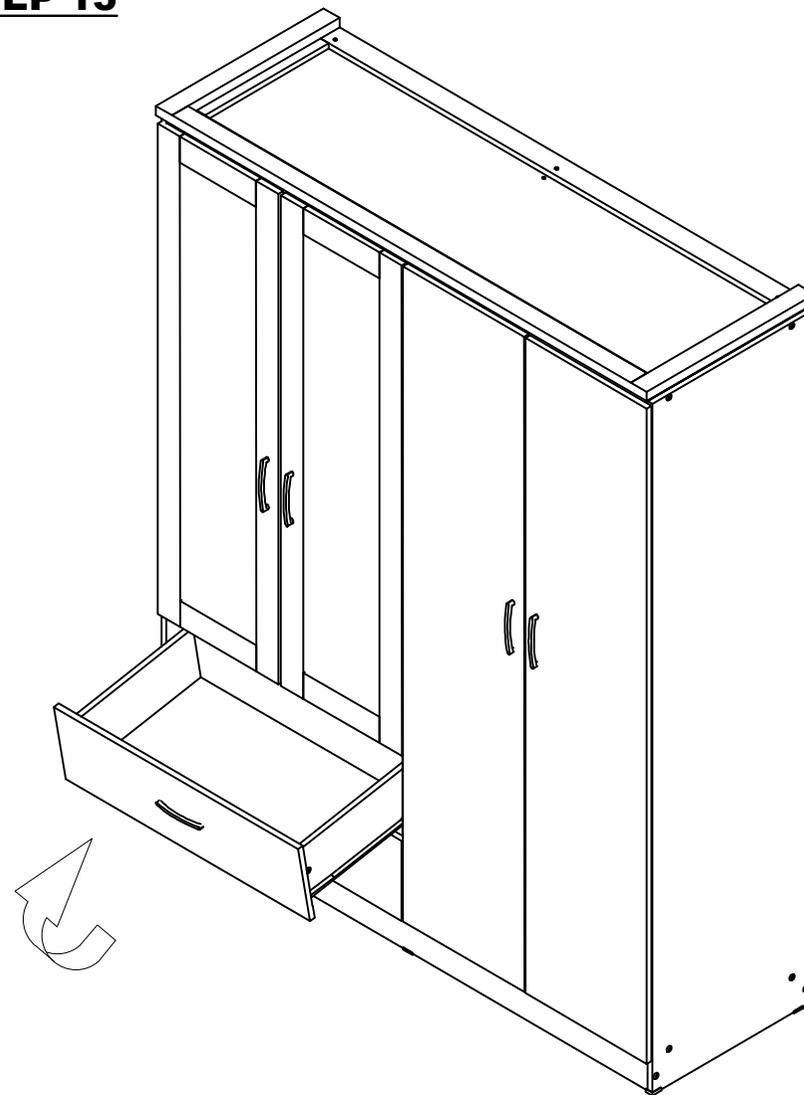**STEP 13**

**!** **CAUTION:** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.



## WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. Please make sure you use fixings suitable for the walls in your home.




### HARDWARE LIST



( Y ) Anti-Tip Strap - 2 pcs



( X ) M4 X 16MM - 2 pcs

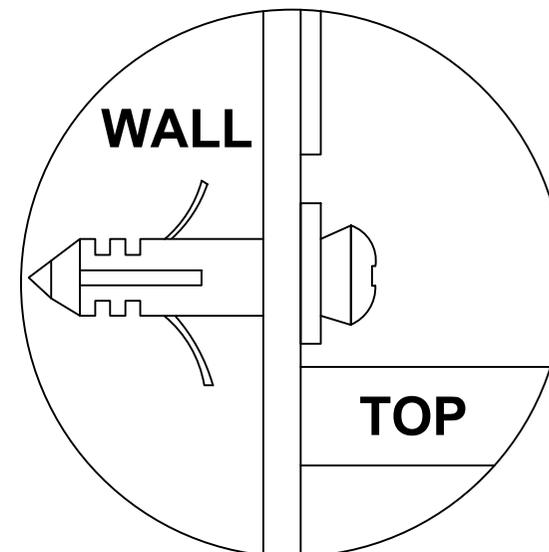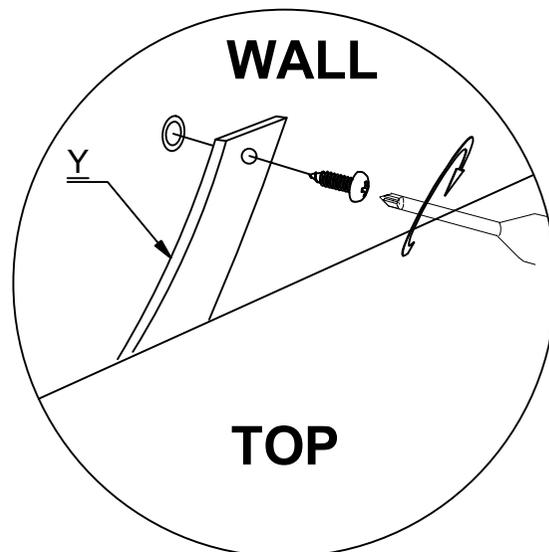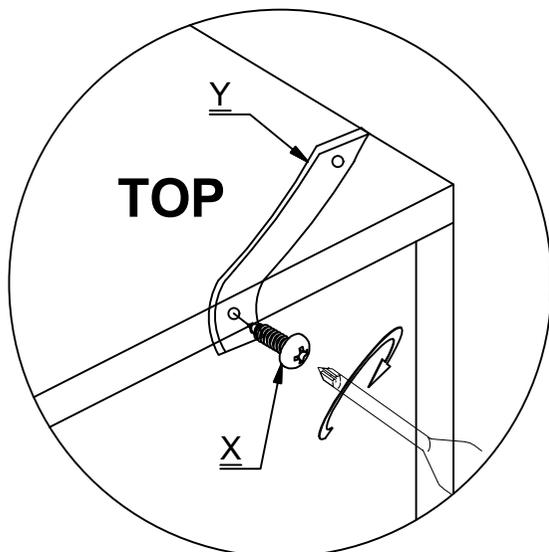

**!** **CAUTION:** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

