



* KINDLY CHECK ALL THE FITTING BEFORE START ASSEMBLY

CITY BLOCK SINGLE BED

Assembly instruction



Step 1

Assembly Side Rail with M6 x 20 JCBB Screw.

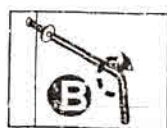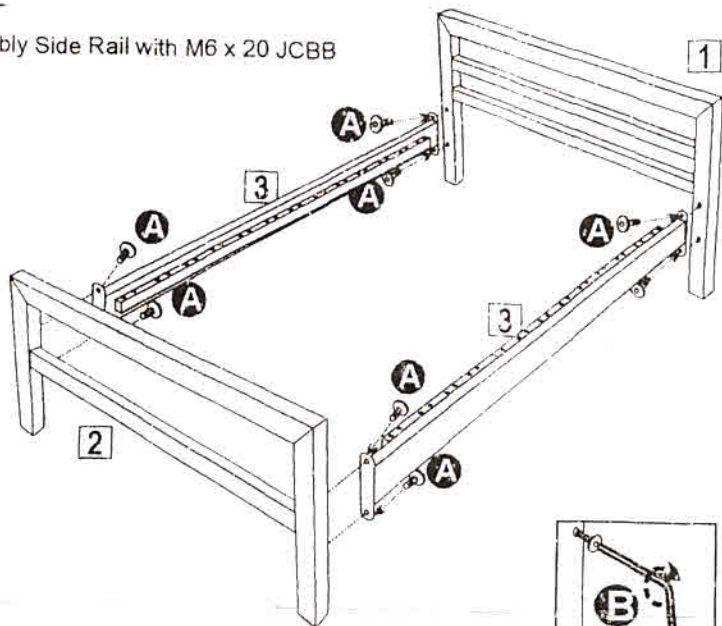




Tighten all the screw with Allen Key.

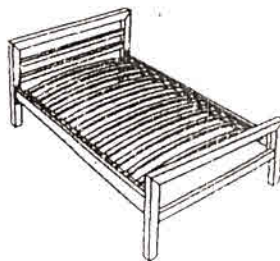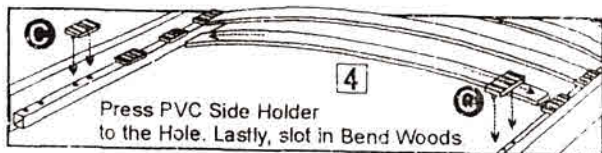Step 2



HARDWARE LIST

- A** M6 X 20 JCBB SCREW
- B** M4 ALLEN KEY
- C** PVC SIDE HOLDER

-  8 pcs
-  1 pcs
-  24 pcs

PART LIST

- 1** HEADBOARD METAL PANEL 1 pcs
- 2** FOOTBOARD METAL PANEL 1 pcs
- 3** SIDE RAIL 2 pcs
- 4** BEND WOOD 12 pcs