MODEL :METAL POST / SPRUNG WOOD BED BASE
SIZE :SMALL DOUBLE / DOUBLE / QUEEN / KING SINGLE / KING BED

ASSEMBLY INSTRUCTION

Part List

HEAD BOARD	FOOT BOARD	SIDE RAIL	CROSS RAIL	CENTRE RAIL	SUPPORT LEG	SPRUNG WOOD
1pc	1 pc	2 pcs	3 pcs	1 pc	3 pcs	24pcs

Hardware

SINGLE CONNECTOR	DOUBLE CONNECTOR	M6 X 50mm	M6 X 40mm	M6 X 20mm	PLASTIC WASHER	FLAT WASHER	M6 LOCK NUT	SPANNER	ALLEN KEY M4
24pcs	12 pcs	3 pcs	11 pcs	8 pcs	8 pcs	14 pcs	14 pcs	1 pc	1 pc

Step 1

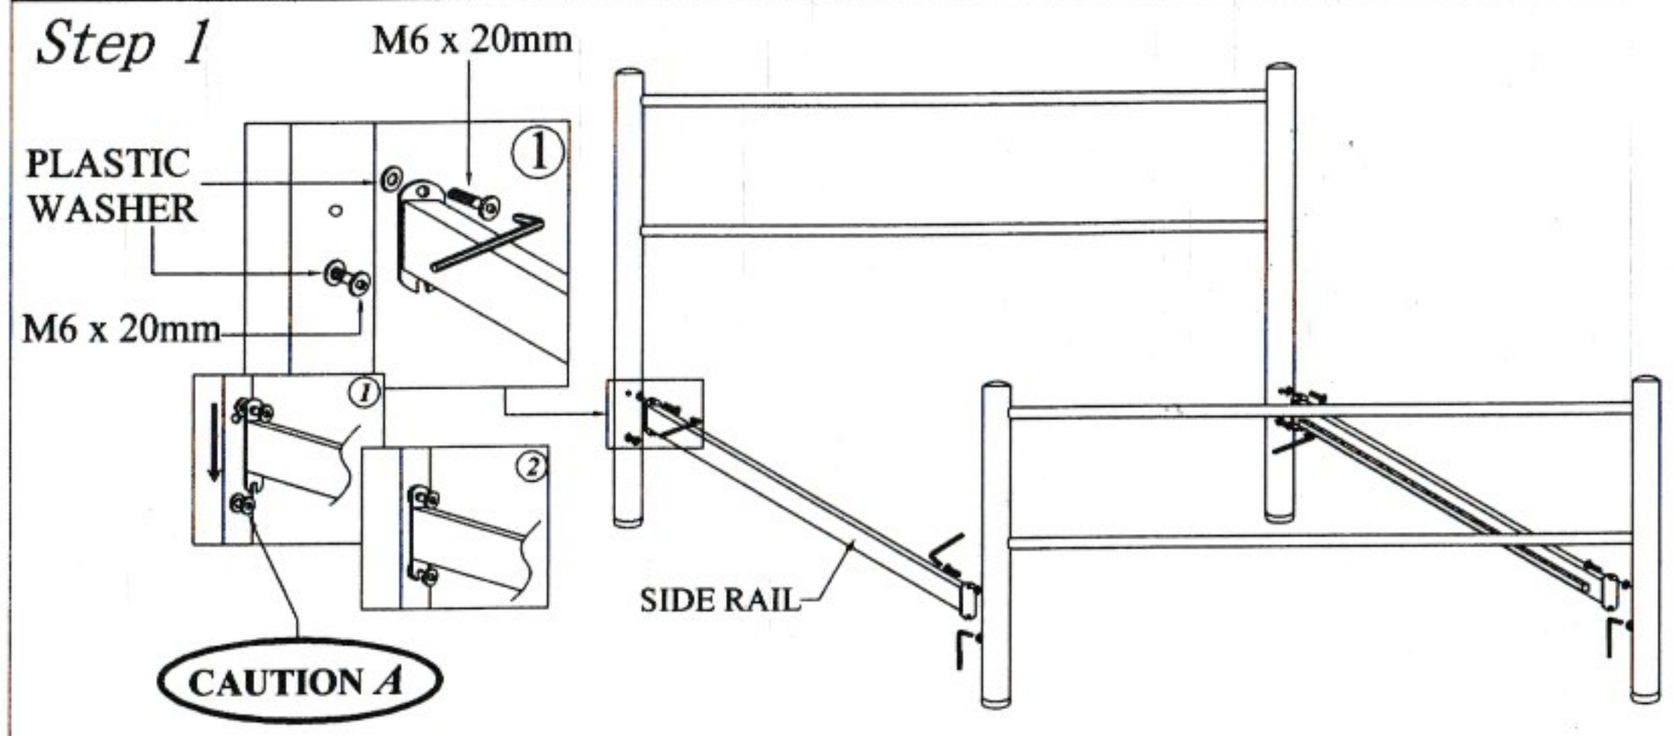

Step 2

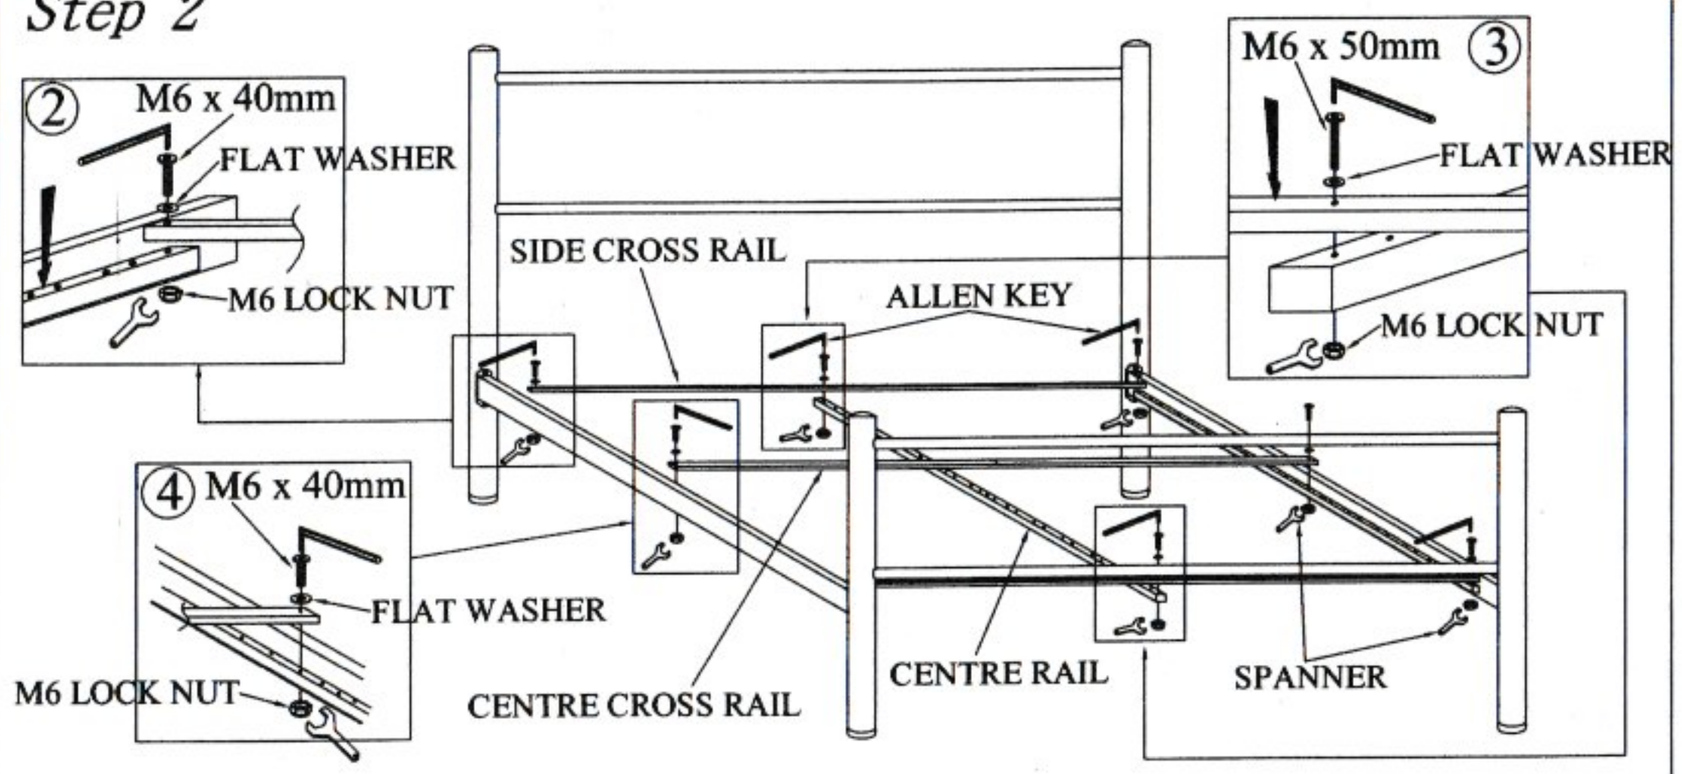

Step 3

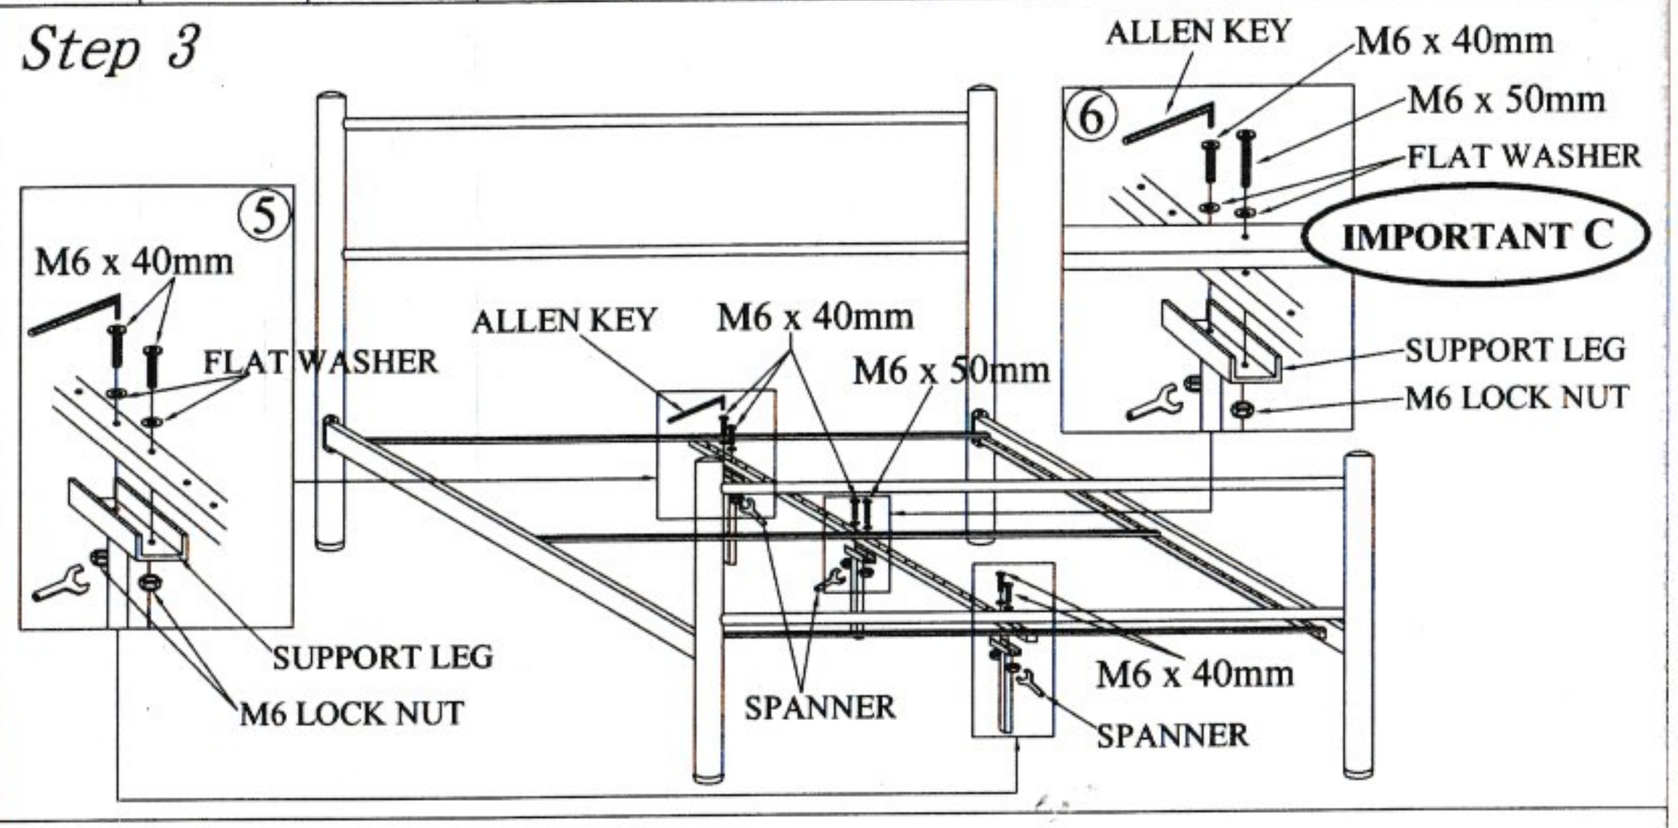

Step 4

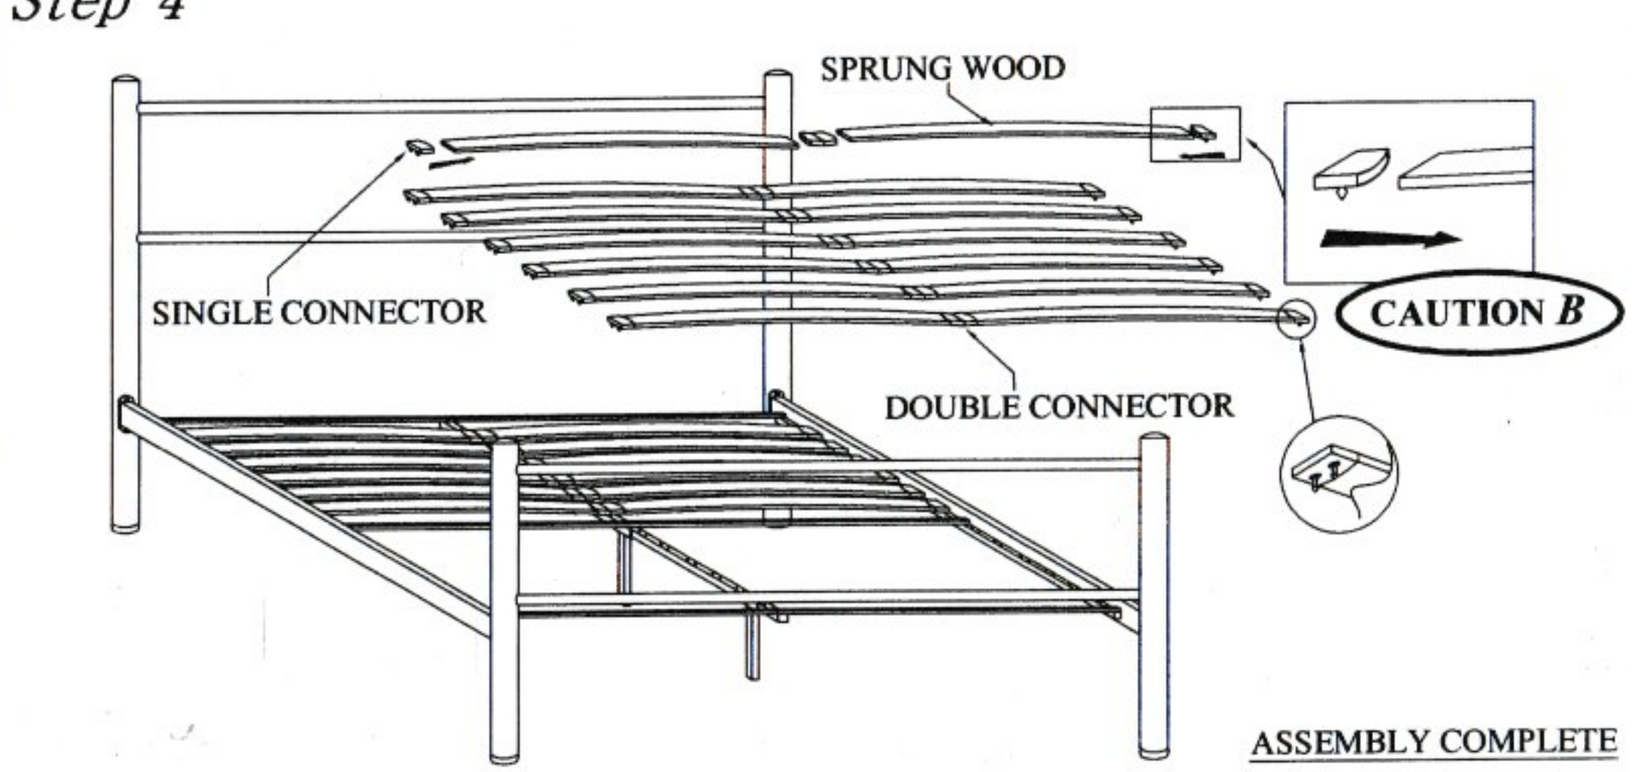

ASSEMBLY COMPLETE

A ***CAUTION!***
Do not tight screw, left around 5mm before completely assembled.

B ***CAUTION!***
Make sure sprung wood is fully push tightly into single connector, if not by slowly knock single connector until tight into sprung wood.

C ***IMPORTANT!***
- *Make sure support leg is straight when screw is fully tighten, if not please do adjustment
- *When move the bed make sure the bed is fully lifted, if not the support will not be straight

IMPORTANT!
- *Tighten all screw and complete product as shown*
- *"Ensure cross rails are located in the side rails before placing the mattress on the bed frame"*